



Rider's Manual
2010

 
 


For your nearest Victory dealer, call 1-800-POLARIS
or visit www.polarisindustries.com
Polaris Sales Inc.,
2100 Hwy. 55, Medina, MN 55340
Phone 1-888-704-5290
Part No. 9922441 Rev 01
Printed in USA



California Proposition 65 Warning

This product contains or emits
chemicals known to the state of
California to cause cancer and birth
defects or other reproductive harm.





The text is printed on 100% recycled
with 40% post-consumer waste (PCW).



2010 RIDER'S MANUAL

Victory Vision[®] Victory Vision 8-Ball[™]

P/N 9922441
©2009 Polaris Sales Inc. All Rights Reserved.
Printed in U.S.A.

Introduction

General Information

All information contained within this publication is based on the latest product information available at the time of publication. Product improvements or other changes may result in differences between this manual and the motorcycle. Depictions and/or procedures in this publication are intended for reference use only.

No liability can be accepted for omissions or inaccuracies. Polaris Industries reserves the right to make changes at any time, without notice and without incurring obligation to make the same or similar changes to motorcycles previously built. Any reprinting or reuse of the depictions and/or procedures contained within, whether whole or in part, is expressly prohibited.

All reference to RIGHT, LEFT, FRONT, REAR are from the operator's perspective seated in a normal riding position.

Features of VICTORY Motorcycles are covered by U.S. Patent Nos: 6,976,691; 6,407,663; D489670; D482311; D482304; D481980; D481973; D474142.

Introduction

Trademarks

The following are registered trademarks of Polaris Industries Inc.

POLARIS®

THE WAY OUT®

VICTORY MOTORCYCLES®

VICTORY VISION®

FREEDOM®

8-BALL™ is a trademark of Polaris Industries Inc.

DUNLOP® is a registered trademark of Dunlop Tire Corporation.

LOCTITE® is a registered trademark of Henkel Corporation.

XM Ready® is a registered trademark of XM® Satellite Radio Inc. All rights reserved.

iPod® is a registered trademark of Apple Inc.

Garmin® and zumo® are trademarks of Garmin Ltd. or its subsidiaries.

Introduction

⚠ WARNING

Failure to follow recommended precautions and procedures could result in severe injury or death. Always heed all safety precautions and follow all operation, inspection and maintenance procedures outlined in this manual.

Before You Ride

Read your Rider's Manual

This rider's manual contains information that is essential to safe riding and proper maintenance of your VICTORY VISION motorcycle. Anyone who uses the motorcycle (operators and passengers) must read the rider's manual before riding. Carefully read and understand the information found in the *Safety* section. Understand and follow the procedures outlined in the *Maintenance* section to keep your VICTORY motorcycle in top condition on the road or in storage. Bring the manual with you when you ride. Following the precautions and procedures in the manual will add to your enjoyment and help keep you riding safely. If you lose or damage this manual, you can purchase a new one through any authorized VICTORY dealer. The rider's manual should be considered part of the motorcycle and remain with it if sold.

Table of Contents

Introduction	2
Safety	7
Reporting Safety Defects	38
Component Identification	39
Instruments, Features & Controls	47
Pre-Ride Inspections	87
Operation	109
Maintenance	132
Cleaning and Storage	227
Warranty	245
Specifications	256

Table of Contents

Audio System	263
System Overview	263
System Operation	270
CB Radio / Intercom (ICOM)	288
AUX / iPod	300
XM Radio	307
NAV MP3	315
Index	318

Safety

Safety

Safety Symbols and Signal Words

The following signal words and symbols appear throughout this manual. Your safety and the safety of others is involved when these words and symbols are used. Become familiar with their meanings before reading the manual.



The safety alert symbol indicates a potential for personal injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE indicates a situation that may result in property damage.

Safety

Safe Riding Practices

WARNING! Improper use of this motorcycle can result in serious injury or death to you, your passenger and others. To minimize the risk of injury, read and understand the information contained in this section before operating the motorcycle. This section contains safety information specific to the VICTORY motorcycle, as well as information about general motorcycle safety. Anyone who rides the motorcycle (operators and passengers) must follow these safety precautions.

Motorcycling has inherent risks. You can minimize those risks, but you can't eliminate them completely. Even if you're an experienced motorcycle operator or passenger, read all of the safety information in this manual before operating the motorcycle.

Safety

Safe Riding Practices

- Your ability to safely operate the motorcycle depends on your judgment and your use of safe riding habits. Take a rider education course from the Motorcycle Safety Foundation or another qualified instructor. The course will help you develop or refresh your expertise in safe riding habits through instruction and riding. For information on Motorcycle Safety Foundation rider education courses in your area, call 1-800-446-9227 or visit their home page at <http://msf-usa.org>.
- Read and understand all information in this rider's manual. It contains safety information specific to individual components and operations.
- Pay close attention to the motorcycle maintenance requirements in this manual. For additional information or assistance with technical services specified in the manual or required by mechanical circumstances, see the *VICTORY Service Manual* or an authorized VICTORY Dealer.

Safety

Safety

Safe Riding Practices

Design characteristics affect how you should ride the VICTORY motorcycle:

- The motorcycle is designed for on-road use with one rider and one passenger. Do not exceed the Gross Vehicle Weight Rating. See the manufacturer's label (under the rear panel on the console). The label contains the Vehicle Identification Number (VIN) and Gross Vehicle Weight Rating (GVWR) and Gross Axle Weight Rating (GAWR) information.
- Riding off-road, riding with more than one passenger, or carrying weight exceeding the maximum weight rating can make handling difficult, which could cause loss of control.
- During the first 500 miles (800 km) of operation, follow all break-in procedures as outlined in the break-in section beginning on page 110. Failure to do so can result in serious engine damage.
- Some VICTORY motorcycles include saddlebags, a windshield, a trunk, or a passenger backrest as standard equipment. To maintain stability, be prepared to reduce the operating speed of motorcycles equipped with these items.

Safety

Safe Riding Practices

Follow these general safe riding practices:

- Before each ride, perform the pre-ride inspections as outlined beginning on page 87. Failure to do so may result in damage to the motorcycle or an accident.
- Until you're thoroughly familiar with the motorcycle and all of its controls, practice riding where there is little or no traffic. Practice riding at a moderate speed on various road surfaces and in different weather conditions.
- Know your skills and limits, and ride within them.
- Allow only licensed, experienced operators to ride your motorcycle, and then only after they have become familiar with its controls and operation. Make sure all riders read and understand this rider's manual before riding.

Safety

Safety

Safe Riding Practices

- Do not ride when you're fatigued or under the influence of alcohol, prescription drugs, over-the-counter drugs or any other drugs. Fatigue, alcohol and drugs can cause drowsiness, loss of coordination and loss of balance. They can also affect your awareness and judgment.
- If your motorcycle operates abnormally, correct the problem immediately. See the *VICTORY Service Manual* or an authorized VICTORY dealer.
- Ride defensively, as if you are invisible to other motorists, even in broad daylight. *A motorist's failure to see or recognize a motorcycle is the leading cause of automobile/motorcycle accidents.* Ride where you're clearly visible to other motorists, and observe their behavior carefully.

Safety

Safe Riding Practices

- Be especially cautious at intersections, as these are the most likely places for an accident.
- To prevent loss of control, keep your hands on the handlebars and your feet on the footrests.
- Do not move or operate the motorcycle with the steering locked (with accessory lock), as the severely restricted steering could result in loss of control.
- Obey the speed limit and adjust your speed and riding technique based on road, weather and traffic conditions. As you travel faster, the influence of all other conditions increases, which can affect the motorcycle's stability and increase the possibility of losing control.

Safety

Safety

Safe Riding Practices

- Reduce speed when:
 - the road has potholes, or is otherwise rough or uneven.
 - the road contains sand, dirt, gravel or other loose substances.
 - the road is wet, icy or oily.
 - the road contains painted surfaces, manhole covers, metal grating, railway crossings or other slippery surfaces.
 - The weather is windy, rainy or otherwise causing slippery or rapidly changing conditions.
 - Traffic is heavy, congested, not allowing sufficient space between vehicles or otherwise not flowing smoothly.
 - You are being passed in either direction by a large vehicle that produces a wind blast in its wake.

Safety

Safety

Safe Riding Practices

- To maximize braking effectiveness, *use the front and rear brakes together*. Improper braking may cause loss of control or may not slow the vehicle in time to avoid a collision. Be aware of the following braking facts and practices:
 - The rear brake provides 40% of the motorcycle's stopping power, at most. Use the front and rear brakes together.
 - To avoid skidding, apply the brakes gradually when the road is wet or rough, or contains loose or other slippery substances.
 - If possible, avoid applying the brakes while making a turn. Motorcycle tires have less traction during turns, so braking will increase the possibility of skidding. Bring the motorcycle to the upright position before applying the brakes.

Anti-Lock Brake System Response (if equipped)

- When the anti-lock brakes engage during a braking event, the rider will feel pulsing at the brake levers. *Continue to apply steady pressure to the brakes for the best stopping performance*. See page 74.

Safety

Safe Riding Practices

- When approaching a curve, choose a speed and lean angle that allows you to pass through the curve in your own lane without applying the brakes. Excessive speed, improper lean angle or braking in a curve can cause loss of control.
- Ground clearance is reduced when the motorcycle leans. Do not allow components to contact the road surface when leaning the motorcycle in a curve, as this could cause loss of control.
- Retract the sidestand fully before riding. If the sidestand is not fully retracted, it could contact the road surface and cause loss of control.
- Do not tow a trailer. Towing a trailer can make the motorcycle hard to handle.

Safety

Safety

Parking the Motorcycle

When leaving the motorcycle unattended, turn the engine off and lock the steering. See page 48. Remove the ignition key to prevent unauthorized use.

Park the motorcycle where people are not likely to touch the hot engine or exhaust system or place combustible materials near these hot areas. Do not park near a flammable source such as a kerosene heater or an open flame, where hot components could ignite combustible materials.

Park the motorcycle on a firm, level surface. Sloped or soft surfaces may not support the motorcycle. If you must park on a slope or soft surface, follow the precautions outlined on pages 127-128.

Safety

Carrying a Passenger

Not all models are equipped from the factory with a passenger seat and passenger footrests. *Do not carry a passenger* unless the motorcycle is equipped with passenger seat and passenger footrests.

To carry a passenger safely:

- Do not exceed the gross vehicle weight rating (GVWR) for your motorcycle.
- Direct the passenger to hold onto you or to the passenger hand grips with both hands and to keep both feet on the passenger footrests. Do not carry a passenger who cannot place both feet firmly on the passenger footrests. A passenger who is not holding on properly, or who cannot reach the passenger footrests, can shift their body erratically, which can make the motorcycle hard to handle and cause loss of control.

Safety

Safety

Carrying a Passenger

- To obtain the best ride and handling characteristics, adjust the rear shock absorber air pressure. See page 160.
- Before riding, be sure your passenger knows safe riding procedures. Discuss any safety information unfamiliar to your passenger. A passenger who is unaware of safe riding procedures may distract you or make movements that make the motorcycle hard to handle.
- Adjust your riding style to compensate for the differences in handling, acceleration and braking caused by the additional weight of the passenger. Failure to do so can cause loss of control.

Safety Carrying Cargo

Use the following guidelines when attaching cargo or accessories to the motorcycle. Where applicable, these guidelines also refer to the contents of any accessories.

- Keep cargo and accessory weight to a minimum, and keep items as close to the motorcycle as possible to minimize a change in the motorcycle's center of gravity. Changing the center of gravity can cause loss of stability and handling and could cause loss of control.
- Distribute weight evenly on both sides of the motorcycle. Maintain even weight distribution by checking accessories and cargo to make sure they're securely attached to the motorcycle before riding and whenever you take a break from riding. Uneven weight distribution, or accessories or cargo that shift suddenly while you're riding can make the motorcycle hard to handle and could cause loss of control.

Safety

Safety

Carrying Cargo

- Do not attach large or heavy cargo such as sleeping bags, duffel bags or tents to the handlebars, front fork area or front fender. Cargo or accessories placed in these areas can cause instability (due to improper weight distribution or aerodynamic changes) and could cause loss of control. Such items can also block air flow to the engine and cause overheating that can damage the engine.
- Do not exceed the maximum cargo weight limit of any accessory (see accessory instructions and labels). Do not attach cargo to an accessory not designed for that purpose. Either circumstance could result in an accessory failure that could cause loss of control.
- Do not attach anything to the motorcycle unless specifically designed for that purpose by VICTORY.

Safety

Protective Apparel

Wear protective apparel to decrease the risk of injury and increase riding comfort.

- Always wear a helmet that meets or exceeds established safety standards. Approved helmets in the USA and Canada bear a U.S. Department of Transportation (DOT) label. Laws in some areas *require* that you wear an approved helmet. Head injuries are the leading cause of fatalities in accidents involving motorcycles. Statistics prove that an approved helmet is the most effective protection in preventing or reducing head injuries.
- Wear eye protection to protect eyes from wind or airborne particles and objects. Laws in some areas *require* that you wear eye protection. VICTORY recommends that you wear approved Personal Protective Equipment (PPE) bearing markings such as VESC 8, V-8, Z87.1, or CE. Make sure protective eyewear is kept clean.

Safety

Protective Apparel

- All riders should wear bright or light-colored and/or reflective clothing to improve visibility to other motorists. *A motorist's failure to see or recognize a motorcycle is the leading cause of automobile/motorcycle accidents.*
- Wear gloves, a jacket, heavy boots and long pants to prevent or reduce injury from abrasions, lacerations or burns should the motorcycle fall. Wear boots with low heels, as high heels can catch on pedals or footrests. The combination of boots and pants should completely cover legs, ankles and feet, protecting skin from engine and exhaust system heat.
- Do not wear loose, flowing clothing or long boot laces, as they can catch on handlebars, levers or footrests, or they can become entangled in the wheels, causing loss of control and serious injury.

Safety

Use of Accessories

Because VICTORY cannot test and make specific recommendations concerning every accessory or combination of accessories sold, the operator is responsible for determining that the motorcycle can be safely operated with any accessories or additional weight. Use the following guidelines when choosing and installing accessories:

- Do not install accessories that impair the stability, handling or operation of the motorcycle. Before installing an accessory, be sure that it does not:
 - Reduce ground clearance when the motorcycle is either leaned or in a vertical position.
 - Limit suspension or steering travel or your ability to operate controls.
 - Displace you from your normal riding position.
 - Obscure lights or reflectors.
- Bulky or large accessories can cause instability (due to the lifting or buffeting effects of wind) and loss of control.

Safety

Safety

Use of Accessories

- Do not install electrical accessories that exceed the capacity of the motorcycle's electrical system. Never install higher wattage light bulbs than those supplied as original equipment. An electrical failure could result and cause hazardous loss of engine power or lights, or damage to the electrical system. See page 216.
- Use only genuine VICTORY accessories designed for your model.

Modifications

- Modifying the motorcycle by removing any equipment or by adding equipment not approved by VICTORY may void your warranty. Such modifications could make the motorcycle unsafe to ride and could result in severe injury to operator or passengers, as well as damage to the motorcycle. Some modifications may not be legal in your area of operation. If in doubt, contact your authorized VICTORY dealer.

Safety

Saddlebags and Trunk

Whenever operating a motorcycle with saddlebags:


- Never ride at speeds exceeding 80 MPH (120 km/h). Depending on load and weather conditions, the maximum safe operating speed may be less. Saddlebags, combined with the lifting or buffeting effects of wind, can make the motorcycle unstable and cause loss of control.
- Distribute weight evenly in each of the saddlebags.
- Do not exceed the individual weight limit of each saddlebag or the trunk. A weight capacity label is attached inside for reference.
- **NEVER EXCEED GROSS VEHICLE WEIGHT RATING (GVWR)**, regardless of whether or not the saddlebags and/or trunk are loaded to capacity. Exceeding the weight rating can reduce stability and handling and cause loss of control.

Safety

Transporting the Motorcycle

If you must transport the motorcycle:

- Use a truck or trailer. Do not tow the motorcycle with another vehicle, as towing will impair the motorcycle's steering and handling.
- Position and restrain the motorcycle so it remains upright on the truck or trailer. If the motorcycle leans to one side, gasoline may leak from the fuel tank and result in a fire hazard or damage to the finish.
- Do not restrain the motorcycle using the handlebars. In front, hook the tiedowns in the loop provided in the bottom of the frame. Place tiedowns as wide apart as possible on the truck or trailer bed for best stability.

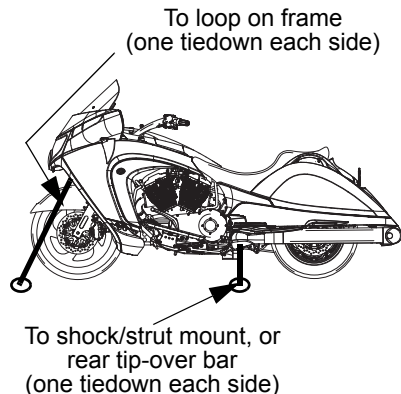

Safety

Fuel and Exhaust Safety

Always heed these fuel safety warnings when refueling or servicing the fuel system. For fueling procedures, see page 112.

WARNING! Gasoline is highly flammable and explosive under certain conditions.

- Always exercise extreme caution whenever handling gasoline.
- Always turn off the engine before refueling.
- Always refuel outdoors or in a well-ventilated area.
- Open the fuel cap slowly. Do not overfill the tank. Do not fill the tank neck.
- Do not smoke or allow open flames or sparks in or near the area where refueling is performed or where gasoline is stored.

Safety

Fuel and Exhaust Safety

WARNING! Gasoline and gasoline vapors are poisonous and can cause severe injury.

- Do not swallow gasoline, inhale gasoline vapors, or spill gasoline. If you swallow gasoline, inhale more than a few breaths of gasoline vapor, or get gasoline in your eyes, see a physician immediately.
- If gasoline spills on your skin or clothing, immediately wash it off with soap and water and change clothing.
- Exhaust gases contain carbon monoxide, a colorless, odorless gas that can cause loss of consciousness or death in a short time.
- Never start the engine or let it run in an enclosed area.
- Never inhale exhaust gases.

Safety

Safety

Safety Maintenance

WARNING! Failure to perform safety maintenance as recommended can result in difficult handling and loss of control, which could result in serious injury or death. Always perform the safety maintenance procedures as recommended. Perform maintenance and repairs promptly as outlined in the VICTORY service manual, or see your authorized VICTORY dealer for service.

- Before each ride, perform the Pre-Ride Inspections. See page 47.
- Perform all periodic maintenance at the recommended intervals outlined in the Periodic Maintenance section beginning on page 136.
- Always maintain proper tire pressure, tread condition and wheel and tire balance. Inspect tires regularly and replace worn or damaged tires promptly. Use only approved replacement tires.

Safety

Safety Maintenance

- Always ensure proper steering head bearing adjustment. Regularly inspect the rear shock absorber and the front forks for fluid leaks or damage. Make any necessary repairs promptly.
- Clean the motorcycle thoroughly to reveal items in need of repair.
- Make sure all legally required equipment is properly installed and in good condition, including the license plate.
- Fasteners must meet original specifications for quality, finish and type to ensure safety. Use only genuine VICTORY replacement parts, and ensure that all fasteners are tightened to the proper torque.

Electromagnetic Interference

This vehicle complies with European directive 97/24/EC Chapter 8 requirements, which is equivalent to Canadian ICES-002.

Safety

Safety

Gross Vehicle Weight Rating (GVWR)

WARNING! Exceeding the gross vehicle weight rating of your motorcycle can reduce stability and handling and could cause loss of control. NEVER exceed the GVWR of your motorcycle.

The *maximum load capacity* of your motorcycle is the maximum weight you may add to your motorcycle *without exceeding the GVWR*. This capacity is determined by calculating the difference between your motorcycle's GVWR and wet weight.

Refer to the specification section of this manual or the Manufacturing Information/VIN label on the motorcycle frame for model-specific information. Refer to the "Safety and Information Labels" section in this manual for location on the motorcycle.

Safety

Gross Vehicle Weight Rating (GVWR)

When determining the weight you will be adding to your motorcycle, and to ensure you do not exceed the maximum load capacity, include the following:

- operator body weight
- passenger body weight
- weight of all riders' apparel and items in or on apparel
- weight of any accessories *and their contents*
- weight of any additional cargo on the motorcycle


Safety

Safety


Safety and Information Labels

Vehicle Identification Number (VIN)

Tip: See page 202 for seat removal instructions.

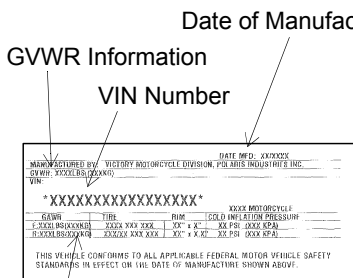


VIN Label
(on frame, under rear console cover)
Operator/Fuel Warning
(outside of cover)

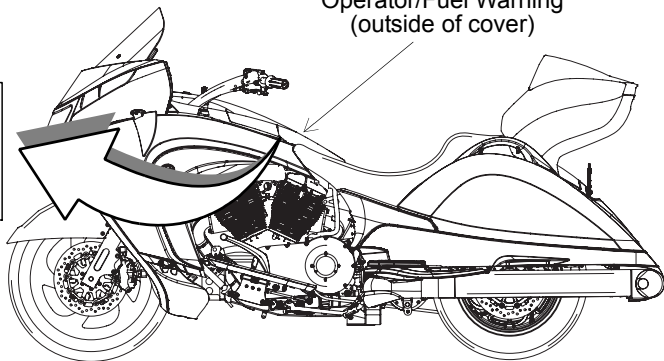

Safety and Information Labels

Vehicle Emission Control Information (VECI)

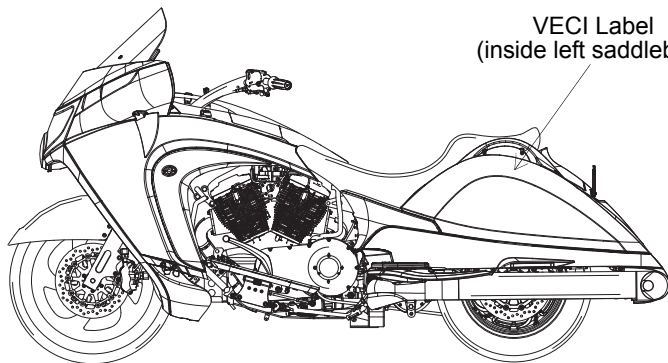

VECI Label
(inside left saddlebag)

VEHICLE EMISSION CONTROL INFORMATION and EVAPORATIVE HOSE ROUTING - CALIFORNIA

Victory
VICTORY MOTORCYCLE DIVISION, Polaris Industries Inc.
210 HWY 95
FARGO, MN 56503-9000

ENGINE DISPLACEMENT: 1614cc
ENGINE FAMILY: JAVNCC020V9
ENGINE EXHAUST EMISSION CONTROL: 0FI
ENGINE TUNING SPECIFICATIONS:
SOLE SPEED, 900 +/- 30 RPM
IGNITION TIMING: PERMANENTLY FACTORY SET
SOLE MIXTURE: EMI CONTROLLED
VALVE CLEARANCE: 0.004 INCHES; 0.001 INCHES; SELF-ADJUSTING
SPARK PLUG: NGK CR9E9S SPARK PLUG GAP: 0.031" (0.8 mm)
FUEL: UNLEADED GASOLINE ONLY; 30 PUMP OCTANE OR HIGHER
RAT: 300/45

EVAP FAMILY: JAVNCC020V9
EVAPORATIVE SYSTEM HOSE ROUTING DIAGRAM:

The diagram shows a fuel tank with a fuel pump and carburetor. A fuel line connects the fuel pump to the carburetor. A vent line connects the fuel tank to the carburetor. A return line connects the carburetor back to the fuel tank. A vent line also connects the fuel tank to the atmosphere.

THIS VEHICLE CONFORMS TO US EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2001 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 1.6 GPM OVER ENGINE FAMILY EXHAUST EMISSION STANDARDS IN CALIFORNIA.

Safety


Safety

Safety

Safety and Information Labels

Noise Emission Control Information (NECI)

Windshield Label

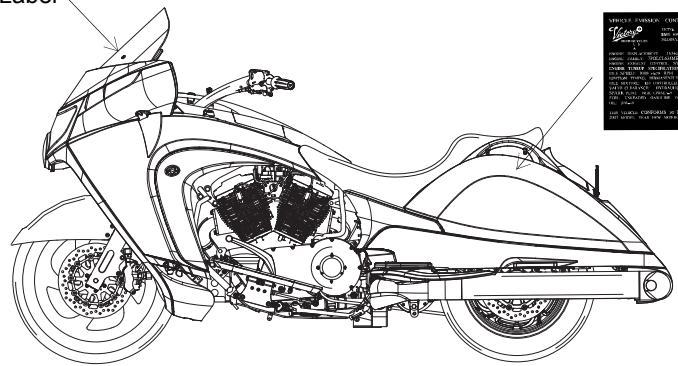


NECI Label
(below VECI label)

Safety and Information Labels

Tire and Cargo Information

Cargo Information Label
(inside saddlebags and trunk, if equipped)

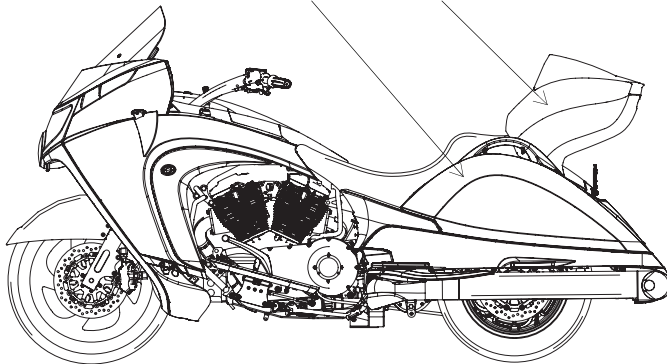

Safety

Safety

Safety

Reporting Safety Defects

If you believe that your vehicle has a defect that could result in a crash or cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Polaris Industries in writing.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer or Polaris Industries.

To contact NHTSA, or obtain other information about motor vehicle safety, you may either call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153), visit the NHTSA website at www.safercar.gov, or write to:

ADMINISTRATOR, NHTSA
1200 New Jersey Avenue, SE
West Building
Washington, DC 20590

Component Identification

Ignition Key Number

The ignition key number is stamped on the small metal tag attached to the key ring. *Remove* the tag and record the number on page 40. Store the tag in a safe place.

Additional keys can be copied from one of the original keys. A VICTORY key blank is required. If you lose both original keys, you will need the following:

- Key number (recorded on page 40)
- A new key blank from a VICTORY dealer
- Proof of ownership
- A locksmith or VICTORY dealer with the equipment necessary to cut a new key

Engine Identification Number

The engine number is stamped into the right crankcase behind the rear cylinder. Record the number in the space provided on page 40.

Key Number



Engine Number



Component Identification Identification Number Record

Record important identification numbers below.


Vehicle Identification Number (VIN) (see page 34)	
Engine Identification Number (see page 39)	
Ignition Key Number (see page 39)	

Identification

Component Identification


Component Locations

1. Spark Plugs
2. Front Brake Caliper
3. Gear Shift Pedal
4. Operator Footrest
5. Sidestand
6. Oil Drain Plug
7. Oil Filter
8. Passenger Footrest
9. Rear Brake Caliper
10. Diagnostic Connector (in saddlebag)
11. Running Light (Tour)
12. Rear Speakers (Tour)
13. Passenger Hand Grip
14. Rear Shock Air Fitting (under saddlebag door)

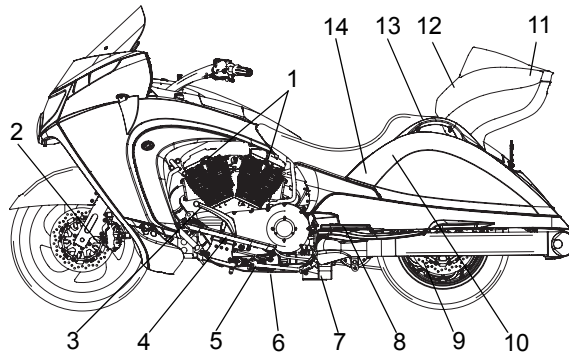

Component Identification Component Locations


1. Drive Belt Guard
2. Drive Belt
3. Passenger Footrest
4. Drive Sprocket (under cover)
5. Speed Sensor (top of crankcase)
6. Engine Oil Fill Cap / Dipstick
7. Rear Brake Pedal
8. Operator Footrest
9. Front Brake Caliper
10. Passenger Hand Grip
11. Reflector

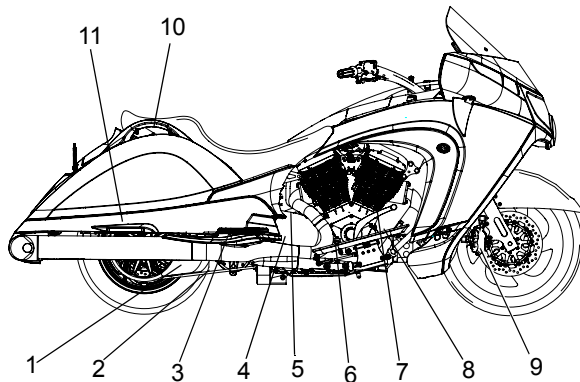

Component Locations

1. Front Turn Signal (outer light, each side)
2. Wind Deflector
3. Headlamp
4. Driving Lamp (or HID lamp if equipped)
5. Air Filter (front of frame)
6. Tiedown Loop (on frame)
7. Rear Brake Fluid Reservoir
8. Battery
9. Oil Cooler
10. Horn
11. Evaporative Emissions Canister
12. Fuel Tank (one each side)
13. Running Light (inner light, each side)


Component Identification

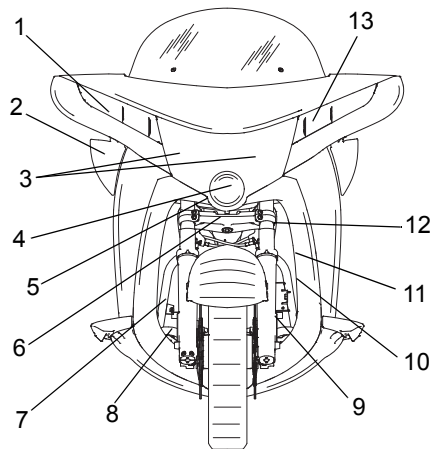

Identification

Component Identification Component Locations


1. Turn Signals (uppermost in lens)
2. Tail Lamps (3 each side)
3. Brake Lamps
4. Exhaust Mufflers
5. License Plate Bracket

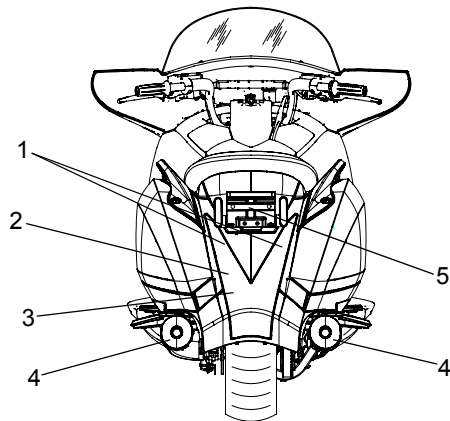

Component Locations

1. Windshield
2. Radio Antenna (under dash)
3. Mirror
4. Clutch Fluid Reservoir
5. Clutch Lever
6. Glove Compartment Door
7. Operator Seat
8. Passenger Seat
9. Saddlebag Latch
10. Trim Panel (if equipped)
11. Front Brake Lever
12. Front Brake Fluid Reservoir
13. Fuel Filler Cap Access Door


Component Identification

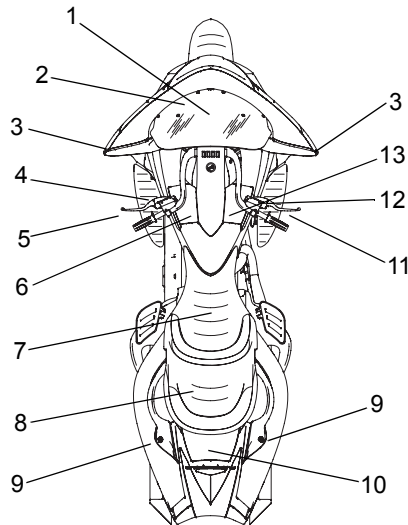

Identification

Component Identification Component Locations

1. Speakers
2. Fuel Gauge
3. Speedometer
4. Indicator Lamp Display
5. Multi-Function Display
6. Tachometer
7. Volt Meter
8. Cruise Control Switches (if equipped)
9. Radio Controls
10. Left Handlebar Switch/
Audio Control

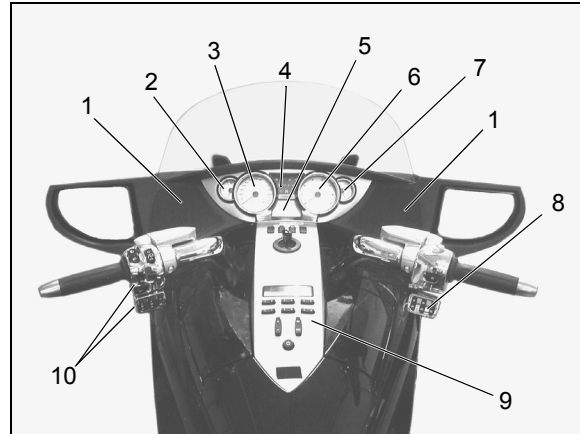

Instruments/Features/Controls

Ignition Switch

Place the ignition key in the ignition switch to operate the following functions of the switch.

OFF	All electrical circuits are off. The key can be removed.
ON	All electrical circuits are on. The ignition key cannot be removed. Headlamp, taillight, running lights, radio and instrument lights illuminate. Hazard flashers and turn signals can be activated.
ACC	Power is supplied to accessory circuits, radio, instruments, turn signals, brake light, windshield motor, horn and hazard (flasher). The key can be removed.
LOCK	All electrical circuits are off. The fuel door and glove compartment are locked when the steering is locked. The key can be removed. See page 48 for instructions.
FUEL DOOR	See page 49 for instructions.

Instruments/Features/Controls

Ignition Switch

Ignition Key

The ignition key operates the ignition switch, fuel door, saddlebag door locks and trunk door lock (if equipped). Read the engine starting procedures beginning on page 114 before starting the engine. Store the spare key in a safe place separate from the main key.


Tip: Use a key ring that won't scratch the finish on the console.

Ignition Lock

Use the ignition lock feature to lock the steering. When locked, the key can be removed.

Tip: The fuel door and glove compartment are locked when the steering is locked.

1. Turn the handlebars full left.
2. Turn the key to the OFF position.
3. Push the key down while moving it counter-clockwise to the LOCK position.
4. Release the key.

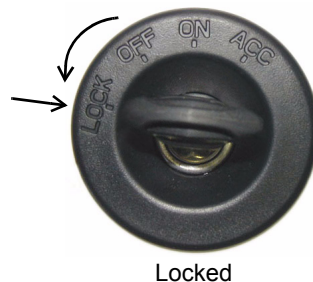

Instruments/Features/Controls

Ignition Switch


Fuel Door Lock

1. Turn the handlebars full left.
2. Turn the key to the OFF position.

Tip: Do not push the key down when unlocking the fuel door.


3. Turn the ignition key counter-clockwise to release the fuel door latch. The door will open under light spring tension. See page 112 for fueling procedure.
4. Remove the fuel cap and place it in the cap holder while fueling. Reinstall the fuel cap securely before closing the fuel door.
5. Close the fuel door and press downward to engage the latch.

Tip: The fuel door and glove compartment are locked when the steering is locked.

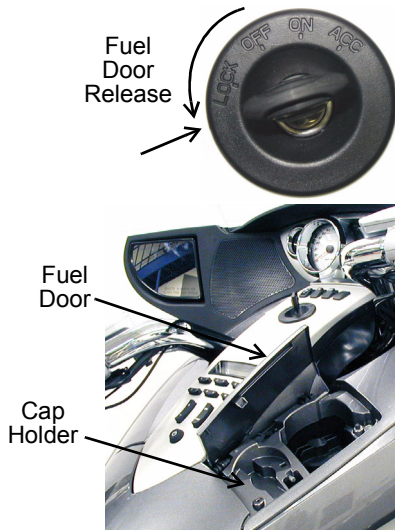

Instruments/Features/Controls Instrument Cluster

The instrument cluster includes the speedometer, tachometer, fuel gauge, volt meter, indicator lamps and multi-function display.

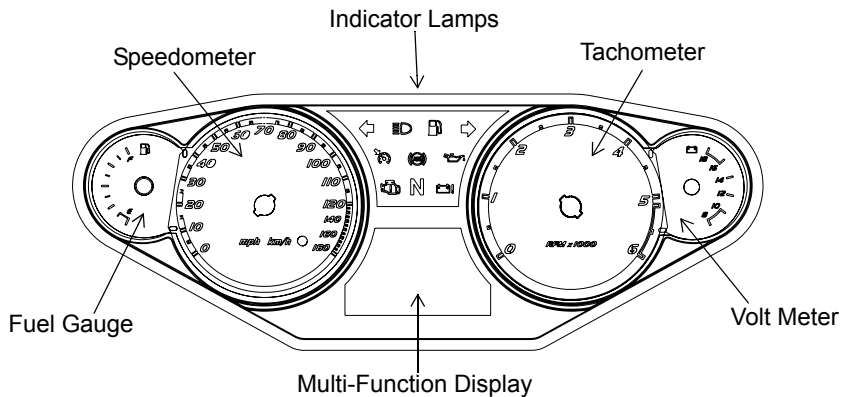

Speedometer

The speedometer displays vehicle speed in either miles per hour or kilometers per hour. See page 58.

Tachometer

The tachometer displays engine speed in revolutions per minute (RPM). A red line on the face of the gauge indicates the maximum safe engine speed.

WARNING! Excessive engine speed can cause engine damage or failure, which could result in serious injury or death. Do not allow engine speed to exceed the red line.

Instruments/Features/Controls


Fuel Gauge

The fuel gauge displays fuel level. The key must be in the ON or ACC position. For the most accurate reading, sit on the motorcycle and bring it to the upright position.

Volt Meter




When the key is in the ON position, the volt meter displays battery voltage. If the engine is not running, approximate battery voltage displays. If the engine is running, approximate charging voltage displays.

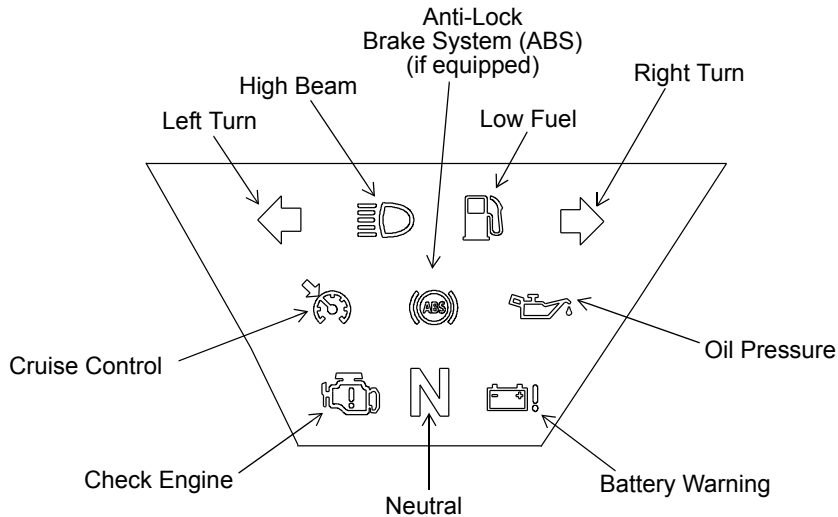Instruments/Features/Controls Indicator Lamps





Instruments/Features/Controls

Indicator Lamps

Lamp	Indicates	Condition
	Neutral	This lamp illuminates when the transmission is in neutral and the ignition key is in the ON or ACC position.
	High Beam	This lamp illuminates when the headlamp switch is set to high beam.
	Check Engine	This lamp illuminates momentarily when the ignition switch is in the ON position and the engine is off. This indicates proper function. <i>If this lamp illuminates while the engine is running, contact an authorized VICTORY dealer promptly for diagnosis.</i> The light will remain on if the tilt sensor shuts down the engine. See page 65. If abnormal sensor or engine operation is detected the light will remain on as long as the fault condition exists. Retrieve the error codes for diagnosis. See page 57. This lamp is also known as a malfunction indicator lamp (MIL).





Instruments/Features/Controls

Indicator Lamps

Lamp	Indicates	Condition
	Turn Signal	One arrow flashes when the corresponding turn signal is activated. Both arrows flash when the hazard signal is activated. <i>If a bulb fails, or if there is a short circuit in the signal system, the lamp flashes at more than twice the normal rate.</i>
	Low Oil Pressure	This lamp illuminates when the ignition switch is in the ON position and the engine is off, indicating that the indicator circuit is functioning properly. This lamp also illuminates if engine oil pressure drops below safe operating pressure. If this lamp illuminates while the engine is running, turn the engine off as soon as safely possible and check the oil level. <i>If the oil level is correct and the lamp remains on after the engine is restarted, turn the engine off immediately.</i>

Instruments/Features/Controls

Indicator Lamps


Lamp	Indicates	Condition
	Low Fuel	This lamp illuminates when approximately one gallon (3.8 liters) of fuel remains in the fuel tank.
	Low Battery Warning	This lamp illuminates when battery voltage is low. Make sure the charging system is operating properly. See page 224.
	Cruise Control Engaged	Before using the cruise control, read the safety and operation procedures beginning on page 122.
	Anti-Lock Brake System Not Activated (if equipped)	The ABS indicator always illuminates when the key is in the ON position and remains on until the anti-lock system activates, which occurs when vehicle speed exceeds 6 MPH (10 km/h). When the lamp is illuminated, the anti-lock brakes will not activate, but the conventional brake system will continue to operate normally.

Instruments/Features/Controls

Multi-Function Display

Use the mode button to toggle through the modes of the multi-function display. See page 65.
Modes available include:

- clock
- gear position
- ambient temperature
- odometer/trip odometer
- fuel range
- average fuel consumption rate
- fuel economy
- trip time (and other trip information)

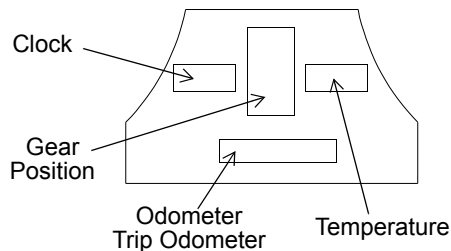

Instruments/Features/Controls


Multi-Function Display

Engine Error Codes

The error screen displays only when the CHECK ENGINE light is on or when it goes on and off during one ignition cycle. Error codes are not stored. When the key is turned OFF, the code and message is lost, but will reappear if the fault reoccurs after restarting the engine.

If the CHECK ENGINE indicator lamp illuminates, retrieve the error codes from the display.

1. If the error codes are not displayed, use the mode button to toggle until "Err" displays in the clock area.
2. Record the three code numbers displayed in the gear position, temperature and odometer displays.
3. See an authorized VICTORY dealer for code details and diagnosis.

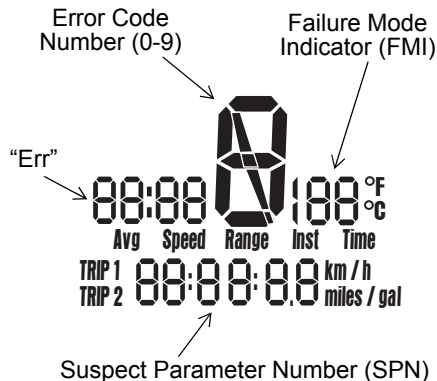

Instruments/Features/Controls

Multi-Function Display

Display Units (Standard/Metric)

The display can be changed to display either standard or metric units of measurement.

Tip: To exit the set-up mode at any time, wait 10 seconds. The display automatically exits and returns to the odometer display.

	Standard Display	Metric Display	
Distance	Miles	Kilometers	
Fuel	U.S. Gallons	l = Imperial Gallons	Liter = Liters
Temperature	Fahrenheit	Celsius	
Time	12-Hour Clock	24-Hour Clock	

Instruments/Features/Controls

Multi-Function Display

Display Units (Standard/Metric)

1. Turn the key to the OFF position.
2. Press and *hold* the mode button while turning the key to the ON or ACC position.
3. When the display flashes the distance setting, tap the mode button to advance to the desired setting.
4. Press and *hold* the mode button to save the setting and advance to the next display option.
5. Repeat the procedure to change remaining display settings.

Instruments/Features/Controls

Multi-Function Display

Clock

Tip: The clock must be reset any time the battery has been disconnected or discharged.

1. Turn the key to ON or ACC. Use the mode button to toggle to the odometer display.

Tip: If LOW FUEL is flashing, the display will not enter the CLOCK SET mode.

2. Press and *hold* the mode button until the hour segment flashes. Release the button.
3. With the segment flashing, tap the mode button to advance to the desired setting.
4. Press and *hold* the mode button until the next segment flashes. Release the button.
5. Repeat steps 3-4 twice to set the 10-minute and 1-minute segments. After completing the 1-minute segment, step 4 will save the new settings and exit the clock mode.
6. Turn the key to the OFF position.

Instruments/Features/Controls

Multi-Function Display

Odometer/Trip Odometer

The odometer displays the total distance traveled by the vehicle. The trip odometer displays distance traveled since the trip odometer was reset. To view the trip odometer, turn the key to the ON position. Use the mode button to toggle to the trip odometer.

To reset the trip odometer, toggle to the trip odometer, then press and hold the mode button until the trip odometer resets.

Gear Position



To display the gear position, the key must be in the ON position and the stop/run switch must be in the RUN position. “N” displays in neutral. “R” displays in reverse (if equipped).

Temperature

The key must be in the ON or ACC position to display ambient air temperature.




Instruments/Features/Controls

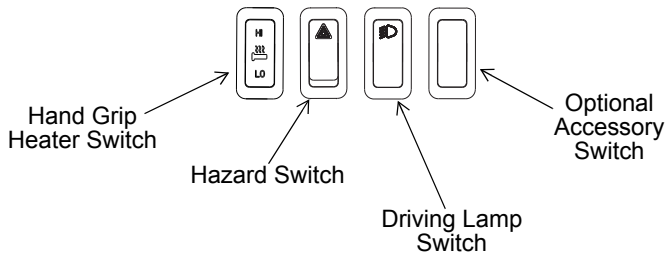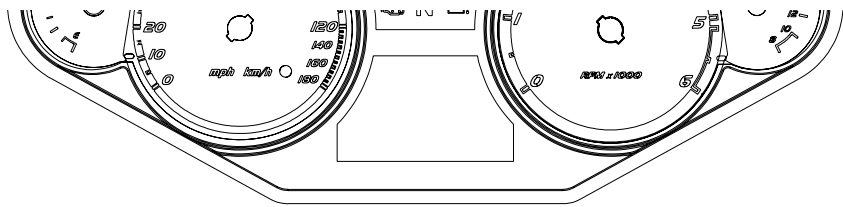Console Switches



 Instruments/Features/Controls

Console Switches

- High**
Off
Low
- 
- A vertical rocker switch with three positions. The top position is labeled 'H' and has a hand icon with wavy lines above it. The bottom position is labeled 'LO'. The middle position is empty.
- Hand Grip Heater Switch**
Press the top (high heat) or bottom (low heat) of the rocker switch to turn the hand grip heaters on. Move the switch to the center position to turn the heaters off.
- On**
Off
- 
- A vertical rocker switch with two positions. The top position has a triangle with an exclamation mark inside. The bottom position is empty.
- Hazard Switch/Emergency Flashers**
All turn signals flash when the emergency flashers are activated. Press the top of the hazard switch to turn the flashers on. Press the bottom of the switch to turn the flashers off.
- On**
Off
- 
- A vertical rocker switch with two positions. The top position has a headlamp icon. The bottom position is empty.
- Driving Lamp Switch**
The driving lamp is an additional low beam lamp not controlled by the headlamp high/low switch. This lamp is a center headlamp (or HID lamp, if equipped). The ignition key must be on to use the driving lamp. Press the top of the rocker switch to turn the light on. Press the bottom of the switch to turn the light off.

Instruments/Features/Controls



Seat Heater Switches

Seat heater switches (if equipped) are located on the seat under the left passenger hand grip. The low heat setting is adequate for most conditions. Use the high heat setting with caution.

- The front switch controls the driver's seat heater.
- The rear switch controls the passenger's seat heater.

Mirrors

Adjust the rear view mirrors by applying light pressure at the outer edges of the mirror.

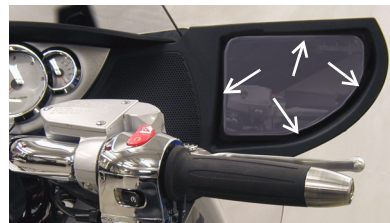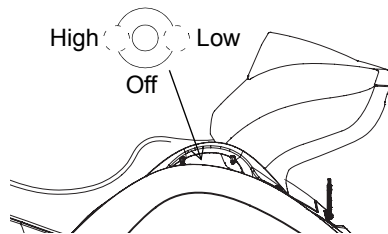


Instruments/Features/Controls

Mode Button

The mode button is located on the front side of the left handlebar switch. Use the mode button to toggle through the modes of the multi-function display. See page 56. Use the mode button to set the display units to either standard or metric units of measurement. See page 58.

Tip: If “Err” displays while toggling through the features, a system error has been logged. See page 57.

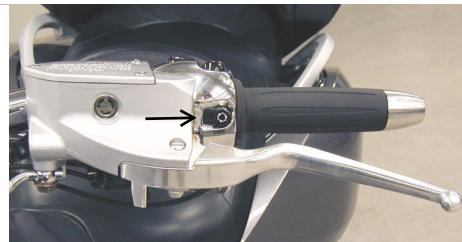

Tilt Sensor

A tilt sensor stops the engine if the motorcycle tips beyond 45 degrees to one side. The check engine light will also illuminate. To restart the engine, cycle the ignition switch to the OFF position, wait 10 seconds, then restart the engine.

Instruments/Features/Controls

Headlamp Switch (High/Low)


The headlamp switch is located on the left handlebar. Use the switch to toggle the headlamp to high beam or low beam. The key must be in the ON or ACC position.

Tip: To turn the headlamp on, turn the ignition key to ON and tap or press the start switch.

- Press the top of the switch to activate high beam.
- Press the bottom of the switch to activate low beam.

Horn Switch

The horn switch is located on the left handlebar. Press the horn switch to sound the horn. The key must be in the ON or ACC position.

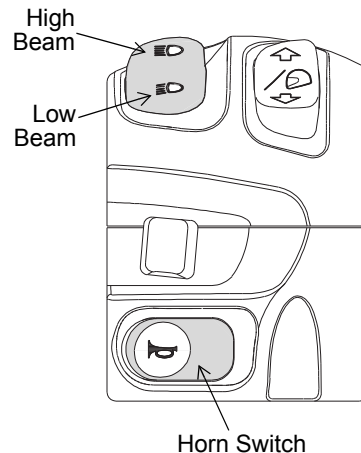

Instruments/Features/Controls


Windshield Adjustment Switch

The motorized windshield adjustment switch (if equipped) is located on the left handlebar. Use the switch to change the height and angle of the windshield. The key must be in the ON or ACC position.

Tip: Do not continuously cycle the windshield switch more than once in a 60-second period.

- Press the top of the switch to raise the windshield.
- Press the bottom of the switch to lower the windshield.

For models not equipped with this feature, use the manual windshield adjustment procedure. See page 81.

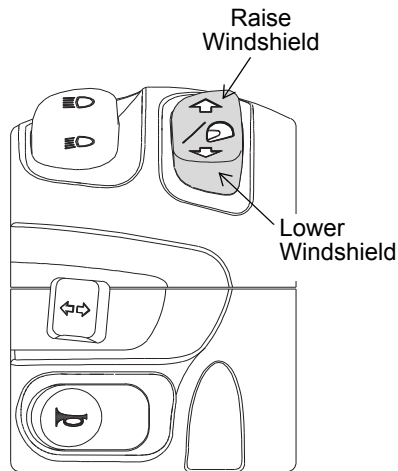

Instruments/Features/Controls


Turn Signal Switch

The turn signal switch is located on the left handlebar. Use the switch to activate a turn signal. The key must be in the ON or ACC position.

- Push the switch to the left to activate the left turn signals.
- Push the switch to the right to activate the right turn signals.

Turn signals automatically cancel after predetermined speed and distance conditions are met. To *manually* cancel a signal, move the switch to the center position and press it inward.

Tip: The momentary signal feature is useful when passing or changing lanes. To use the momentary feature, push and *hold* the switch through at least one complete flash cycle (at least one second) to activate the feature. The signal will then cancel the moment the switch is released.

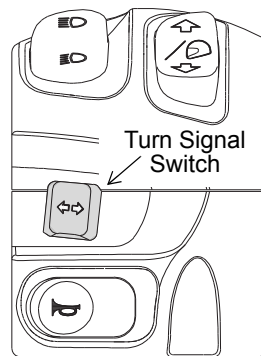

Instruments/Features/Controls

Clutch Lever

The clutch lever is located on the left handlebar. Disengage the clutch before shifting gears. For smooth clutch operation, pull the lever quickly and release it gradually.

- To disengage the clutch, pull the lever toward the handlebar.
- To engage the clutch, gradually release the lever.



Interlock Switch

Clutch Lever

Starter Interlock Switch

The starter interlock switch is located on the left handlebar. This switch prevents the electric starter from operating when the transmission is in gear and the clutch is engaged (lever released). Read the engine starting procedures beginning on page 114 before starting the engine.


WARNING! Never start the engine with the transmission in gear and the clutch disengaged unless you are properly seated with the front brake applied.

Instruments/Features/Controls

Engine Stop/Run Switch

The engine stop/run switch is located on the right handlebar. This switch completes or interrupts the ignition, starter and fuel pump circuits. Use the engine stop/run switch to turn the engine off quickly. Turn the key off after the engine stops.

- Press the bottom of the switch (RUN) to complete the circuits and allow the engine to start and run.
- Press the top of the switch (STOP) to interrupt the circuits and stop the engine. The engine should not start or run when the switch is in the STOP position.

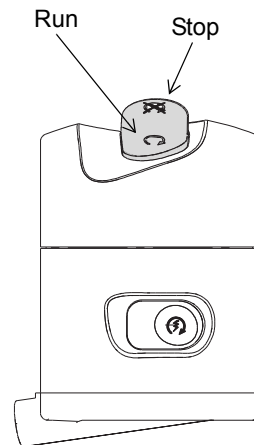

Instruments/Features/Controls


Engine Starter Switch

The starter switch is located on the right handlebar. Use the starter switch to start the engine, turn the headlights on and operate in reverse (if equipped). The switch will operate only when the engine stop/run switch is in the RUN position and the transmission is in neutral (or the clutch is disengaged). The reverse lever (if equipped) must also be disengaged.

Tip: If the reverse system fuse has blown, the starter switch will not function even if the reverse lever is disengaged. Replace the fuse. See page 215.

Read the engine starting procedures before starting the engine. See page 114.

- Press the right side of the starter switch to engage the starter motor.
- Tap the starter switch to turn the headlight on without starting the engine.
- See page 129 for reverse operation.

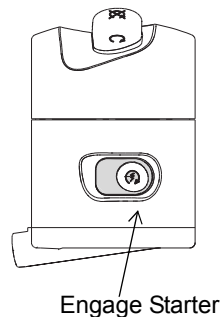


Instruments/Features/Controls

Throttle Control Grip

The throttle control grip is located on the right handlebar. Use the throttle control grip to control engine speed. While seated in the proper riding position:

- Rotate the top of the grip rearward to increase engine speed and power.
- Rotate the top of the grip forward to decrease engine speed and power.

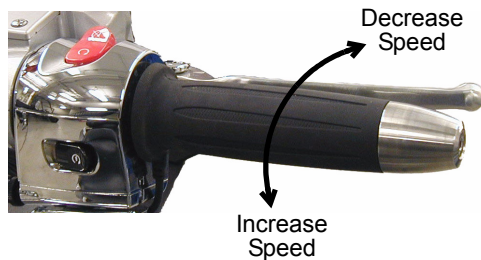

Instruments/Features/Controls

Brakes

Linked Braking System

The front and rear brakes on the motorcycle are linked. The front brake lever activates only the front brake calipers. The rear brake pedal activates the rear brake caliper fully while simultaneously activating one of the three pistons in each front brake caliper.

For maximum brake effectiveness, apply the front brake lever and the rear brake pedal together, as with a conventional (non-linked) brake system.

Anti-Lock Brake System (ABS) (if equipped)

This system is a linked brake system. The anti-lock brake system automatically reduces or increases brake pressure as needed to provide optimum braking control, reducing the chance of wheel lock-up during hard braking events or when braking on rough, uneven, slippery or loose surfaces. See page 74.

Instruments/Features/Controls

Brakes

Anti-Lock Brake System (ABS) (if equipped)

- The anti-lock brake system cannot be turned off.
- The ABS indicator always illuminates when the key is in the ON position and remains on until the anti-lock system activates, which occurs when vehicle speed exceeds 6 MPH (10 km/h).
- When the lamp is illuminated, the anti-lock brakes will not activate, but the conventional brake system will continue to operate normally.
- When the anti-lock brakes engage during a braking event, the rider will feel pulsing at the brake levers. *Continue to apply steady pressure to the brakes for the best stopping performance.*
- Service the indicator lamp if the ABS light does not come on when the key is turned to the ON position.
- If the lamp continues to illuminate after vehicle speed exceeds 6 MPH (10 km/h), the ABS system is not functioning. See your VICTORY dealer promptly for service.

Instruments/Features/Controls

Brakes

Anti-Lock Brake System (ABS) (if equipped)

- Operating with non-recommended tires or improper tire pressure may reduce the effectiveness of the anti-lock brake system. Always use the recommended size and type of tires specified for your vehicle. Always maintain the recommended tire pressure.
- The anti-lock brake system will not prevent wheel lockup, loss of traction or loss of control *under all conditions*. Always adhere to all safe motorcycle-riding practices as recommended.
- It is not unusual to leave tire marks on the road surface during a hard braking event.
- The anti-lock brake system does not compensate for or reduce the risks associated with:
 - excessive speed
 - reduced traction on rough, uneven or loose surfaces
 - poor judgment
 - improper operation

Instruments/Features/Controls


Brakes

Front Brake Lever

The front brake lever is located on the right handlebar. This lever controls only the front brakes. The front brakes should be applied simultaneously with the rear brakes.

To apply the front brake, pull the lever toward the handlebar.

See page 121 for braking procedures.

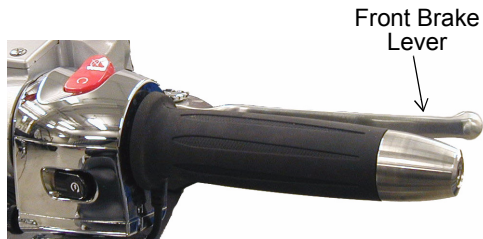


Instruments/Features/Controls

Brakes


Front Brake Lever

Front brake lever reach (distance to the hand grip) is adjustable.

1. *Pull and hold* the lever away from the hand grip.
2. To increase reach distance, rotate the adjuster to align a lower number with the arrow on the lever.
3. To decrease reach distance, rotate the adjuster to align a higher number with the arrow on the lever.

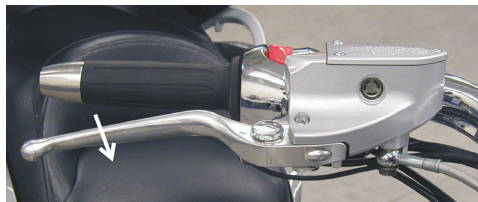

Pull and hold lever

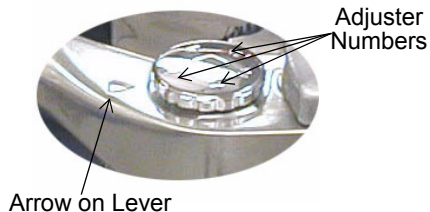

Instruments/Features/Controls

Brakes

Rear Brake Pedal

The rear brake pedal is located on the right side of the motorcycle. Press downward on the rear brake pedal to apply the rear brake.

The rear brake pedal activates the rear brake caliper fully while simultaneously activating one of the three pistons in each front brake caliper.

See page 80 for pedal adjustment options.

See page 121 for braking procedures.



Rear Brake Pedal


Instruments/Features/Controls

Gear Shift Pedal

The gear shift pedal is located on the left side of the motorcycle.

- Press downward on the gear shift pedal to shift to a lower gear.
- Lift up on the gear shift pedal to shift to a higher gear.

See page 80 for pedal adjustment options. See pages 116-119 for gear shifting procedures.

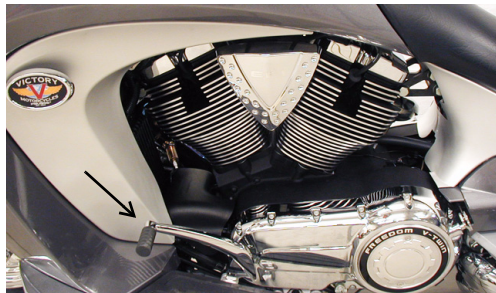

Gear Shift Pedal

Instruments/Features/Controls

Pedal Adjustment

The brake pedal and gear shift pedal controls can be adjusted to a front, rear or center position. The center position is the factory setting.

1. Remove the screw from the footwell support.

Tool: 6 mm Allen wrench


2. Slide the control forward or rearward in its track until the threaded hole of the control aligns with the desired hole in the footrest support.

3. Reinstall the screw.

Torque: 96 in-lbs (11 Nm)

4. After adjusting the shift pedal, always readjust the shift linkage rod. Loosen both jam nuts on the linkage and turn the shaft until the footpeg is about 90 mm from the floorboard (or to desired height). Tighten both jam nuts.

Torque: 96 in-lbs (11 Nm).


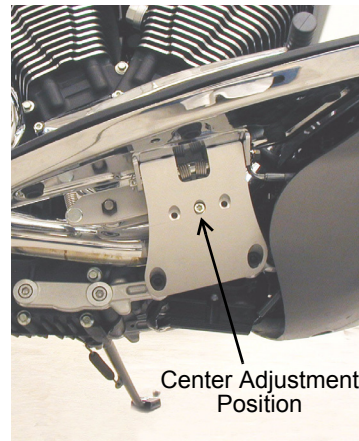


Instruments/Features/Controls

Windshield Adjustment

Use the motorized windshield adjustment switch (if equipped) to adjust the windshield. See page 67. If the motorcycle is not equipped with this feature, you can manually adjust the windshield.

1. Park the motorcycle on a firm, level surface. Turn the key to the OFF position.
2. Remove the windshield trim panel. See page 205.
3. Remove the retaining clip.
4. Hold slight downward pressure on the bottom of the windshield (it is under slight upward spring pressure). Remove the clevis pin.
5. Slide the windshield inner bracket to align with one of the optional holes in the outer bracket. Reinstall the clevis pin. Reinstall the retaining clip in the clevis pin.
6. Reinstall the windshield trim panel.

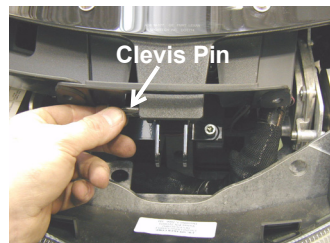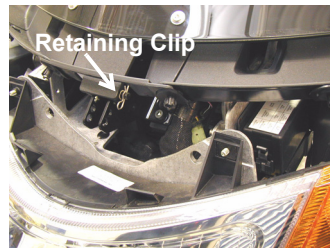

Instruments/Features/Controls Glove Compartment

Before opening the glove compartment, turn the handlebars slightly to the right.

1. Press and release the inner edge of the compartment door. The door will open under light spring tension.
2. To close the glove compartment door, press the inner edge of the door downward firmly to secure the latch.
3. To lock the glove compartment door, turn the ignition key to the LOCK position.

Tip: The fuel door and glove compartment are locked when the steering is locked.



Instruments/Features/Controls


Sidestand

The sidestand is located on the left side of the motorcycle.

WARNING! An improperly retracted sidestand could contact the ground and cause a loss of control resulting in serious injury or death. Always retract the sidestand fully before operating the motorcycle.

To park the motorcycle, swing the end of the sidestand downward and away from the motorcycle until it is fully extended. Lean the motorcycle to the left until the sidestand firmly supports the motorcycle.

To retract the sidestand, straddle the motorcycle and bring it to the fully upright position. Swing the end of the sidestand upward and toward the motorcycle until it is fully retracted.

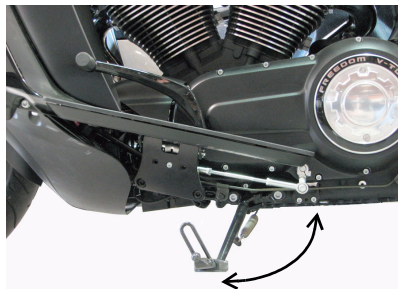

Instruments/Features/Controls



Saddlebag and Trunk Door Locks

Use the ignition key to lock and unlock the trunk and saddlebag doors. The doors should be locked before riding.

To lock a door, place the key in the lock and turn it counter-clockwise. To unlock a door, turn the key clockwise.

After unlocking a door, press the door lock to release the latch and open the door.

Refer to the Gross Vehicle Weight Rating information beginning on page 32 for loading information.

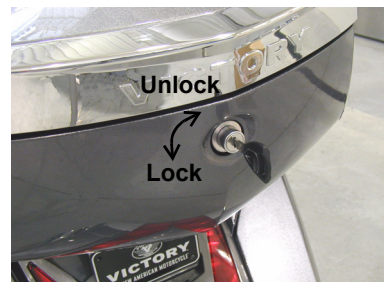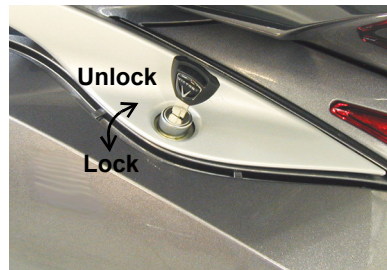

Instruments/Features/Controls

Radio/Audio Systems

Refer to the Audio System section of this manual (beginning on page 263) for radio and accessory audio systems operation.




Instruments/Features/Controls

Tool Kit

The tool kit can be used to perform most basic maintenance items. Tools provided in the tool kit include:

1. 4 mm Ball Drive Allen Wrench
2. 4 mm / 6 mm Open End Wrench
3. 6 mm Ball Drive Allen Wrench
4. 8 mm / 10 mm Open End Wrench
5. Combination Phillips / Slot Screw Driver
6. Rear Shock Absorber / Tire Pressure Gauge
7. Fuse Puller

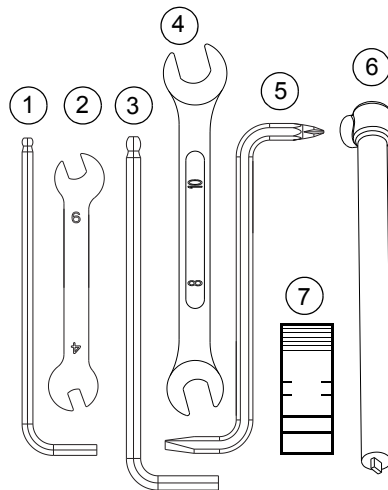

Pre-Ride Inspections

To keep your motorcycle in safe operating condition, always perform the recommended pre-ride inspections before each ride. This is especially important before making a long trip and when removing the motorcycle from storage.

WARNING! Failure to perform the recommended pre-ride inspections could result in component failure while riding, which could result in serious injury or death. Always perform the pre-ride inspections before each ride. When inspection reveals the need for adjustment, replacement or repair, perform the service promptly.

You must be familiar with all instruments and controls to perform the pre-ride inspections.

Tip: During the pre-ride inspections you may use products that are potentially hazardous, such as oil or brake fluid. When using any of these products, always follow the instructions and warnings on the product packaging.

When inspections reveal the need for adjustment, replacement or repair:

- refer to the maintenance section of this manual
- refer to the service manual
- or see your authorized VICTORY dealer

Pre-Ride Inspections

Turn the ignition key to the ON position and move the stop/run switch to RUN before performing the following electrical inspections. Return the ignition key to the OFF position after completing these inspections. If inspection of any electrical item reveals component failure, repair or replace the component before operating the motorcycle.

Item	Inspection Procedure
Electrical	
Headlamp	Tap the starter switch to verify that the headlamp illuminates. Switch to high beam. Verify that the high beam indicator comes on and that lamp brightness increases.
Taillight/Brakelight	Verify that the taillight and license plate light illuminate. If a turn signal is activated, only the two lower lamps will illuminate. Verify that the taillight lamps increase in brightness when the front brake lever is applied and also when the rear brake pedal is applied.
Turn Signals	Move the turn signal switch to the left. Verify that front and rear left turn signals flash, as well as the corresponding light on the indicator panel. Push the switch inward to cancel the signal. Verify that the signals and the indicator light stop flashing. Repeat the procedure for the right turn signals.

Pre-Ride Inspections

Item	Inspection Procedure
Electrical	
Emergency Flashers	Press the top of the hazard switch to turn the flashers on. Verify that all four turn signals flash, as well as the lamps on the indicator panel. Turn the flashers off. Verify that all signals and indicator lamps stop flashing.
Horn	Press the horn button. Verify that the horn sounds loudly.
Neutral Indicator	Place the transmission in neutral. Verify that the neutral indicator lamp illuminates and that the letter "N" displays in the gear position display.
Low Oil Pressure Indicator	Verify that the low oil pressure lamp illuminates. Start the engine and verify that the low oil pressure lamp goes off.
Engine Stop/Run Switch	Start the engine. Move the stop/run switch to the STOP position. Verify that the engine stops. Attempt to restart the engine to verify that the engine WILL NOT start.

Pre-Ride Inspections

Item	Inspection Procedure	See Page
General		
Engine Oil Level	Check the oil level on the dipstick.	92
Fuel Level	View the fuel gauge.	94
Tires	Inspect condition, pressure and tread depth.	95
Brake Operation	Inspect pedal and lever movement.	96, 98
Brake Fluid Levels	Check front and rear brake fluid levels.	97, 99
Brake Components	Inspect hoses, connections, brake pads.	100, 101
Throttle	Inspect hand grip and throttle freeplay.	102

Pre-Ride Inspections

Item	Inspection Procedure	See Page
General		
Clutch (Hydraulic)	Check fluid level and lever operation.	103
Clutch (Mechanical)	Check lever operation and freeplay.	104
Front Suspension	Check for leaks, debris and damage.	105
Steering	Check for smooth operation.	105
Rear Suspension	Check shock movement and air pressure, verify ground clearance.	105
Drive Belt	Check for wear, damage, proper deflection.	106
Sidestand	Verify smooth operation, inspect pivot bolt, spring and pad.	107
Fasteners	Inspect for loose, damaged or missing fasteners.	108
Mirrors	Adjust for proper rear view.	64


Pre-Ride Inspections

Engine Oil Level

The oil fill cap/dipstick is located on the right side of the vehicle. Always use the recommended oil. See page 262.

Tip: The engine must be at normal operating temperature when checking the oil level.

1. Place the transmission in neutral.
2. Start the engine and allow it to idle for several minutes.
3. Stop the engine and wait 3-5 minutes before checking the oil level.
4. On level ground, straddle the motorcycle and bring it to the fully upright position.

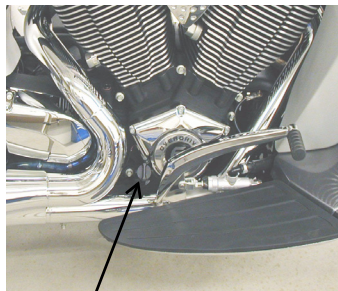


Oil Fill Cap/Dipstick

Pre-Ride Inspections

Engine Oil Level

5. Remove the oil fill cap/dipstick and wipe it clean. Reinstall the dipstick and turn the cap clockwise until it seats.
6. Remove the dipstick and view the oil level.
7. Add or remove oil as needed to bring the level into the safe operating range (between the FULL and ADD marks) on the dipstick.

 WARNING! Operating the engine with too much or too little oil can cause serious engine damage or engine seizure, which could result in loss of control and serious injury or death. Do not operate the motorcycle with the oil level above the FULL mark or below the ADD mark.




Pre-Ride

Pre-Ride Inspections

Fuel Level

1. On level ground, straddle the motorcycle and bring it to the fully upright position.
2. Turn the ignition switch to the ON or ACC position. Observe the fuel level in the fuel gauge.
3. Refuel as needed. See page 262 for fuel specifications.

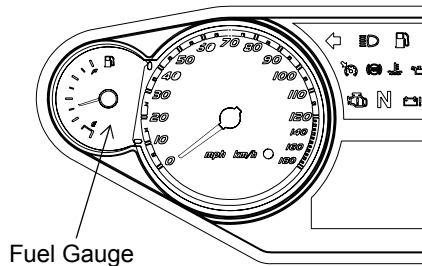

Pre-Ride Inspections

Tires

Tire Pressure

Check tire pressure before riding, when the tires are cold. This will provide the most accurate reading, as riding warms the tires and increases tire air pressure.

Adjust tire pressure as needed based on the total weight of your intended load. See page 191.

Tire Condition

Inspect the tire sidewalls, road contact surface and tread base. If inspection reveals cuts, punctures, cracks or other wear or damage, replace the tire before riding.


Tire Tread Depth

Measure the tread depth near the center of the tread on both tires. See page 190. Replace any tire with a tread depth of less than 1/16" (1.7 mm).

Pre-Ride Inspections

Front Brake Lever

1. Pull the front brake lever toward the handlebar and hold it. The lever should move freely and smoothly. It should not move more than 3/4 inch (19 mm) before resistance is firm. It should continue to feel firm, without loss of pressure, until the lever is released.
2. Release the lever. It should return to its rest position quickly when released.
3. If the front brake lever fails to perform as stated, service the brake lever before riding.
4. See page 77 for front brake lever reach adjustments.

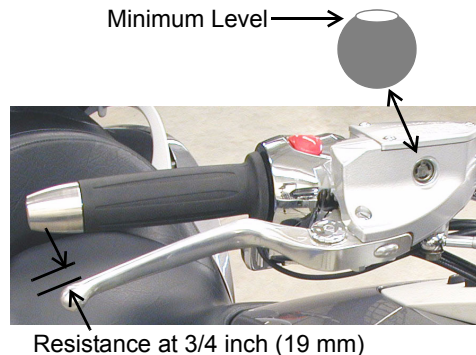

Pre-Ride Inspections

Front Brake Fluid Level

1. Straddle the motorcycle and bring it to the fully upright position. Position the handlebars so that the fluid reservoir is level.
2. View the fluid level through the sight glass. The fluid should be clear. Replace cloudy or contaminated fluid.
3. The fluid level should be at or above the top of the sight glass. Add brake fluid if necessary. See page 184.

Pre-Ride Inspections

Rear Brake Pedal

1. Press downward on the rear brake pedal. It should move freely and smoothly. It should not move more than $\frac{3}{8}$ inch (8 mm) before resistance is firm. It should continue to feel firm, without loss of pressure, until the pedal is released.
2. Release the pedal. It should return to its rest position quickly when released.
3. If the rear brake pedal fails to perform as stated or travels too far before beginning to engage the brake, service the brakes before riding.
4. See page 80 for rear brake pedal adjustments.




Rear Brake Fluid Level

The rear brake fluid reservoir is located near the rear brake pedal, just inside the right lower leg fairing. View the reservoir from the front right side of the vehicle.

1. Position the motorcycle on level ground in the fully upright position.
2. View the brake fluid through the reservoir.
3. The fluid should be clear. Replace cloudy or contaminated fluid.
4. The fluid level should be between the minimum and maximum marks on the reservoir. Add brake fluid as needed. See page 183.

Pre-Ride Inspections

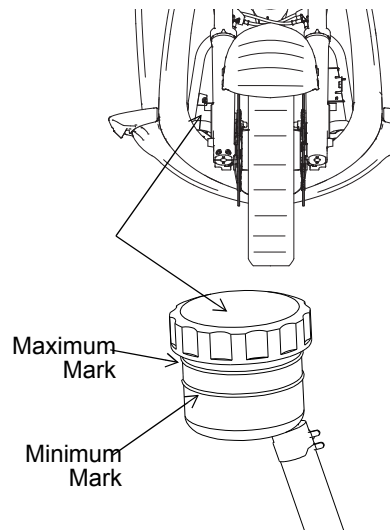

Pre-Ride

Pre-Ride Inspections

Brake Lines

Inspect all brake hoses and connections for dampness or stains from leaking or dried fluid. Tighten any leaking connections and replace components as necessary.

Tip: Refer to the service manual or contact your dealer for fastener torque values.

WARNING! Brake fluid leaks or low brake fluid levels could cause brake system failure, which could result in serious injury or death. Do not operate the vehicle with low brake fluid levels or when leaks are evident (dampness or stains from dried fluid). See your VICTORY dealer for service.

Brake Pads



Inspect each front brake pad on both sides of the front disc. Inspect each rear brake pad on both sides of the rear disc. When the thinnest point of the friction material has worn to the minimum recommended thickness, see your VICTORY dealer for brake pad replacement.

- Replace brake pads when friction material thickness reaches 1.0 mm.

When checking brake pad friction material thickness, check each brake caliper for dampness or stains from leaking or dried brake fluid. If inspection reveals signs of fluid leakage, do not operate the vehicle. See your VICTORY dealer for service.

See page 186 for brake disc inspection.

Pre-Ride Inspections

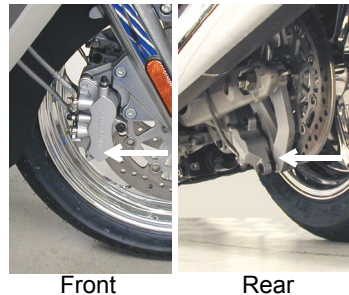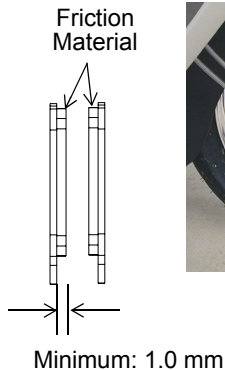

Pre-Ride Inspections


Throttle

Rotate the throttle control grip. It should rotate smoothly from the rest position to the completely open position. It should return to the rest position quickly when released.

Throttle Freeplay

Throttle freeplay is the amount of throttle control grip movement from the rest position to the point of cable resistance. Measure this distance.


Freeplay should be 2-4 mm. Adjust throttle freeplay as needed. See page 172.

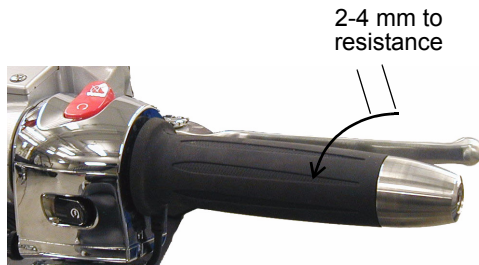

Hydraulic Clutch

1. Position the motorcycle on level ground in the fully upright position. Position the handlebars so that the clutch fluid reservoir is level.
2. View the fluid level through the sight glass. The fluid should be clear. Replace cloudy or contaminated fluid.
3. The fluid level should be at or above the top of the sight glass. Add DOT 4 brake fluid as needed. See page 176.
4. Squeeze and release the clutch lever. It should move freely and smoothly, and it should return to the rest position quickly when released. If the lever fails to perform as stated, service the lever before riding.
5. Check for any signs of clutch fluid leaks around the hoses, fittings, fluid reservoir and slave cylinder located at the rear of the left engine (primary) cover.

Pre-Ride Inspections

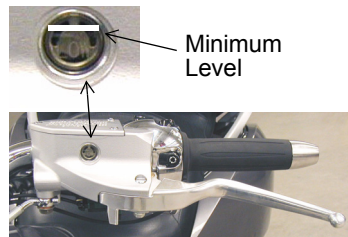

Slave Cylinder




Pre-Ride Inspections

Mechanical Clutch

1. Squeeze the clutch lever toward the handlebar and release it. It should move freely and smoothly, and it should return to the rest position quickly when released. If the lever fails to perform as stated, service the clutch lever before riding.
2. Freeplay (gap) is the amount of lever movement from the rest position to the point of cable resistance. Clutch lever freeplay should be 0.5-1.5 mm. Measure the gap between the clutch lever and the lever housing. Adjust clutch lever freeplay if necessary. See page 178.

Tip: The starter interlock switch is dependent on the clutch lever freeplay being set correctly to ensure activation of the clutch safety switch.

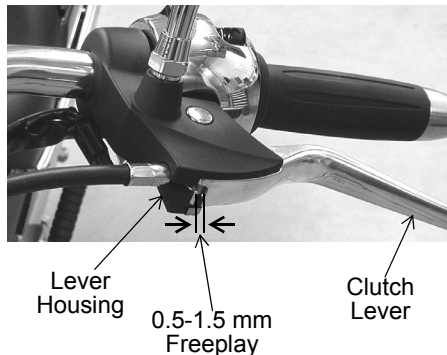

Pre-Ride Inspections

Front Suspension

Inspect the front forks for oil leaks or damage, and verify smooth suspension operation. See page 167.

Steering

1. On level ground, straddle the motorcycle and bring it to the fully upright position. Turn the handlebars from stop to stop. The action should be smooth, but not loose.
2. Make sure wires, hoses and control cables do not interfere with smooth steering.

Rear Suspension

1. Check rear shock absorber movement and air pressure to ensure the correct amount of suspension travel and ground clearance.
2. For air pressure adjustment information, see page 160 or refer to the suspension air pressure label located in the left saddlebag near the air fitting.

WARNING! Inadequate ground clearance could result in components contacting the ground, causing loss of control and serious injury or death. Always ensure ground clearance is at specification.


Pre-Ride Inspections

Drive Belt

1. Check drive belt tension. See page 153. The drive belt should fit tightly.

Tip: The drive belt system must be cool, clean and dry to accurately measure belt tension (deflection). Do not measure belt tension when the belt or drive system is wet, or when it is hot (such as immediately after riding).


2. Check the drive belt teeth for stones or other debris.
3. Inspect drive belt condition. If you discover cracks, broken teeth or frayed edges, replace the drive belt before riding. See the *VICTORY Service Manual* or an authorized VICTORY dealer.

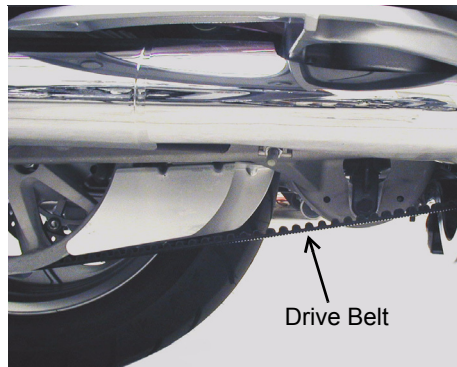

Pre-Ride Inspections

Sidestand

1. On level ground, straddle the motorcycle and bring it to the fully upright position.
2. Move the sidestand up to the stored position and down to the fully extended position several times. It should move smoothly and quietly. Make sure the return spring holds the sidestand tightly in place when the sidestand is in the stored position. Adjust or replace a loose spring.
3. Inspect the sidestand pivot bolt for looseness or wear. Tighten or replace a loose or worn bolt.
4. Inspect the sidestand rubber pad. Make sure the pad is firmly attached to the sidestand. Check the wear indicator on the leading edge of the pad. Replace the pad when it's worn beyond the wear limit line.

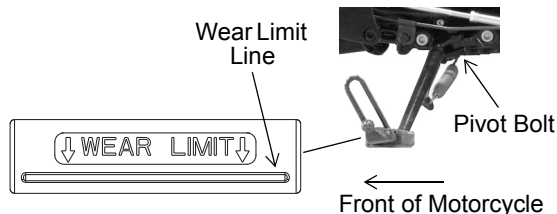

Pre-Ride Inspections

Fasteners

1. Inspect the entire motorcycle chassis and engine for loose, damaged or missing fasteners. Tighten loose fasteners to the proper torque.

Tip: Refer to the specifications section of this manual or the service manual for fastener torque values, or see your VICTORY dealer.

2. Always replace stripped, damaged or broken fasteners before riding. Use genuine VICTORY fasteners of equal size and strength.

Operation

The operation section of this manual describes how to ensure maximum performance and longevity through the proper care and operation of your motorcycle.

Tip: Even if you're an experienced motorcycle operator or passenger, read all of the safety information in this manual before operating the motorcycle. See page 7.

Important areas covered by the operation section include:

- Engine Break-In
- Fueling
- Starting the Engine
- Shifting Gears
- Accelerating
- Using Cruise Control
- Braking
- Stopping the Engine
- Parking

Operation Engine Break-In

The engine break-in period for your motorcycle is the first 500 miles (800 km) of operation. During this break-in period, critical engine parts require special wear-in procedures so they seat and mate properly. Read, understand and follow all break-in procedures to ensure the long-term performance and durability of your engine.

NOTICE: Failure to properly follow the engine break-in procedures outlined in this manual can result in serious damage to the engine. Follow all break-in procedures carefully. Avoid full throttle operation and other conditions that may place an excessive load on the engine during the break-in period.

Operation

Engine Break-In

Odometer		Break-in Procedure
Miles	Km	
0-90	0-145	Do not operate for extended periods above 1/3 throttle or at any one throttle position. Vary engine speed frequently.
91-300	146-483	Do not operate for extended periods above 1/2 throttle or at any one throttle position. Vary engine speed frequently.
301-500	484-800	Do not operate for extended periods above 3/4 throttle.
At 500	At 800	Perform the break-in maintenance outlined in the maintenance section of this manual. Break-in maintenance should be performed by an authorized VICTORY dealer. Break-in maintenance must include inspection, adjustments, fastener tightening and an engine oil and filter change. Performing break-in maintenance at the required odometer reading helps ensure peak engine performance, minimal exhaust emissions and maximum service life of the engine.

Operation Fueling

Always refuel on level ground with the sidestand down. Review the fuel warnings. See page 28. Use only the recommended fuel. See page 262. Hold the nozzle while filling. Do not rest the weight of the nozzle and hose on the filler neck. Do not leave the nozzle unattended.

WARNING! Overflows or spilled gasoline could contact a hot engine or exhaust system and cause a fire, which could result in serious injury or death. Do not allow gasoline to contact hot components.

1. Insert the fuel nozzle 2-3 inches (5-7 cm) into the fuel tank filler neck.
2. Fill the last 1/4 tank slowly to allow the left fuel tank to fill completely. Fill the fuel tank to a level just below the bottom of the fuel filler insert.

WARNING! Fuel expands in the fuel tank. Do not overfill. To prevent leaks, make sure the fuel filler cap is properly seated.

NOTICE: Fuel can damage painted surfaces and plastic parts. If gasoline spills on the any part of the motorcycle, immediately rinse it off with water or wipe it dry with a clean cloth.

Operation

Priming the Fuel System

If the motorcycle runs out of fuel, prime the fuel system before attempting to restart the engine.

1. Fill the fuel tank.
2. Turn the ignition key to the ON position.
3. Move the engine stop/run switch from the STOP position to the RUN position.
4. Allow the fuel pump to run until it stops (about 3 seconds).
5. Move the engine stop/run switch to the STOP position and wait 10 seconds.
6. Repeat steps 3-5 four to five times.
7. Turn the key to the OFF position.
8. Start the engine. See page 114.

Operation

Starting the Engine

The starter interlock system allows the engine to be started only when the transmission is in neutral, or when the transmission is in gear with the clutch disengaged (clutch lever pulled in).

Tip: If the motorcycle runs out of fuel, prime the system before attempting to restart the engine. See page 113.

1. Perform the Pre-Ride Inspections. See page 87. Properly secure any cargo.
2. Straddle the motorcycle and bring it to the fully upright position.
3. Retract the sidestand.
4. Insert the key into the ignition switch. Turn the key to the ON position.
5. Move the engine stop/run switch to the RUN position. You should hear the fuel pump run momentarily as it pressurizes the fuel system.
6. If the neutral indicator is not illuminated, shift the transmission to neutral.

Operation

Starting the Engine

7. Apply the front brakes.
8. Leaving the throttle closed, press and hold the starter switch to start the engine. Release the switch promptly when the engine starts. If the engine does not start within 10 seconds, release the starter switch. Wait five seconds, then try again.

Tip: Hold the starter switch for as short a time as possible to minimize battery drain. Do not hold the starter switch for more than 10 seconds at one time.

9. If either the check engine indicator or the low oil pressure indicator does not go out after the engine starts, stop the engine *immediately*. Refer to either the check engine indicator information on page 53 or the low oil pressure indicator information on page 54.
10. Leave the throttle closed and allow the engine to idle. Idle speed will gradually slow to normal as the engine warms to operating temperature.


Tip: Do not rev the engine or put the transmission in gear immediately after starting the engine. Allow the engine to idle for about 30 seconds after a warm start or at least one minute after a cold start (longer in cold weather). This will allow oil to reach all areas before the engine is put under load.

Operation Shifting Gears

WARNING! Forced shifting (with clutch engaged) could cause damage to the engine, transmission and drive train. Such damage could cause loss of control, which could result in serious injury or death. Always pull the clutch lever fully toward the handlebars to disengage the clutch before shifting gears.

This motorcycle is equipped with a six-speed transmission. The sixth gear is overdrive. Neutral is located between first and second gear.

Tip: The transmission is in neutral if you can move the motorcycle forward or rearward freely without disengaging the clutch. If the ignition switch is in the ON position, the neutral indicator illuminates when the transmission is in neutral.

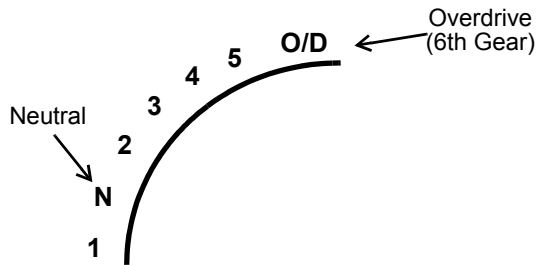

Operation

Shifting Gears

1. Start the engine. See page 114.
2. With the engine at idle speed, apply the front brakes.
3. Disengage the clutch (pull the clutch lever fully toward the handlebar).
4. Push the shift pedal downward until you feel it stop in first gear.

Tip: Shift to a higher gear by lifting the front of the gear shift pedal with your toe. Shift to a lower gear by pressing the pedal downward.

5. Release the brake lever.
6. Simultaneously release the clutch lever while opening the throttle (rolling the throttle control grip rearward) in one smooth motion. As the clutch begins to engage, the motorcycle will move forward.
7. To shift to a higher gear, accelerate smoothly to the recommended shift point. See page 119. With a quick motion, simultaneously close the throttle completely and disengage the clutch. Raise the shift pedal until you feel it stop at the next gear. Simultaneously release the clutch lever and open the throttle in one smooth motion.

Operation

Shifting Gears

Tip: Within the recommended speed ranges (see page 119), you can downshift to slow the motorcycle or to increase power. You may want to downshift when climbing a hill or passing. Downshifting also helps to decrease speed when combined with closing the throttle.

8. To shift to a lower gear (downshift), simultaneously pull the clutch lever toward the handlebar and close the throttle. Move the shift pedal downward until you feel it stop at the next gear. Simultaneously release the clutch lever while opening the throttle.

WARNING! Downshifting improperly could cause transmission damage, loss of traction and loss of control, which could result in serious injury or death.

- Reduce speed before downshifting. Always downshift within the recommended shift points.
- Use extreme caution when downshifting on wet, slippery or other low traction surfaces. Release the clutch lever very gradually in these conditions.
- Avoid downshifting in a curve. Downshift before entering the curve.

Operation

Shifting Gears Recommended Shift Points

Upshifting (Accelerating)		Downshifting (Decelerating)	
Gear Change	Recommended Speed	Gear Change	Recommended Speed
1 to 2	18 MPH (29 km/h)	O/D to 5	50 MPH (80 km/h)
2 to 3	30 MPH (48 km/h)	5 to 4	35 MPH (56 km/h)
3 to 4	40 MPH (64 km/h)	4 to 3	25 MPH (40 km/h)
4 to 5	50 MPH (80 km/h)	3 to 2	15 MPH (24 km/h)
5 to O/D	60 MPH (96 km/h)	2 to 1	10 MPH (16 km/h)

Operation Accelerating

Accelerate by opening the throttle (rolling the throttle control grip rearward). For even acceleration, open the throttle with a smooth, continuous motion. When you reach the recommended speed for upshifting, shift up one gear.

WARNING! Accelerating abruptly could cause your body to shift rearward suddenly, which could result in loss of control. Accelerating abruptly could also cause loss of control on low traction surfaces. Loss of control could result in serious injury or death. Always accelerate gradually, especially on wet, slippery or other low traction surfaces.

Operation

Operation

Braking

Always allow sufficient stopping distance so that brakes can be applied gradually.

Tip: Applying slightly more front brake than rear brake generally provides the best braking performance.

1. To slow the motorcycle with the brakes, close the throttle and apply the front and rear brakes evenly and gradually.

Tip: If the anti-lock brake system activates while braking (if equipped) you'll feel pulsing at the foot brake or hand brake. Continue applying equal pressure to the brakes to slow or stop the motorcycle. See page 74.

2. As the motorcycle slows, disengage the clutch, or downshift each time vehicle speed reaches a downshift point.

WARNING! Braking improperly could result in loss of control, which could result in serious injury or death. Avoid braking abruptly. Always apply the brakes gradually, especially on wet, slippery or other low traction surfaces. Avoid braking in a curve or turn. Bring the motorcycle to the upright position before applying the brakes.

Operation Using Cruise Control

If equipped, the cruise control is located on the right handlebar. Make sure you read this section and understand how to safely operate this feature.

WARNING! Improper operation of cruise control could cause loss of control and result in serious injury or death. Follow all cruise operation procedures carefully. Never use cruise control when roads are wet or slippery. Do not use cruise control when riding in heavy or congested traffic.

Operation

Operation


Using Cruise Control

Set Speed

1. Move the cruise control power switch to ON.
2. Accelerate to the desired speed and press the SET switch. The cruise control indicator lamp will illuminate.

Tip:

- Cruise control can be set in any gear.
- The cruise control can be activated between speeds of 25-95 MPH (40-153 km/h).
- Set speed will vary slightly in hilly terrain.
- The cruise control will not resume a pre-set speed if the resulting acceleration or deceleration rate is too high or too low. For example, if you are in 6th gear and try to resume a set speed from 40 MPH (64 km/h), the cruise may disengage.
- Cruise control will not engage if brake lights are not operating properly.

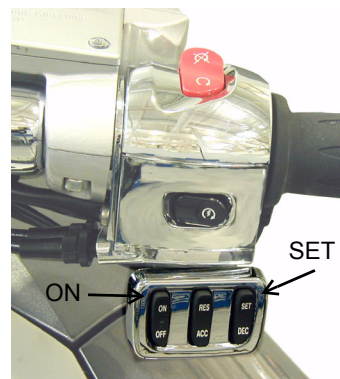

Operation

Operation Using Cruise Control

Resume Speed


After disengaging the cruise control with the brake, throttle or clutch, press the resume button (RES) to return to the set speed.

Tip: Turning the cruise control master switch off will erase the set speed from memory and disengage the cruise control.

Accelerate

Tap and release the accelerate (ACC) button to increase speed in approximately 1 MPH (1-2 km/h) increments. Press and hold the ACC button to accelerate to a new SET speed (resets when button is released), or to a maximum increase of approximately 10 MPH (16 km/h), whichever comes first.

Tip: If you use the throttle to accelerate and then release it, the cruise control will resume the previously set speed.

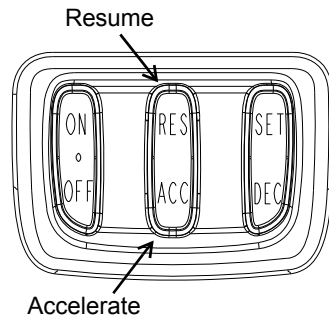

Operation

Using Cruise Control

Decelerate


Tap and release the decelerate (DEC) button to decrease speed in approximately 1 MPH (1-2 km/h) increments. Press and hold the DEC button to decelerate to a new SET speed (resets when button is released), or to the minimum cruise speed of 25 MPH (40 km/h).

Cancel Cruise Control

To temporarily cancel the cruise control and allow use of the resume feature:

- apply the brakes
- close the throttle
- disengage the clutch

To cancel the cruise control and erase the set speed from memory, press OFF.

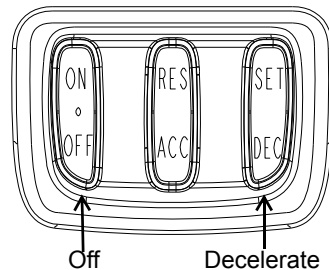

Operation

Operation

Stopping the Engine

Before stopping the engine, bring the motorcycle to a complete stop. Shift to neutral or disengage the clutch.

WARNING! Stopping the engine with the transmission in gear while the motorcycle is moving could cause loss of rear wheel traction or engine and transmission damage, which could cause loss of control and serious injury or death. Always stop the engine after the motorcycle is fully stopped and the transmission is in neutral. If the engine stops unexpectedly while the motorcycle is moving, guide the motorcycle to a safe location off the road and away from traffic.

1. When fully stopped, shift into neutral.
2. Move the engine stop/run switch to the STOP position.
3. Move the ignition switch to the OFF position. Remove the ignition key.

Tip: A momentary clicking sound from the IAC valve is normal when the key is first turned to the OFF position.

Operation

Parking

Choose a firm level surface to park the motorcycle.

1. When fully stopped, shift into neutral.
2. Stop the engine.
3. Fully extend the sidestand.
4. Turn the handlebars to the left and lean the motorcycle to the left until the sidestand firmly supports the motorcycle.
5. Remove the ignition key.

Parking on a Slope

If parking on a slope is unavoidable, position the front of the motorcycle toward the top of the slope. Place the transmission in gear and position the motorcycle so that it is stable when it rests on the sidestand.

Operation

Parking on a Soft Surface

If parking on a soft surface is unavoidable, place a sidestand footrest under the foot of the sidestand to provide a firm surface. The sidestand footrest must be strong enough and large enough to support the motorcycle's weight without sinking into the parking surface.

Asphalt becomes soft in hot weather. A sidestand can sink into soft asphalt and the motorcycle may fall. When parking on asphalt in hot weather, use a sidestand footrest.

CAUTION! Hot engine and exhaust components can cause burns to skin and can ignite a fire if exposed to flammable materials. Always park the motorcycle clear of flammable materials and where people are not likely to contact hot components.

Operation

Reverse Operation (if equipped)

NOTICE: Do not attempt to engage or disengage the reverse system when the motorcycle is moving.

Before Operating in Reverse:

- always sit on the motorcycle with legs astride and both feet on the ground.
- always check for obstacles or people behind the motorcycle.
- always retract the sidestand fully.
- always make sure the motorcycle is completely stopped.

NEVER Operate in Reverse:

- when not properly seated.
- when in an area where obstacles or bystanders are present.
- with a passenger on board. A passenger can obstruct your view and maneuverability.
- when on loose or slippery surfaces. Loss of foot traction could cause a tip-over.
- while the motorcycle is moving forward.
- when on a grade or uneven surfaces.

Operation

Reverse Operation (if equipped)

1. Always check for obstacles or people behind the motorcycle. Be aware that the front wheel may travel outward and require a larger operating area.
2. Make sure the motorcycle is stationary.
3. Dismount any passenger.
4. Straddle the motorcycle and bring it to the fully upright position. Sit in a normal riding position with legs astride and both feet on the ground.
5. Retract the sidestand.
6. Place the transmission in neutral.
7. Start the engine and allow it to idle.

Operation

Reverse Operation (if equipped)

8. Lift the reverse lever and verify that the reverse indicator (R) displays in the multi-function display.
9. Recheck the area behind and around the motorcycle to ensure a clear operating area.
10. While balancing the motorcycle with your legs and feet, press and hold the starter switch to begin moving in reverse. Release the switch to stop moving.
11. When completely stopped, move the reverse lever down to the disengaged position. Verify that the neutral indicator (N) displays before stopping the engine.

Tip: The engine will stop if you shift into forward gear before disengaging the reverse lever.

Maintenance

Safety During Service Procedures

⚠ WARNING

Failure to follow recommended precautions and procedures could result in severe injury or death. Always heed all safety precautions and follow all operation, inspection and maintenance procedures outlined in this manual.

- Improperly installed or adjusted components can make the motorcycle unstable or hard to handle. Improperly installed electrical components can cause engine or electrical system failure. In either event, damage or serious injury could result. If you do not have the time, tools and expertise necessary to complete a procedure properly, please see your dealer for service.
- Review the safety-related maintenance information on page 30.
- Before beginning any maintenance procedure, read the instructions for the entire procedure.
- Always position the motorcycle on a firm level surface before performing service. Make sure the motorcycle will not tip or fall while elevated or while on the sidestand.

Maintenance

Safety During Service Procedures

- Hot engine and exhaust components can cause burns to skin and can ignite a fire if exposed to flammable materials. Always park the motorcycle clear of flammable materials and where people are not likely to contact hot components.
- Wear eye and face protection when using pressurized air.
- Never start the engine or let it run in an enclosed area. Engine exhaust fumes are poisonous and can cause loss of consciousness or death in a short time.
- During some procedures you may use potentially hazardous products such as oil or brake fluid. Always follow the instructions and warnings on the product packaging.

Maintenance

Proper maintenance assures the highest level of safety, durability and dependability for your motorcycle.

- Have your VICTORY dealer perform the break-in maintenance procedures when the motorcycle's odometer registers 500 miles (800 km).
- Perform the recommended periodic maintenance at the intervals specified in the periodic maintenance table beginning on page 137.

Road Tests

Before returning the motorcycle to regular use after performing service, road test it in a safe environment. Pay special attention to the proper fit and operation of all serviced components. Make any corrections or additional adjustments necessary to ensure safe vehicle performance.

Maintenance

Break-In Maintenance

Have your VICTORY dealer perform the break-in maintenance procedures when the motorcycle's odometer registers 500 miles (800 km). Performing the break-in maintenance will help ensure optimum engine performance for the entire service life of the engine. Your dealer will change engine oil, inspect all fluids and serviceable components, ensure that all fasteners are tightened and make other adjustments as needed.

Major Maintenance

For major repair information, refer to the *VICTORY Service Manual*. Major repairs typically require technical skills and specially designed tools. Emission system service requires special tools and training and should be performed by your dealer.

Maintenance

Periodic Maintenance

Inspect, clean, lubricate, adjust and replace parts as necessary. When inspection reveals the need for replacement parts, use genuine VICTORY parts available from your VICTORY dealer. Record service and maintenance information in the Maintenance Log beginning on page 142.

Perform maintenance at the intervals specified in the periodic maintenance table beginning on page 137. Perform the procedures more frequently if normal use of the motorcycle includes:

- high speed operation for extended periods
- low speed operation for extended periods
- operation in dusty or otherwise adverse conditions

Maintenance

Periodic Maintenance Table

Component	Page	Odometer Reading in Miles (Kilometers)																				
		500 (800)	2500 (4000)	5000 (8000)	7500 (12000)	10000 (16000)	12500 (20000)	15000 (24000)	17500 (28000)	20000 (32000)	22500 (36000)	25000 (40000)	27500 (44000)	30000 (48000)	32500 (52000)	35000 (56000)	37500 (60000)	40000 (64000)	42500 (68000)	45000 (72000)	47500 (76000)	50000 (80000)
Air Filter	149	I	I	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R	I	I	I	R
Battery	195	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake Fluid	184	I	I	I	I	I	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	I
Brake Pads	101	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Clutch Cable (Mechanical)	180	I	I	I	I	L	I	I	L	I	I	I	L	I	I	I	L	I	I	I	L	I
Clutch Fluid	176	I	I	I	I	I	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	I
Clutch Lever (Hydraulic)	175	L	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I

Maintenance Key: I = Inspect, clean, adjust, correct or replace if necessary; P = Perform; R = Replace / Rebuild
L = Lubricate w/ proper lubricant; * = Replace at specified interval or annually; ** = Replace as specified or every 2 years

Maintenance

Periodic Maintenance Table

Component	Page	Odometer Reading in Miles (Kilometers)																				
		500 (800)	2500 (4000)	5000 (8000)	7500 (12000)	10000 (16000)	12500 (20000)	15000 (24000)	17500 (28000)	20000 (32000)	22500 (36000)	25000 (40000)	27500 (44000)	30000 (48000)	32500 (52000)	35000 (56000)	37500 (60000)	40000 (64000)	42500 (68000)	45000 (72000)	47500 (76000)	50000 (80000)
Clutch Lever (Mechanical)	178 179	I		I		L		I		L		I		L		I		L		I		L
Control Cables	174 180	I		I		L		I		L		I		L		I		L		I		L
Crankcase Vent	170	I		I		I		I		I		I		I		I		I		I		I
Drive Belt	150	I	I	I	I	I	I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	I
Drive Belt Adjustment	157	P	Adjust with each tire change thereafter																			
Engine Oil & Filter*	146	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R

Maintenance Key: I = Inspect, clean, adjust, correct or replace if necessary; P = Perform; R = Replace / Rebuild; L = Lubricate w/ proper lubricant; * = Replace at specified interval or annually; ** = Replace as specified or every 2 years

Maintenance

Periodic Maintenance Table

Component	Page	Odometer Reading in Miles (Kilometers)																					
		500 (800)	2500 (4000)	5000 (8000)	7500 (12000)	10000 (16000)	12500 (20000)	15000 (24000)	17500 (28000)	20000 (32000)	22500 (36000)	25000 (40000)	27500 (44000)	30000 (48000)	32500 (52000)	35000 (56000)	37500 (60000)	40000 (64000)	42500 (68000)	45000 (72000)	47500 (76000)	50000 (80000)	
Evaporative Emission Control System (if equipped)	169	I		I		I		I		I		I		I		I		I		I		I	
Exhaust System	194	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Fasteners	201	I		I		I		I		I		I		I		I		I		I		I	
Front Brake Lever	181	L	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L	I	L
Front Fork Oil**	167	I		I		I		R		I		I		R		I		I		R		I	
Front Fork / Axle	167	I		I		I		I		I		I		I		I		I		I		I	
Maintenance Key: I = Inspect, clean, adjust, correct or replace if necessary; P = Perform; R = Replace / Rebuild; L = Lubricate w/ proper lubricant; * = Replace at specified interval or annually; ** = Replace as specified or every 2 years																							

Maintenance

Periodic Maintenance Table

Component	Page	Odometer Reading in Miles (Kilometers)																				
		500 (800)	2500 (4000)	5000 (8000)	7500 (12000)	10000 (16000)	12500 (20000)	15000 (24000)	17500 (28000)	20000 (32000)	22500 (36000)	25000 (40000)	27500 (44000)	30000 (48000)	32500 (52000)	35000 (56000)	37500 (60000)	40000 (64000)	42500 (68000)	45000 (72000)	47500 (76000)	50000 (80000)
Fuel System	169	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Gear Shift Pedal	188	I		I		L		I		L		I		L		I		L		I		L
Headlamp	212	I				I				I				I				I				I
Ignition Switch & Locks	200			L		L		L		L		L		L		L		L		L		L
Rear Wheel Align	158	I		I		I		I		I		I		I		I		I		I		I
Rear Shock	160	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Rear Brake Pedal	181	I		I		L		I		L		I		L		I		L		I		L
Road Test	218	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P
Maintenance Key: I = Inspect, clean, adjust, correct or replace if necessary; P = Perform; R = Replace / Rebuild; L = Lubricate w/ proper lubricant; * = Replace at specified interval or annually; ** = Replace as specified or every 2 years																						

Maintenance

Periodic Maintenance Table

Component	Page	Odometer Reading in Miles (Kilometers)																				
		500 (800)	2500 (4000)	5000 (8000)	7500 (12000)	10000 (16000)	12500 (20000)	15000 (24000)	17500 (28000)	20000 (32000)	22500 (36000)	25000 (40000)	27500 (44000)	30000 (48000)	32500 (52000)	35000 (56000)	37500 (60000)	40000 (64000)	42500 (68000)	45000 (72000)	47500 (76000)	50000 (80000)
Sidestand	201	I		I		L		I		L		I		L		I		L		I		L
Sidestand Pad	107	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Spark Plugs	192	I		I		I		I		I		I		R		I		I		I		I
Steering Head Bearings	168	I	I	I	I	I	I	L	I	I	I	I	I	L	I	I	I	I	I	L	I	I
Swingarm	165	I		I		I		I		I		I		I		I		I		I		I
Throttle Cable	171	I	I	I	I	L	I	I	I	L	I	I	I	L	I	I	I	L	I	I	I	L
Tires	190	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

Maintenance Key: **I** = Inspect, clean, adjust, correct or replace if necessary; **P** = Perform; **R** = Replace / Rebuild; **L** = Lubricate w/ proper lubricant; * = Replace at specified interval or annually; ** = Replace as specified or every 2 years

Maintenance Maintenance Log

Maintenance Performed	Miles / Km	Notes	Performed by

Maintenance

Maintenance

Maintenance Log

Maintenance Performed	Miles / Km	Notes	Performed by

Maintenance

Maintenance Maintenance Log

Maintenance Performed	Miles / Km	Notes	Performed by

Maintenance

Maintenance

Maintenance Log

Maintenance Performed	Miles / Km	Notes	Performed by

Maintenance

Maintenance

Engine Oil / Filter Change

Change the engine oil at the intervals specified in the periodic maintenance table beginning on page 137.

1. Start the engine and allow it to idle for several minutes. Stop the engine.

Tip: The engine must be at normal operating temperature before changing the oil.


CAUTION! Hot engine and exhaust components can cause burns to skin and can ignite a fire if exposed to flammable materials. Always park the motorcycle clear of flammable materials and where people are not likely to contact hot components.

2. Position the motorcycle securely on the sidestand.
3. Place a drain pan under the drain plug and oil filter. Remove the drain plug and seal. Allow the oil to drain completely.

Tool: 6 mm Allen wrench

4. Slowly loosen the oil filter. Allow the oil to drain completely.

Tool: 2 1/2 inch (63.5 mm) oil filter wrench

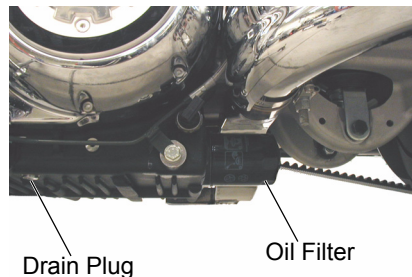

Maintenance

Engine Oil / Filter Change

5. Clean the drain plug sealing surface on the crankcase.
6. Reinstall the drain plug with a new seal. **DO NOT** overtighten.
Torque: 15 ft-lbs (20 Nm)
7. Clean the oil filter mounting threads and gasket sealing surface on the crankcase.
8. Make sure the new oil filter gasket is properly seated in the new oil filter. Apply a thin film of clean engine oil to the gasket. Screw the new filter on until the gasket contacts the sealing surface. Tighten the filter by hand an additional 3/4 turn.
9. Remove the oil fill cap/dipstick. Add approximately 4.5 quarts (4.25 liters) of the recommended oil. Reinstall the oil fill cap.

NOTICE: Do not add chemical additives to the engine oil. Some automotive engine oils contain additives that could damage or reduce the service life of the wet clutch in your motorcycle.


Maintenance

Engine Oil / Filter Change


10. Start the engine and allow it to idle for several minutes. Stop the engine.

NOTICE: After an oil change, the low oil pressure indicator remains illuminated longer than usual before going out. Revving the engine while the low oil pressure indicator is illuminated can damage the engine.

11. Stop the engine. Check for leaks around the drain plug and oil filter.
12. Check the oil level and adjust if needed.
13. Recycle the used oil and filter properly.

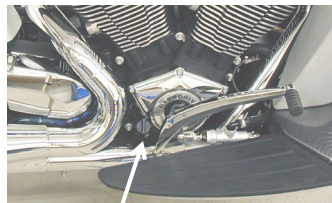

Oil Check/Fill

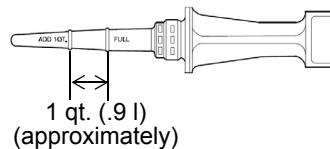

Engine Oil Capacity at Oil Change (including filter)	4.5 qt. (4.25 liter) (approximately)
Engine Oil Capacity at Oil Change (not including filter)	4.0 qt. (3.8 liter) (approximately)


Maintenance

Air Filter

Inspect the air filter often if riding in unusually wet or dusty conditions. Do not apply air filter oil to this air filter.

1. Remove the two air filter retaining screws.
2. Pull the lower edge of the filter toward the front of the motorcycle, then lower it to release the two tabs at the top edge. Remove the filter.
3. Clean the filter sealing surface on the frame.
4. Install the new air filter, engaging the tabs at the top of the filter with the filter case.
5. Reinstall the retaining screws.

Torque: 87 in-lbs (10 Nm)


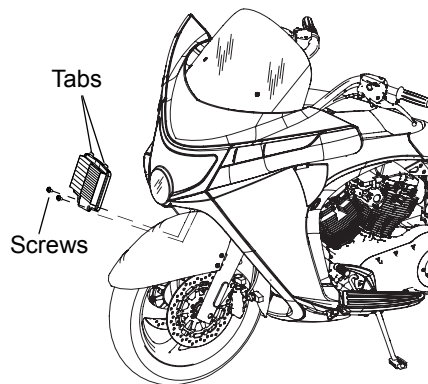


Maintenance

 Drive Belt Condition

 
 
 
 
 
 

 
Replace the drive belt if it is cracked or has broken teeth or frayed edges. No matter its condition, the drive belt should be replaced at periodic intervals. See the *VICTORY Service Manual* or an authorized VICTORY dealer.

DO NOT attempt to check belt tension if the belt has been exposed to rain or washing within a 24 hour period or if the belt is hot from riding. Allow the belt to cool down to ambient temperature before measuring belt tension. Replace the drive belt and both sprockets as a set if the drive belt has over 5,000 miles (8,000 km) of service at the time of damage or failure.

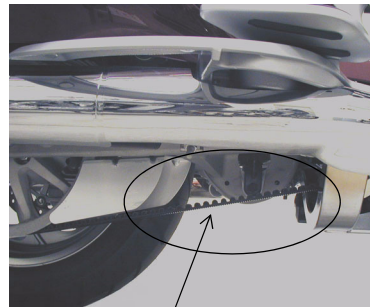

Maintenance

Drive Belt Wear Analysis

			
<p>Internal tooth cracks (hairline): OK to run, but monitor condition</p>	<p>External tooth cracks: Replace belt</p>	<p>Missing teeth: Replace belt</p>	<p>Chipping (not serious): OK to run, but monitor condition</p>
			
<p>Fuzzy edge cord: OK to run, but monitor condition</p>	<p>Hook wear: Replace belt</p>	<p>Stone damage: Replace belt if damage is on edge</p>	<p>Bevel wear (outboard edge only): OK to run, but monitor condition</p>

Maintenance

Maintenance

Drive Belt Tension Data

Specifications are listed below for deflection and sonic tension. Sonic tension measurement requires Gates Sonic Tension Meter 507C or an equivalent.

Drive Belt Deflection (Using PV-43532 Tension Gauge)

Deflection	
VISION 8-BALL	All other VISION
15 mm \pm 0.5 mm	32 mm \pm 0.5 mm

Drive Belt Sonic Tension (Using Sonic Tension Meter)

Required Data		Sonic Tension	
		VISION 8-BALL	All other VISION
Span	708.6	26 Hz \pm 1	20 Hz \pm 1
Belt Width	28 mm		
Belt Mass Constant	8.4		

Maintenance


Drive Belt Tension Inspection

On new drive systems or belt, adjust belt tension after the first 500 miles (800 km). Adjust tension at each tire change thereafter.

Tip: Do not inspect or adjust drive belt tension when the belt is wet. Improper adjustment will result.

Checking drive belt tension involves using the belt tension gauge (P/N PV-43532). You can also use a Sonic Tension Meter if available. Before beginning this procedure:

- Make sure the drive system is clean, *dry*, and at *room temperature* (belt and sprockets).
- Be sure suspension is properly adjusted.
- Belt tension must be adjusted at the tightest spot.

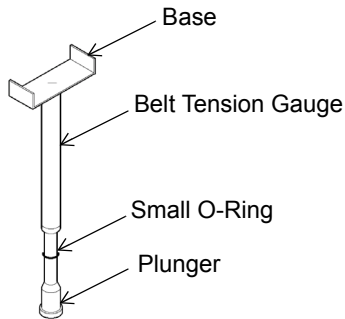


Maintenance

Drive Belt Tension Inspection

1. Elevate and support the motorcycle with the rear tire slightly off the floor.

CAUTION! Make sure the motorcycle is stable when elevated. Injury may occur if the motorcycle tips or falls.


2. Place the transmission in neutral.
3. Rotate the rear wheel in a forward direction until the valve stem is at the bottom. This is your reference point for determining the tight spot to make your adjustment (if necessary).
4. Position the small O-ring on the tension gauge directly over the 10 lbs. mark on the plunger.
5. Place a tape measure or steel rule next to the drive belt, mid-way between the sprockets. Support the rule or tape so it does not move.

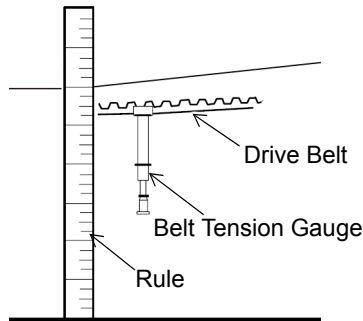

Drive Belt Tension Inspection

6. Note the graduation mark on the rule that aligns with the lower edge of the belt. This position represents *zero force*.
7. Place the support base of the tension gauge squarely against the lower surface of the belt as close as possible to the rule or tape.
8. Keeping the tension gauge perpendicular to the belt surface and parallel with its length, push the plunger upward until the small O-ring touches the tension gauge body.
9. Be sure the tension gauge is seated squarely against the belt, and note the graduation mark on the rule that now aligns with the lower edge of the belt. This position represents *10 lbs. force*.
10. To calculate belt tension (deflection) subtract the smaller measurement from the larger measurement and record it.

Maintenance

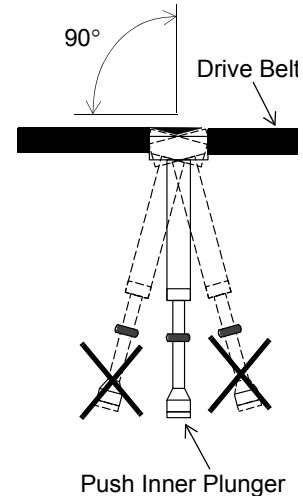


Maintenance

Maintenance

Drive Belt Tension Inspection

Determine The Tightest Spot

11. Repeat the above deflection measurements with the tire's valve stem at the rear most position, top, and front most positions (90 degrees rotation each time), recording each measurement.
12. If the *tightest* measurement is not within the recommended range (see page 152), belt tension must be adjusted.

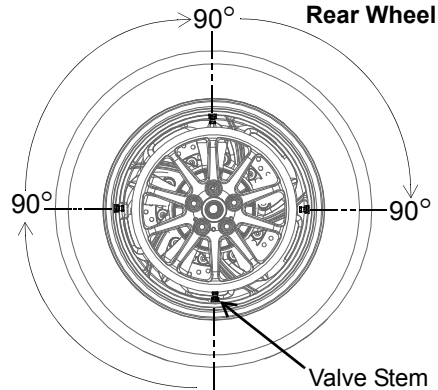


Maintenance

Drive Belt Tension Adjustment

1. Move the wheel to the tight spot location determined previously.
2. Loosen the rear axle nut on the left side.
3. Turn each axle adjuster nut *clockwise* an equal amount to tighten the belt (reduce deflection) or an equal amount *counter-clockwise* to loosen the belt (increase deflection).

Tool: 13 mm deep socket


4. Tighten the rear axle nut.
5. Pump the rear brake pedal to re-set the pads against the brake disc.
6. Verify proper belt tension and wheel alignment.

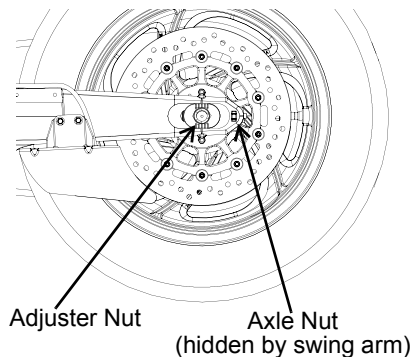

Maintenance

Drive Belt / Rear Wheel Alignment

1. Look at the alignment reference marks on each side of the swingarm and the marks on the axle plates to verify proper wheel alignment. Axle plate mark to reference mark alignment must be the same on both sides.
2. If the marks are not aligned, perform all steps of the Belt Tension Adjustment procedure. See page 157.
3. Before and after tightening the axle nut, verify proper belt tension and wheel alignment.

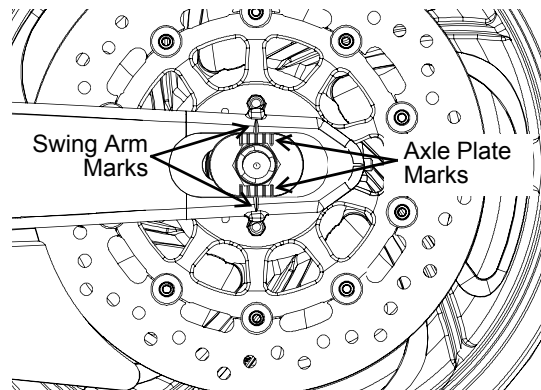

Maintenance

Drive Belt Cleaning

Cleaning the drive belt will maximize belt and sprocket life and minimize drive line noise. Clean the belt at every tire change. Clean the belt more often if riding in dirty, dusty or high debris environments.

1. Mix a few drops of mild dish soap with a cup of warm water.
2. Use a soft nylon brush to clean the belt and sprocket teeth with the soapy water. Clean well in corner areas where road debris and belt dust can collect.
3. Rinse the belt with clear water, then dry thoroughly.

Tip: Do not inspect or adjust drive belt tension when the belt is wet. Improper adjustment will result.


Maintenance

Rear Suspension Adjustment

For riding comfort and to ensure proper ground clearance, adjust rear shock air pressure as specified on the label located in left saddlebag area (reproduced on page 162).

Follow these guidelines when adjusting:

- Park the motorcycle with the sidestand down on a firm, level surface. Remove all riders and cargo.
- *DO NOT exceed 72 PSI (496 kPa) in the shock.*
- Use the VICTORY Air Pump & Gauge (PV-48909). Follow the instructions on the following pages.

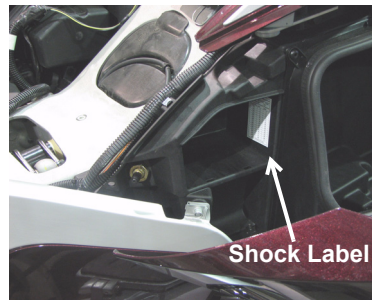

Maintenance

Rear Suspension Adjustment

If the VICTORY air pump and gauge are not available, use the gauge provided in the tool kit, and a pressurized air source with a maximum line pressure of 72 PSI (496 kPa). After using this gauge, remove it quickly to minimize leakage. Expect to lose about 4 PSI (27.6 kPa) with each pressure check when using this gauge. *Use only a dry air source*, such as a system with a water separator or air line dryer, to prevent moisture from entering the shock.

CAUTION! Air pressure increases VERY quickly when using pressurized air. Wear eye and face protection.

Maintenance

Maintenance

Rear Suspension Adjustment


Air Suspension Adjustment Shock Label 7176130 8-BALL & NESS MODELS		Air Suspension Adjustment Shock Label 7174258 TOUR MODELS	
Set desired pressure with bike <u>unloaded</u> on side stand		Set desired pressure with bike <u>unloaded</u> on side stand	
LOW SUSPENSION		No Trunk	Trunk
Total Cargo & Occupant Weight (lbs)	Air Pressure (psi)	Total Cargo & Occupant Weight (lbs)	Air Pressure (psi)
100	22	100	0
125	25	125	0
150	28	150	0
175	31	175	4
200	33	200	10
225	36	225	14
250	39	250	19
275	42	275	24
300	46	300	30
325	50	325	35
350	55	350	40
375	60	375	46
400	66	400	51
425	72	425	57
MAX PRESSURE 72 PSI		4100	62
		MAX PRESSURE 72 PSI	
		71	

Maintenance

Rear Suspension Adjustment

1. Park the motorcycle with the sidestand down on a firm, level surface. Remove all riders and cargo.
2. Open the left saddlebag door. Remove the cap from the air fitting.
3. Refer to the shock label to determine the recommended air pressure.
4. Install the hose fitting of the recommended gauge securely onto the air fitting. Read the air pressure on the gauge.

Tip: A small oil leak from the air fitting is acceptable when pressure is adjusted. See your dealer if more than 5 cc of oil leaks from the fitting.

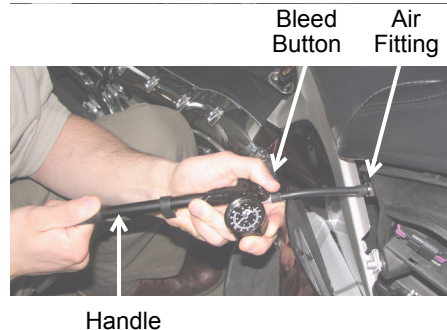

Maintenance

Rear Suspension Adjustment

5. To *reduce* air pressure, push the bleed button on the gauge. Bleed pressure in small amounts until the desired pressure is attained.
6. To *increase* pressure, pump the handle until pressure increases to the desired amount.
CAUTION! DO NOT exceed 72 PSI (496 kPa) in the shock.
7. Remove the hose from the air fitting and reinstall the cap.

Maintenance

Swing Arm / Rear Axle Inspection

1. Sit in the operator's seat and slowly bounce the rear suspension a few times. Make sure the suspension moves freely without binding. Listen for abnormal noises.
2. Elevate and support the motorcycle with the rear tire slightly off the floor.


CAUTION! Make sure the motorcycle is stable when elevated. Injury may occur if the motorcycle tips or falls.

3. Grasp the rear-most surface of the rear tire and attempt to move the wheel side-to-side. If there is movement at the front of the swingarm, check the swingarm pivot nut torque and swingarm pivot bearings.
4. Contact your VICTORY dealer for service if you detect noise or movement at the swing-arm pivot.

Maintenance

Swing Arm / Rear Axle Inspection

5. Grasp the top or bottom surface of the tire and try to move it side to side. If there is movement at the rear axle, inspect wheel bearings and rear axle nut torque.
6. Contact your VICTORY dealer for service if you detect noise or movement at the wheel bearings.
7. With the transmission in neutral, slowly rotate the rear wheel. If the wheel does not rotate smoothly, inspect the wheel bearings, rear axle, belt adjustment and wheel alignment. See the *VICTORY Service Manual* or your authorized VICTORY dealer.

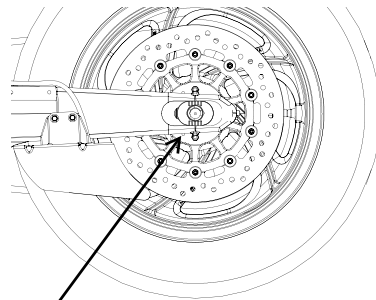


Check for movement in wheel bearing area

Maintenance

Front Fork / Suspension Inspection

1. Place the motorcycle on the sidestand and inspect the front forks. Make sure there is no fork oil present on the outer fork tubes, around the fork seals or around the inner tubes.
2. Clean the fork tubes to remove bugs, tar or buildup which may cause seal wear or leakage.
3. Inspect the outer surfaces of the inner fork tubes for scratches or damage from foreign objects.
4. Straddle the motorcycle and bring it to the fully upright position. Apply the front brake and push downward (hard) on the handlebars several times. The front suspension should operate smoothly and quietly.
5. Fork oil condition and level affects front suspension performance and internal component wear. Replace fork oil at the recommended intervals. Special tools are required to perform this procedure. See the *VICTORY Service Manual* or your authorized VICTORY dealer.

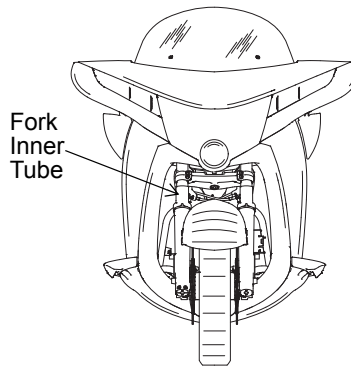


Maintenance

Steering Head Inspection

1. Elevate and support the motorcycle with the front tire slightly off the floor.

CAUTION! Make sure the motorcycle is stable when elevated. Injury may occur if the motorcycle tips or falls.

2. Turn the handlebars from stop to stop. The action should be smooth but not loose. Make sure wires, hoses and control cables do not interfere with smooth steering.
3. Alternately push and pull on the lower fork legs and feel for movement in the steering head area. See your VICTORY dealer if any movement is detected.

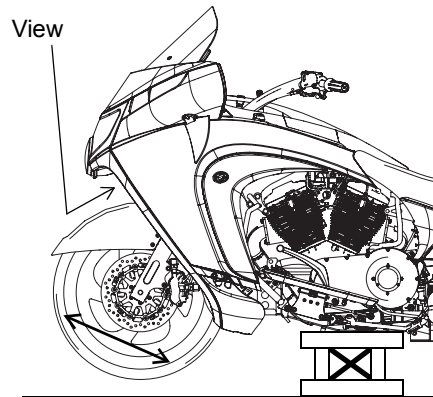

Maintenance

Fuel System Components

1. Inspect fuel hoses for cracks or damage.
2. Inspect hose connections at the fuel tank and at the fuel rail for dampness or stains from leaks.

Evaporative Emission Control System

1. Inspect all evaporative emission control system hoses and connections. Make sure all connections are tight.
2. Inspect connections at the evaporative emissions canister to be sure they are secure. The canister is located on the left side of the motorcycle near the oil cooler.



Evaporative Emissions
Canister (California Models)

Maintenance


Fast Idle

A fast idle speed during warm up of between 1200 and 2000 RPM is automatically set by the EFI system Idle Air Control (IAC). Periodic adjustment is not required.

Crankcase Breather Hose

Inspect the crankcase breather hose for cracks or damage. Be sure the clamps are in place and secure.

Breather Hose

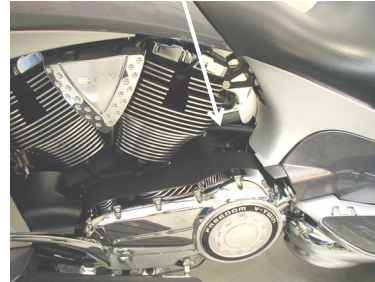

Maintenance

Throttle Control Inspection

1. With the engine OFF, rotate the throttle control grip fully open and then release it. It should rotate smoothly from the rest position to the completely open position. It should return to the rest position quickly when released.
2. Repeat the twist and release process with the handlebars turned fully *right* and fully *left*.
3. Remove the right side access cover.
4. Inspect throttle cables for frayed ends.
5. Service the throttle system if throttle operation is not smooth, if throttle grip does not return properly, or if cable ends are frayed. See the *VICTORY Service Manual* or your authorized VICTORY dealer.




Cable Area

Maintenance

Throttle Cable Freeplay

Throttle freeplay is the amount of throttle control grip movement from the rest position to the point of cable resistance. Measure this distance. Freeplay should be 2-4 mm. Adjust throttle freeplay as needed.

1. Position the front wheel straight ahead. Stop the engine.
2. Hold the adjuster nuts securely and loosen the lock nuts on both cables. Turn the lock nuts away from the adjuster nuts as far as possible.
3. Turn both adjuster nuts toward the lock nuts as far as possible for maximum freeplay in both cables.

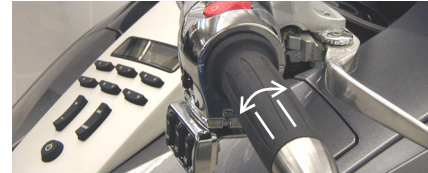

2-4 mm



Adjuster Nut

Lock Nut

Maintenance

Throttle Cable Freeplay

4. Turn the adjuster on the throttle opening cable (front cable) away from the lock nut until throttle freeplay is 2-4 mm.
5. To adjust the closing cable (rear cable), hold the throttle grip lightly in the closed position. Turn the adjuster slowly outward until slight resistance is felt.
6. Turn the lock nuts on both cables until they are seated against the adjuster nuts. Hold each adjuster nut and tighten each lock nut securely.
7. Repeat the throttle control inspection. See page 171.

Maintenance

Throttle Cable Lubrication

Lubricate control cable ends at the intervals recommended in the periodic maintenance table beginning on page 137.

NOTICE: External casings are factory-lubricated. Additional lubrication could be detrimental to cable performance.


Verify proper routing and smooth movement. Inspect for damage to the external casing, and inspect exposed cable wire for fraying, kinks or corrosion. Replace any damaged, sticky or sluggish cable.

1. Disconnect the cable at the throttle body.
2. Apply a light film of VICTORY All Purpose Grease or equivalent to the barrel end.
3. Reconnect the cable and adjust freeplay as needed.

Maintenance

Cruise Control Cable Inspection (if equipped)

1. Remove the right side access cover.
2. Inspect the throttle body end of the cruise control cable for fraying and be sure the end is secured in the bracket.

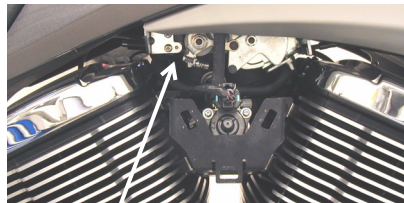

Cruise Control Cable

Hydraulic Clutch Lever Lubrication

Lubricate the pivot bushing at the intervals recommended in the periodic maintenance table beginning on page 137. Also lubricate any time binding is evident. Use VICTORY All Purpose Grease or equivalent.



Clutch Lever Bushing

Maintenance

Hydraulic Clutch Fluid

Check the hydraulic clutch fluid level. See page 103. The fluid level should be at or above the top of the sight glass. Add fluid as needed. Replace cloudy or contaminated fluid.

Use DOT 4 brake fluid in the hydraulic clutch reservoir. Use fluid only from a sealed, clean container. Review the brake fluid precautions on page 182.


Do not operate the clutch while the reservoir cover is removed. Fluid could overflow from the reservoir and cause air to enter the fluid system.

WARNING! Using the wrong fluid or allowing air or contaminants into the fluid system can damage the system seals or result in a malfunction that could lead to serious injury or death.

Maintenance

Hydraulic Clutch Fluid


1. Straddle the motorcycle and bring it to the fully upright position. Position the handlebars so that the fluid reservoir is level.
2. Wipe the fluid container and the area around the reservoir cover with a clean cloth.
3. If the fluid level is low, check hoses, lines and the slave cylinder for leaks.
4. To add fluid, remove the three reservoir cover screws. Remove the cover and diaphragm. Carefully add fluid to the top of the sight glass.
5. Reinstall the diaphragm, cover and screws.
Torque: 25 in-lbs (3 Nm)
6. Wipe away any fluid spills. Check for signs of fluid leaks around hoses, fittings, reservoir, and slave cylinder. Check for deterioration of hoses.

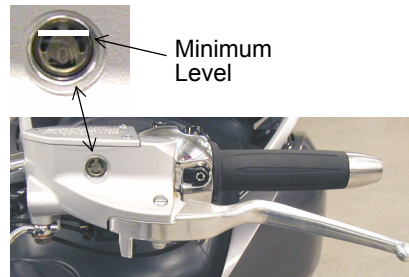

Maintenance

Mechanical Clutch Lever Freeplay

1. Remove the right side access cover.
2. Hold the clutch cable and loosen the adjuster lock nut.
3. While holding the cable, turn the cable adjuster inward or outward until clutch lever freeplay is 0.5-1.5 mm.
4. While holding the cable, tighten the adjuster lock nut securely.
5. Reinstall the right side cover.
6. Verify that the safety switch activates properly. The engine should not start in gear with the clutch lever released.

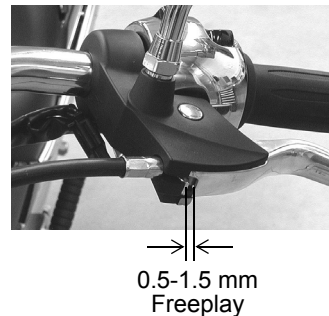

Tip: The starter interlock switch is dependent on the clutch lever freeplay being set correctly to ensure activation of the clutch safety switch.


Maintenance

Mechanical Clutch Lever Lubrication

1. Remove the right side access cover. Loosen the clutch cable adjuster lock nut.
2. Turn the cable adjuster completely inward to provide maximum lever freeplay.
3. Remove the clutch lever pivot nut and screw. Disconnect the clutch cable from the clutch lever.
4. Remove any old grease and dirt from the lever and housing. Lubricate the clutch lever and pivot screw with VICTORY Moly Assembly Grease or VICTORY All Purpose Grease.
5. Reconnect the clutch cable. Reinstall the lever, pivot screw and nut. Hold the screw down and tighten the nut.

Torque: 40 in-lbs (5 Nm)

6. Adjust clutch lever freeplay. See page 178.

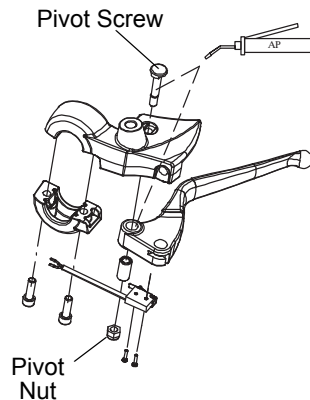

Maintenance

Mechanical Clutch Cable Lubrication

Lubricate control cable ends at the intervals recommended in the periodic maintenance table beginning on page 137.

NOTICE: External casings are factory-lubricated. Additional lubrication could be detrimental to cable performance.

Verify proper routing and smooth movement. Inspect for damage to the external casing, and inspect exposed cable wire for fraying, kinks or corrosion. Replace any damaged, sticky or sluggish cable.

1. Disconnect the cable at the clutch lever and at the primary cover.
2. Lubricate the ball and barrel ends with VICTORY All Purpose Grease or equivalent.
3. Reconnect the cable and adjust freeplay as needed.

Maintenance

Front Brake Lever

1. See page 77 for front brake lever reach adjustments.
2. Lubricate the pivot bushing at the intervals recommended in the periodic maintenance table beginning on page 137. Also lubricate any time binding is evident. Use VICTORY All Purpose Grease or equivalent.
3. Inspect brake pads as outlined on page 101.



Brake Lever Bushing

Rear Brake Pedal

1. See page 80 for rear brake pedal adjustments.
2. Lubricate the pivot bushing at the intervals recommended in the periodic maintenance table beginning on page 137. Also lubricate any time binding is evident. Use VICTORY All Purpose Grease or equivalent.
3. Inspect brake pads as outlined on page 101.

Maintenance

Brake Fluid Precautions

⚠ WARNING

Using the wrong fluid or allowing air or contaminants into the fluid system can damage the system seals or result in a malfunction that could lead to serious injury or death. Use only DOT 4 brake fluid from a sealed container.

Do not operate the front brake with the reservoir cover removed. Fluid could overflow from the reservoir and allow air to enter the system. Air in the brake system could cause the brakes to malfunction.


An over-full reservoir may cause brake drag or brake lock-up, which could result in serious injury or death. Maintain brake fluid at the recommended level. Do not overfill.

NOTICE: Brake fluid will damage painted surfaces and plastic parts. Always clean spilled brake fluid immediately with water and a mild detergent.

Rear Brake Fluid

1. Position the motorcycle on level ground in the fully upright position.
2. The rear brake fluid reservoir is located near the rear brake pedal, just inside the right lower leg fairing. Wipe the fluid container and the area around the reservoir cover with a clean cloth.
3. If the fluid level is low, inspect brake pads as outlined on page 101. If pads are not worn beyond the service limit, inspect the brake system for leaks.
4. To add fluid, remove the reservoir cover. Carefully add fluid to the recommended level. *Do not overfill.*
5. Reinstall the cover and diaphragm.
6. Wipe away any fluid spills. Check for signs of brake fluid leaks around hoses, fittings, reservoir, and brake calipers.

Maintenance

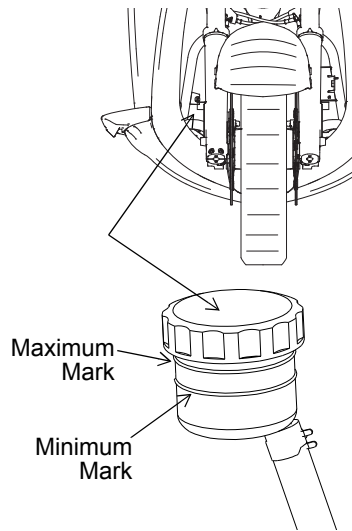


Maintenance

Front Brake Fluid

Change the brake fluid at the intervals recommended in the periodic maintenance table beginning on page 137. Do not attempt to change the anti-lock brake system fluid. See your VICTORY dealer.

1. Straddle the motorcycle and bring it to the fully upright position. Position the handlebars so that the fluid reservoir is level. Wipe the fluid container and the area around the reservoir cover with a clean cloth.
2. If the fluid level is low, inspect brake pads as outlined on page 101. If pads are not worn beyond the service limit, inspect the brake system for leaks.

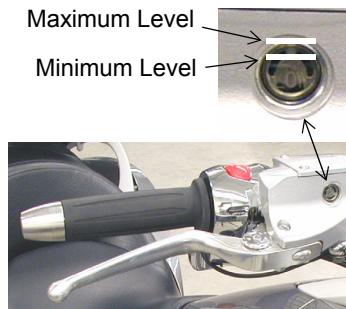

Maintenance

Front Brake Fluid

3. To add fluid, remove the three reservoir cover screws. Remove the cover and diaphragm. Carefully add fluid to the top of the sight glass. *Do not overfill*. Reinstall the diaphragm, cover and screws.


Torque: 25 in-lbs (3 Nm)

4. Wipe away any fluid spills. Check for signs of brake fluid leaks around hoses, fittings, reservoir, and brake calipers. Check for deterioration of hoses.

Maintenance

Brake Disc Inspection / Cleaning

1. Inspect brake pads as outlined on page 101.
2. Inspect brake discs for nicks, scratches, cracks or other damage. Inspect the thickness of each brake disc at four or more locations around the disc. If any disc is worn to the minimum thickness at the thinnest point, or if a disc is damaged, see your VICTORY dealer for replacement.
3. Clean discs if minor squeaks develop due to dirt or dust. Apply VICTORY Brake Cleaner (P/N 2872191) to a clean shop towel and wipe disc. DO NOT allow brake cleaner to contact painted or plastic parts. Read all precautions on the label.

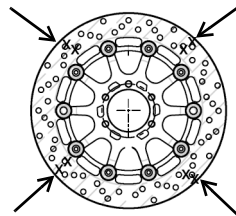

Minimum Thickness

Front: 4.5 mm

Rear: 6.5 mm



Maintenance


Brake Hoses / Connections

Inspect all brake hoses and connections for dampness or stains from leaking or dried fluid. Tighten any leaking connections and replace components as necessary. See the *VICTORY Service Manual* or your authorized VICTORY dealer.

Maintenance

Gear Shift Pedal

1. Inspect the shift pedal and linkage. Tighten any loose fasteners.
2. Lubricate the pivot bushing at the intervals recommended in the periodic maintenance table beginning on page 137. Lubricate if a shifting problem occurs. Also lubricate any time binding is evident. Use VICTORY All Purpose Grease or equivalent.

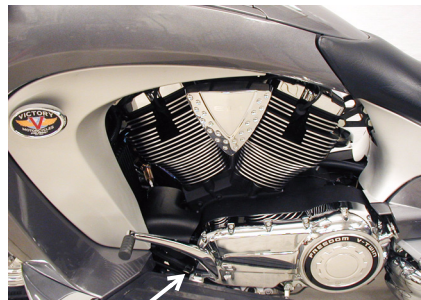

Shift Pedal Bushing

Maintenance

Wheel Inspection

Inspect both wheels for cracks or damage and replace damaged wheels promptly. Do not operate the motorcycle if wheels are damaged or cracked. See the *VICTORY Service Manual* or your authorized VICTORY dealer.

Maintenance Tires

⚠ WARNING

Operating the motorcycle with improper tires or with improper or uneven tire pressure could cause loss of control or accident. Always use the correct size and type of tires specified for your vehicle. Always maintain proper tire pressure as recommended in the owner's manual and on safety labels.

Tire Condition

Inspect the tire sidewalls, road contact surface, and tread base for cuts, punctures, and cracking. Replace damaged tires immediately. See the *VICTORY Service Manual* or an authorized VICTORY dealer.

Tire Tread Depth

Use a depth gauge or an accurate ruler to measure the depth of the center tire tread on both front and rear tires. Replace the tire if the tread depth is less than 1/16 inch (1.6 mm).



Maintenance

Tires

Tire Pressure

Riding warms the tires and increases tire air pressure. For an accurate reading, check tire pressure before riding. Adjust tire pressure as recommended for the total weight of your intended load (see table).

WARNING! Do not exceed the maximum recommended inflation pressure to seat the bead. Tire or rim failure may result.


Location	Size	Brand	Type	Recommended Pressure	
				Load Weight up to 200 lbs (91 kg)	Load weight up to vehicle's maximum load capacity
Front	130/70R18 63H	Dunlop	Elite 3	36 psi (248 kPa)	38 psi (262 kPa)
Rear	180/60R16 M/C 80H	Dunlop	Elite 3	38 psi (262 kPa)	40 psi (276 kPa)

Maintenance

Spark Plugs

Replace spark plugs at the intervals recommended in the periodic maintenance table beginning on page 137. Always replace spark plugs in pairs.

Spark Plug Specifications	
Spark Plug Type	NGK DCPR6E
Spark Plug Gap	.036 inch (.9 mm)
Spark Plug Torque	8.5 ft-lbs (11 Nm)

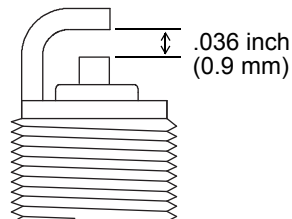

1. Make sure the engine is at room temperature.
2. Pull upward on the spark plug boot (not the wire) to remove the boot.

Maintenance

Spark Plugs

CAUTION! Wear eye and face protection when using pressurized air.

3. To prevent debris from entering the spark plug hole, use compressed air to clean the area around the plugs before removing them. Remove the spark plugs.

Tool: 12 mm plug socket

Tip: Both spark plugs should have the same light or medium tan color deposits. The electrodes should be square with sharp edges.

4. Reinstall the spark plugs or install new plugs. Apply anti-seize compound sparingly to the threads.

Maintenance

Engine Compression Test

An engine compression test can be performed to monitor general engine condition. See the *VICTORY Service Manual* or your authorized VICTORY dealer.


Exhaust System Inspection

Check the exhaust system for stains from leaking exhaust gasses. Replace damaged or leaking exhaust gaskets. See the *VICTORY Service Manual* or your authorized VICTORY dealer.

Check all exhaust system fasteners. Tighten loose clamps and fasteners. Do not overtighten.

Fastener Torques

1. 12 ft-lbs (16 Nm)
2. 35 ft-lbs (47.5 Nm)
3. 8 ft-lbs (11 Nm)
4. 35 in-lbs (4 Nm)
5. 31 ft-lbs (42 Nm)

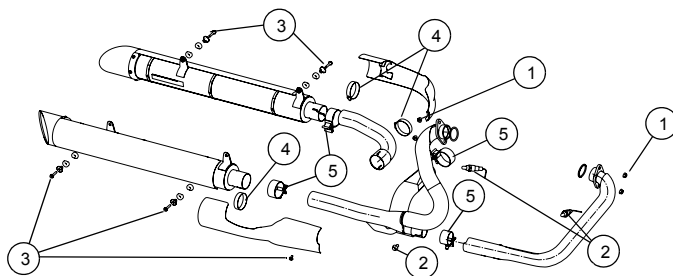

Maintenance

Battery

The motorcycle battery is a sealed, maintenance-free battery. Do not remove the battery cap strip for any reason. Keep the battery connections clean and tight at all times.

⚠ WARNING

Battery electrolyte is poisonous. It contains sulfuric acid. Serious burns can result from contact with skin, eyes or clothing.

Antidote:

External: Flush with water.

Internal: Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg, or vegetable oil. Call physician immediately.

Eyes: Flush with water for 15 minutes and get prompt medical attention.

Batteries may produce explosive gases.

- Keep sparks, flame, cigarettes, etc. away.
- Ventilate when charging or using in an enclosed space.
- Always shield eyes when working near batteries
- KEEP OUT OF REACH OF CHILDREN.

Maintenance


Battery Removal

1. Turn the handlebars full right.
2. Remove the five belly pan screws.

Tool: 6 mm Allen wrench

3. Remove the screw that joins the two side grills.

Tip: The grill screw is placed in the FRONT hole. The center belly pan screw uses the rear hole.

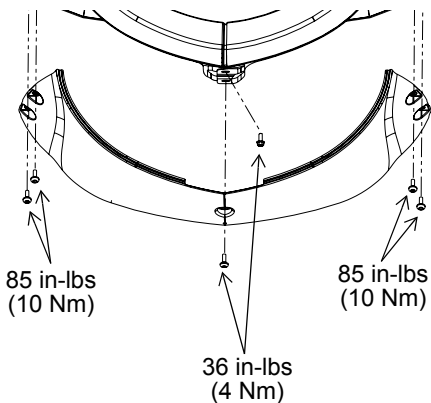

Maintenance

Battery Removal

WARNING! Improperly connecting or disconnecting battery cables can result in an explosion and cause serious injury or death. When removing the battery, always disconnect the negative (black) cable first. When reinstalling the battery, always connect the negative (black) cable last.

4. Remove the negative (-) battery cable from the battery terminal.


Tool: 10 mm wrench

5. Remove the red protective boot from the positive (+) cable end to expose the terminal. Remove the positive cable from the battery terminal.

6. Remove the front battery box bolt.

Tool: 10 mm socket

7. Tip the front box forward and lift the battery up (to clear the case) and then out the bottom side.

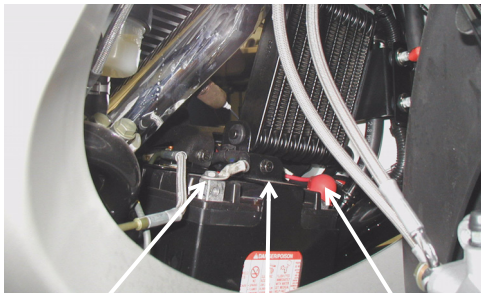

Step 4

Step 6


Step 5

Maintenance

Battery Installation

WARNING! Improperly connecting or disconnecting battery cables can result in an explosion and cause serious injury or death. When removing the battery, always disconnect the negative (black) cable first. When reinstalling the battery, always connect the negative (black) cable last.

1. Ensure the front battery box tabs are engaged with the inner box slots. Replace any damaged or missing foam pads. Slide the battery into the battery box with terminals forward.
2. Tip the front battery box toward the inner box and install the top bolt. Torque to specification.
3. Install the positive (+) battery cable first. Torque the bolt to specification. Install the red protective boot over the terminal.
4. Install the negative (-) cable last. Torque the bolt to specification.
5. Reinstall all remaining components.

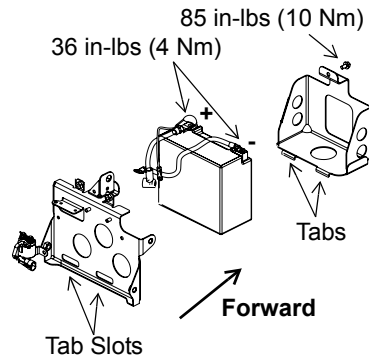

Maintenance

Battery Charging

Tip: If your VICTORY motorcycle will not be used for a period of 6 weeks or longer, a maintenance charger should be connected to the battery. A fused maintenance charger connection is provided. The connector is designed for use with the VICTORY accessory maintenance charger available at your authorized VICTORY dealer.


1. Following the charger manufacturer's instructions, use a battery charger designed for use with 12-volt batteries. The charger should have a maximum charging rate of 1.8 amps. Charge the battery for approximately 10 hours at a rate of 1.8 amps. If you use a taper or trickle charger, it will take longer to charge the battery.
2. After charging the battery, allow the battery to sit 1-2 hours before checking the state of charge with a DC volt meter. The charge should be a minimum of 12.5 DC volts. Repeat the charging cycle if the charge is less than 12.5 DC volts. Replace the battery if it fails to reach 12.5 volts after the second charge.

Maintenance

Ignition Switch / Lock Lubrication

Periodically lubricate the ignition switch and door locks. We recommend the use of VICTORY Multi-Purpose Lubricant.

1. Spray lubricant directly into the ignition switch and into each lock cylinder for 1-2 seconds.
2. Insert each key into its lock and turn it to all positions to distribute the lubricant.
3. Wipe away any excess lubricant.

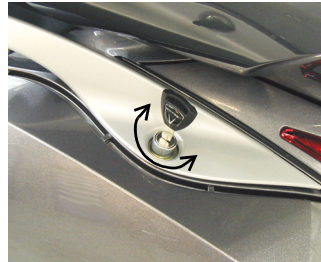

Maintenance

Sidestand Lubrication


Periodically lubricate the sidestand pivot and the ends of the spring. See page 107 for sidestand inspections.

Fastener Inspection

1. Inspect the entire motorcycle chassis and engine for loose, damaged or missing fasteners. Tighten loose fasteners to the proper torque.

Tip: Refer to the specifications section of this manual or the service manual for fastener torque values, or see your VICTORY dealer.

2. Always replace stripped, damaged or broken fasteners before riding. Use genuine VICTORY fasteners of equal size and strength.

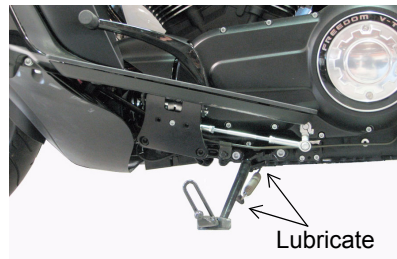

Maintenance



Seat Removal / Installation

1. Open the glove compartment door and the fuel door.
2. Lift the console trim panel straight upward at each corner to remove it. Do not tip the panel rearward.
3. Remove the two seat bolts.

Tool: 4 mm Allen wrench

4. Lift the front of the seat upward and pull forward to disengage the tab at the rear of the seat.
5. To install, reverse the above process, being sure to engage the tab at the back of the seat.
6. Tighten the seat bolts.

Torque: 36 in-lbs (4 Nm)

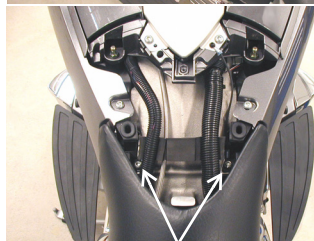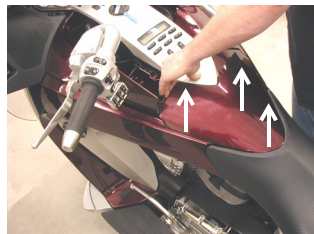

Seat Bolts
36 in-lbs (4 Nm)

Maintenance

Trunk Removal

1. Remove the seat. See page 202.
2. Disconnect the trunk wire harness.
3. Remove the license plate.
4. Remove the two 4 mm Allen screws from bottom of the license plate bracket. Remove the bracket.
5. Open the trunk and remove all contents.





Maintenance

Trunk Removal

6. Remove the compartment cover by squeezing between the two notches.
7. Remove three of the four trunk mount bolts. Support the trunk before removing the last bolt.
Tool: 13 mm socket, extension, drive handle
8. Install the street trim panel. See page 207.

Trunk Installation

1. Remove the street trim panel. See page 206.
2. Reverse the trunk removal instructions to reinstall the trunk.
3. Tighten the trunk mounting bolts.
Torque: 26 ft-lbs (35 Nm)
4. Tighten the license plate bracket screws.
Torque: 36 in-lbs (4 Nm)

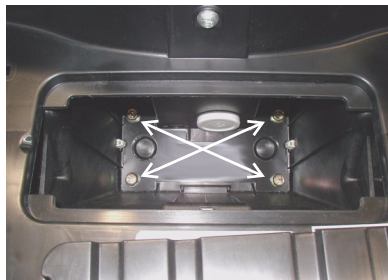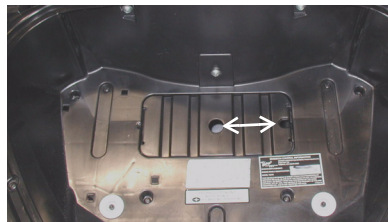

Maintenance

Windshield Trim Panel Removal

Remove the windshield trim panel to access fuse boxes, the manual windshield adjustment mechanism, the headlamp adjustment knob and the front turn signal bulbs.

1. Lift each panel end upward to release the ends.
2. Carefully slide the panel slightly toward the windshield to disengage the lower tabs. Remove the panel.
3. Unplug the antenna.
4. Reverse all steps to reinstall the trim panel.




Maintenance

Maintenance

Street Trim Panel Removal

1. Remove the seat, license plate and bracket. See page 202.
2. Working from top to bottom, lift each edge of the tail molding to release the tabs. Lift the tail molding just enough to provide clearance to remove the trim panel.
3. Lift the trim panel straight upward to release all four tabs at the corners.
4. Install the trunk. See page 204.
5. Align the tail molding. Working from bottom to top, press at each tab to secure the molding.
6. Reinstall the license plate and seat. Tighten the fasteners.

Torque: 36 in-lbs (4 Nm)

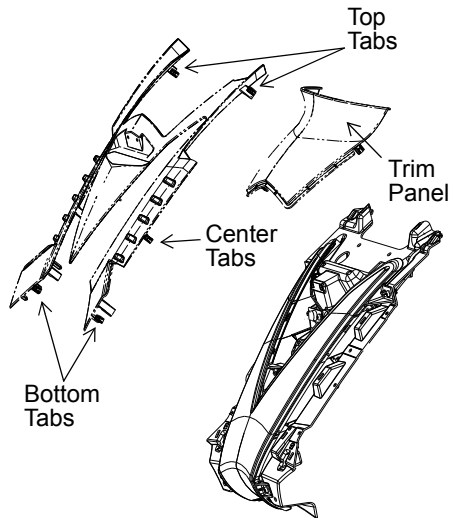

Maintenance

Street Trim Panel Installation

1. Remove the seat, license plate and bracket.
2. Working from top to bottom, lift each edge of the tail molding to release the tabs. Lift the tail molding just enough to provide clearance to install the trim panel.
3. Remove the trunk.
4. Align the trim panel and press downward evenly to seat all four tabs in the tab slots.
5. Align the tail molding. Working from bottom to top, press at each tab to secure the molding.
6. Reinstall the license plate and seat. Tighten the fasteners.

Torque: 36 in-lbs (4 Nm)

Maintenance

Headlamp Bulb Replacement

1. Remove the air filter. See page 149.
2. Pull the sealing boot away from the back of the bulbs and housing.
3. Press the looped end of the wire bulb retainer clip and swing the end toward the center of the bulb to release it from the latch tab.
4. With the wire connector attached, pull the bulb out.

Tip: When servicing a halogen lamp, avoid touching the lamp with bare fingers. Oil from your skin leaves a residue, causing a hot spot that will shorten the life of the lamp. If fingers do touch a lamp, clean it with denatured alcohol.

5. Disconnect the wire harness. Install the new bulb and secure the retainer.
6. Reinstall the sealing boot. Make sure it seals tightly around the bulb base and lens to prevent condensation.
7. Reinstall the air filter.

Front Turn Signal Bulb Replacement

1. Remove the windshield trim panel. See page 205.
2. Disconnect the wire harness from the socket *before* removing the socket from the lens. Lift the lock tab on the connector and push the connector off the socket.
3. Rotate the bulb socket counter-clockwise 1/4 turn and remove the socket with bulb. Remove the bulb and install a new bulb. Reinstall the socket and rotate it 1/4 turn clockwise.
4. Reconnect the wire harness. Be sure it snaps securely into place over the connector lock tab.

Maintenance

IMPORTANT

Disconnect the wire harness from the socket *before* removing the socket from the lens.



Maintenance

Running Light Bulb Replacement

Replace the running light bulb (innermost bulb) using the same procedure as the turn signal bulb, but leave the wire harness attached to the bulb socket when removing the socket from the lens.

Taillight / Brake Light / Turn Signal Bulb Replacement

1. Open the saddlebags.

Tip: (Removal of the trunk or street panel is not necessary.)

2. Remove the license plate and bracket. See page 202.
3. Working from top to bottom, lift each edge of the tail molding to release the tabs.

Maintenance


Taillight / Brake Light / Turn Signal Bulb Replacement

4. Remove the six button-head screws from the lower rear bumper. Remove the five button-head screws that secure the taillight lenses.

Tool: 4 mm Allen wrench

5. Pull both taillights straight rearward to release all spring tabs from the rear fender and expose the bulb socket. Make a note of bulb socket orientation for reassembly.
6. Rotate the socket 1/4 turn counter-clockwise to remove it. Pull the bulb straight out of the socket and install a new bulb.
7. Reverse all steps to reassemble components. Tighten the button-head screws.

Torque: 36 in-lbs(4 Nm)

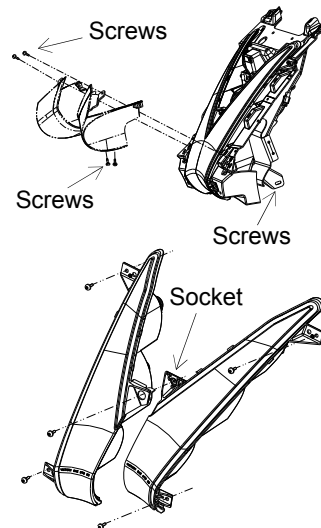


Maintenance

Headlamp Aim Adjustment

The high beam should shine straight forward. The low beam will spread more toward the right (U.S./Canada).


1. Verify that tire pressure is at specification. See page 191. Verify that rear suspension ride height (preload) is at specification. See page 160.
2. Position the motorcycle on a level surface with the headlight approximately 25 ft. (7.6 m) from a wall. Measure the distance from the floor to the center of the headlight and make a mark on the wall at the same height.
3. Sit in the operator's seat. Bring the motorcycle to the fully upright position.
4. Move the ignition switch to the ON position and switch the headlamp to high beam. Observe the headlight aim on the wall. The top of the beam should be slightly below the mark on the wall.

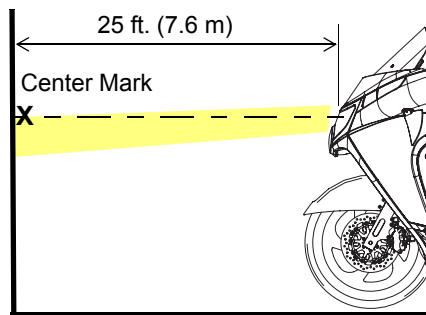


Maintenance

Headlamp Aim Adjustment

5. Remove the windshield trim panel. See page 205. Reach through the opening in the headlamp housing mount.
6. To lower the headlamp beam, turn the knob clockwise (as viewed from the operator's seat).
7. To raise the headlamp beam, turn the knob counter-clockwise.

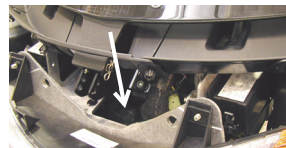

Knob Access

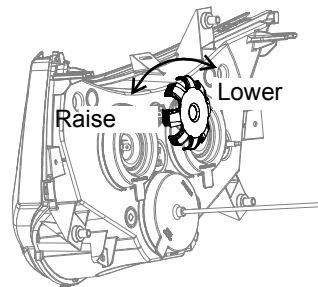

Maintenance

Fuse Boxes

Remove the windshield trim panel to access the fuses, auto-reset circuit breakers and relays. See page 205. Use the fuse puller provided in the tool kit to remove a fuse.

Left Fuse Box

IGNITION 10A	HEADLIGHT POWER RELAY	HORN RELAY	SECONDARY LIGHTS RELAY
HEADLIGHT 20A			
GAUGES 5A	RADIO 25A	HORN 20A	TURN SIGNAL/BRAKE RELAY 7174111
SPARE FUSE	SECONDARY LIGHTS 20A	TS/BRAKE 20A	

Right Fuse Box

HEADLIGHT CONTROL RELAY	ENGINE RELAY	FUEL PUMP/ IGNITION COIL RELAY	CHASSIS ELECTRICAL RELAY
SPARE FUSE	ENGINE 15A	FP/IGN COIL 15A	HEADLIGHT SWITCHING RELAY 7175380
SPARE FUSE	WINDSHIELD 20A	CHASSIS 20A	


Maintenance

Fuse Replacement

1. Remove the windshield trim panel. See page 205.
2. Push the center of the dart upward to remove a fuse box cover panel.
3. Pull the tab to release a fuse box cover.

Tip: The reverse system fuse is located on the left rear side of the motorcycle, under the seat.

NOTICE: Always use the recommended fuse to prevent electrical system damage. Refer to the label on the fuse box cover.

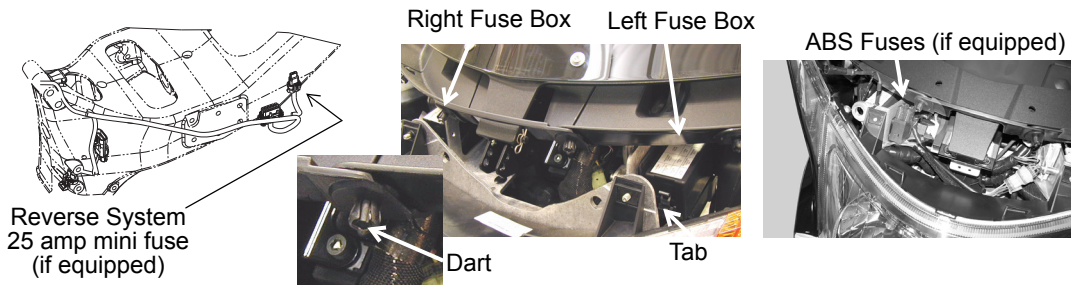

Maintenance

Electrical Precautions

Be aware of the following “DO’s” and “DO NOT’s” regarding the electrical system to avoid disruption of electrical signals and possible system malfunction.

DO:

- DO use ONLY genuine VICTORY parts and accessories designed for your model and follow the instructions provided.
- DO use the accessory power jack provided in the glove compartment (or trunk). The glove compartment power jack is powered whenever the ignition key is in the ON or ACC position. The trunk power jack is powered at all times.
- If it is necessary to provide power to an item that does not use one of the previously mentioned power jacks, connect to the load side of the main circuit breaker (under the cover behind the oil cooler), and connect the ground wire to the engine ground at the front left side of the crankcase (near the circuit breaker).

Maintenance

Electrical Precautions

DO NOT:

- DO NOT splice or cut any wires.
- DO NOT tap in to any power or ground on the motorcycle unless specifically directed to do so by the VICTORY instructions that come with the kit.
- DO NOT back-probe electrical connectors on the vehicle unless directed to do so by the Service Manual.
- DO NOT power any accessories from the diagnostic connector (inside the left saddlebag near the rear suspension air pressure label).

Maintenance

Elevating the Motorcycle

WARNING! Serious injury or death can occur if the motorcycle tips or falls. Make sure the motorcycle will not tip or fall while elevated or while on the sidestand.

Some procedures require raising the motorcycle to remove weight from the component being inspected. Elevate the motorcycle by placing a stable, flat platform jack or lift mechanism on a firm, flat surface and lifting under the engine crankcase. The platform should be a minimum of 12 inches (30 cm) square. **DO NOT** attempt to lift the motorcycle without proper equipment. Always secure the motorcycle properly before lifting so it cannot tip or fall when elevated.

Road Test


Before returning the motorcycle to regular use, perform a road test in a safe area. Pay special attention to the proper fit and operation of all serviced components.

Make any corrections or additional adjustments promptly to ensure safe, reliable and enjoyable vehicle performance.

Maintenance

Fastener Torque

Refer to the service manual or an authorized VICTORY dealer for procedures and fastener torques not listed in this manual.

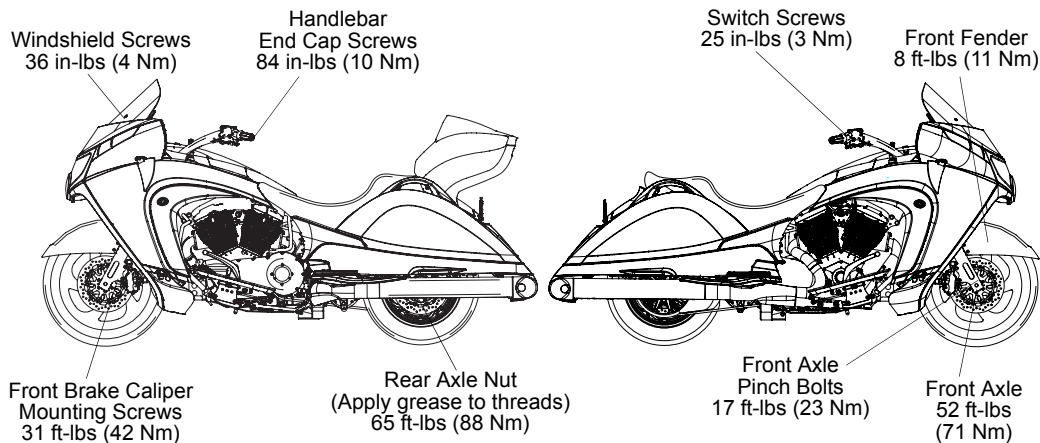

Maintenance Troubleshooting

For your personal safety, do not attempt inspection or repairs not fully described in this rider's manual. Contact an authorized VICTORY dealer for service if you cannot determine the cause of a problem or if the inspection / repair exceeds your mechanical ability or tool resources. Do not perform any inspection or repair with the engine running.

Engine Cranks But Will Not Start

Possible Cause	Possible Remedy/Action
Low Fuel	Verify fuel level
Fuel pump inoperative	Turn engine STOP switch to RUN. Turn key ON. The fuel pump should run momentarily and then stop. If you do not hear the fuel pump run, check the fuel pump / ignition circuit breaker. See page 215. <i>A momentary clicking sound from the IAC valve is normal when the key is first turned to the OFF position.</i>
Battery Discharged	Fully charge the battery. See page 199.
Spark Plug(s) Fouled	Inspect spark plugs. See page 192.
Spark Plug Wire(s) Disconnected or Loose	Be sure spark plug wires are securely fastened.

Maintenance

Troubleshooting

Starter Motor Does Not Turn or Turns Slowly

Possible Cause	Possible Remedy/Action
Engine Stop / Run Switch in Stop Position	Place switch in RUN position.
Battery Discharged	Fully charge the battery. See page 199.
Battery Cables Loose or Corroded	Inspect battery cables.
Transmission In Gear	Shift transmission into neutral or pull the clutch lever in to disengage the clutch. See starting procedures on page 114.

Maintenance Troubleshooting

Engine Starts But Misses or Runs Poorly

Tip: Turn engine OFF before inspecting any of these items.

Possible Cause	Possible Remedy/Action
Battery Discharged	Fully charge the battery. See page 199.
Battery Cables Loose or Corroded	Inspect battery cables and connections.
Spark Plug(s) Fouled	Inspect spark plugs. See page 192.
Spark Plug Wire(s) Loose or Wet	Inspect spark plug wires, ensure dry/secure.
Contaminated Fuel	Inspect fuel for water / contamination. See dealer.
Engine Oil Level Incorrect Or Wrong Type	Inspect level and quality of oil. See page 92.
Loose, Broken, Shorted Ignition Coil Wires	Inspect coil primary wires. See dealer.
Air Intake Restricted	Inspect air filter. See page 149.

Maintenance

Troubleshooting

Shifting Difficulties or Hard to Find Neutral

Possible Cause	Possible Remedy/Action
Shift Linkage Bushings Dry Or Worn	Lubricate shift linkage.
Engine Oil Level Incorrect Or Wrong Type	Inspect level and quality of oil. See page 92.
Hydraulic Clutch Fluid Contaminated	Flush hydraulic clutch fluid (see dealer).
Air In Hydraulic Clutch System	Bleed system (see dealer).
Clutch Slave Cylinder Bracket Loose	Inspect / tighten loose parts.
Hydraulic Clutch Fluid Leak	Inspect system for leaks (see dealer).
Clutch Damage	Replace clutch.

Maintenance

Troubleshooting

Battery Charging Rate Low or Battery Discharges

Possible Cause	Possible Remedy/Action
Loose/Corroded Charging Circuit Connection	Check/clean battery cable connections. Check/clean charging circuit connections. See dealer.
Accessory Load Exceeds Charge Rate	Use ACC position and limit accessory operation when engine is off.
Improperly Wired Accessory (Current Draw)	See dealer to check charging system output and current draw.
Battery discharges when motorcycle not in use.	See dealer to check key OFF current draw.

Maintenance

Troubleshooting

Brake Noise / Poor Brake Performance

Tip: Contact a VICTORY dealer if brake performance does not return after these inspections.

Possible Cause	Possible Remedy/Action
Dust / Dirt On Brake Disc(s)	Clean disc. See page 186.
Worn Pads Or Disc / Brake Disc Damage	Inspect pads. See pages 101 and 186.
Brake Fluid Level Low Or Fluid Contaminated	Inspect fluid level / fluid. See pages 97 and 99.

Anti-Lock Brake Light Remains Illuminated or Illuminates Intermittently

Possible Cause	Possible Remedy/Action
Blown fuse	Check the fuses. See page 214.
Loose or damaged pulse ring	Inspect pulse ring for looseness or chipped teeth.
Debris lodged in components	Inspect wheel speed sensor and pulse ring for debris.
Damage caused by debris	Inspect wheel speed sensor for cracked housing.
Damaged components	See service manual or authorized dealer.

Maintenance

Service Manual Availability

Some procedures are beyond the scope of this manual. See your dealer to purchase a VICTORY Service Manual for your motorcycle.

Some procedures provided in the Service Manual require specialized knowledge, equipment, and training. Be sure you have the required technical skills and tools that are needed before you attempt ANY service on your motorcycle. Please contact your VICTORY dealer before attempting any service work that is beyond your level of technical knowledge or experience, or if the work requires specialized equipment.

Cleaning and Storage

VICTORY Cleaning Products

This section provides tips on the very best way to clean, polish and preserve every surface of your beautiful new VICTORY Motorcycle. We recommend the use of our new Pure VICTORY cleaning and polishing products and accessories, which have been specially designed to offer the best care possible for your VICTORY motorcycle.

In addition to the products recommended in this section for cleaning and polishing, Pure VICTORY Polishes also has specialty products for:

- removing scratches, scuffs and swirls
- enhancing black and silver engines
- cleaning engines, tires and wheels
- removing brake dust

After cleaning the motorcycle, inspect for damage to the painted surfaces. Repair chips or scratches promptly by applying VICTORY touch-up paint to prevent corrosion. For more information, or for answers to your cleaning and detailing questions, see your VICTORY dealer or write to the Pure VICTORY Polishes Staff at: victorymailbag@polarisind.com.

Cleaning and Storage

Washing the Motorcycle

NOTICE: Do not use pressurized water to wash the motorcycle. Water may seep in and deteriorate wheel bearings, brake caliper assemblies, brake master cylinders, electrical connectors, steering head bearings, and transmission seals. Do not direct any water stream at air intakes, exhaust outlets or electrical connectors.

Electrical components may be damaged by water. Do not allow water to contact electrical components or connectors.

Do not use glass cleaners, water or soil repellents, and petroleum or alcohol based cleaners on the windshield, as these products can damage the windshield.

1. Before washing, make sure exhaust pipes are cool. Cover each pipe opening with a plastic bag secured with a strong rubber band. Check that the spark plugs, spark plug wire caps, oil fill cap and fuel caps are properly seated.

Cleaning and Storage

Washing the Motorcycle

2. Rinse off as much dirt and mud as possible with water running at low pressure. Use as little water as possible when washing near the air cleaner or the exhaust pipe openings. Dry these components thoroughly before using the motorcycle.
3. Clean the front fork tubes thoroughly to reduce fork seal wear and leakage.
4. After washing, remove the rubber bands and plastic bags from the exhaust pipes. Start the engine and let it idle for a few minutes. Make sure the brakes are functioning properly before riding.

Cleaning and Storage

Washing the Motorcycle

There are two totally different styles of motorcycle washing and there is a Pure VICTORY Polish product for each style.

Standard “Bucket Wash”

This is the conventional way to wash your motorcycle. We recommend the use of Pure VICTORY Bike Wash Concentrate, a concentrated gentle product formulated to clean without diminishing the life of any durable polish. This product does not contain alkalis, acids or abrasives and is formulated to perform as a wetting agent to soften bugs, road grime and soil, and to prevent abrasion from your wash mitt or cloth. This product also decreases drying time without spotting or streaking.

1. Add 1 ounce (about 2 capfuls) to 1 gallon of water.
2. Apply to a cool motorcycle with a wool or microfiber wash mitt.

Tip: For best results, work one side of the motorcycle at a time, working from top to bottom.

3. Rinse thoroughly with an open hose, no pressure needed. Create a sheeting action to eliminate spotting.
4. Use a Pure VICTORY Microfiber Chamois or Plush Microfiber Towel to dry virtually spot-free.

Cleaning and Storage

Washing the Motorcycle

Spray-Rinse-and-Ride Wash

This is the new way to clean your VICTORY quickly and easily, then resume riding. Pure VICTORY Spray Rinse and Ride bike wash is safe and will not harm any surface that water won't harm.

If you clean your bike frequently, you may mix this product 50/50 with water. Spray the product on surfaces cool to the touch. DO NOT spray on a hot motorcycle. When applied, this product softens dirt, soil, bugs and road grime.

1. Spray windshields, body panels, saddle bags, trunks, engines, tires, wheels, pipes and chrome. Consistent and complete coverage of the motorcycle is important for best results.

Tip: Use a cloth or wash mitt on stubborn areas.

2. DO NOT allow the product to dry on your motorcycle. Blast rinse with a garden hose equipped with a pressure nozzle. Be sure to rinse thoroughly, then use a gentle rinse to create sheeting action of the water to lessen the possibility of spotting. Use a Pure VICTORY Microfiber Chamois or Plush Microfiber Towel to dry virtually spot-free.

Cleaning and Storage

Washing the Motorcycle

Quick Clean-Ups

For quick clean-ups between washings, or when water is not available, use Pure VICTORY Spray & Wipe Instant Detailer, a complete spray-and-wipe product designed to clean and polish all surfaces. It works quickly and easily and is silicone-free so it leaves no oily nor white residue. It provides protection from UV rays, acid rain, and dirt. It will remove bugs, road tar, and road grime from your windshield, paint and chrome. This product is safe for all surfaces, including pin striping, custom paint or murals. It's safe for Plexiglas, Lexan, Acrylic or factory-coated windscreens. It's non-streaking, and it provides polish protection and a water-repellent shine.

1. Spray on all surfaces, including the windshield, paint, chrome, wheels and leather to clean, polish and protect.
2. Wipe dry with Pure VICTORY Plush Microfiber Towel. **DO NOT** use a T-shirt.
3. Spray on and wipe off to easily remove bugs, dust and water spots. For heavily soiled surfaces, use product more liberally.

Tip: Use this product on the windshield to repel water and enhance rain visibility.

Cleaning and Storage

Polishing the Motorcycle

Polished Aluminum Care

When a VICTORY is new, the polished aluminum wheels, hand levers and shifter shine like chrome. Ultraviolet (UV) rays and oxidation will cause polished aluminum to grow dull, however, if it's not properly polished and protected.

Pure VICTORY Awesome Metal Polish will clean, polish and protect these aluminum surfaces. This metal polish will restore that factory chrome-like shine and leave a protective coating that resists future oxidation for several months. Pure VICTORY Awesome Metal Polish provides instant results you must see to believe!

1. Shake the polish container well before using.
2. Apply the product with a terry cotton or microfiber cloth or pad.
3. Rub gently until the black begins to come to the surface or until shine begins to show through the haze.
4. Allow the product to haze.
5. Remove the haze with a terry cotton or microfiber cloth and buff to a long-lasting chrome-like shine.

Cleaning and Storage

Polishing the Motorcycle

There are now two totally different styles of polishing or protecting your paint and chrome.

Standard Method of Polishing Paint and Chrome

Pure VICTORY Windshield, Paint and Chrome Polish is a unique formula designed to produce a glass-like shine on painted or clear-coated finishes and chrome surfaces. Use it on chrome-plated accessories to prevent surface rust and create a glass-like shine.

- Use it on chrome-plated accessories to prevent surface rust and create a glass-like shine.
- This product creates a high reflective index point, giving a deep, shiny finish without silicone.
- Use it to polish and fill light scratches on Plexiglas, Lexan, Acrylic and factory-coated windshields.
- It repels water from windshields and keeps bugs from sticking.
- Windshield, Paint and Chrome Polish provides long-lasting protection from oxidation, corrosion, UV rays and heat.

Cleaning and Storage

Polishing the Motorcycle

Standard Method of Polishing Paint and Chrome

1. Shake the container well before using.
2. Apply with Pure VICTORY 100% Microfiber Wax Applicator in a circular motion or straight line to a clean surface. It can be applied in direct sunlight.
3. Rub the product until it is almost clear, then allow to dry to a haze before removal. The entire motorcycle can be treated before removing polish.
4. Use a Pure VICTORY Polishes Plush Microfiber Towel to wipe it off easily and dust-free.
5. For best results on a windshield, apply to a clean windshield. Once applied, rain water beads and blows off, enhancing rain visibility. The glass-like finish keeps bugs from sticking and permits their easy removal.

Cleaning and Storage

Polishing the Motorcycle

Premium Polishing for Long-Lasting Protection

This newer style of polishing paint and chrome utilizes the latest in high-quality polymer technology that provides the longest-lasting protection available in the polish industry today. Pure VICTORY Liquid Spray Wax for Windshields, Paint & Chrome is formulated for polishing after washing and can be sprayed on wet or dry surfaces. Liquid Spray Wax quickly produces a durable, high-gloss shine with minimal effort. It contains NO ABRASIVES and is clear coat-safe. It contains NO PETROLIUM DISTILLATES or SILICONES.

Cleaning and Storage

Polishing the Motorcycle

Premium Polishing for Long-Lasting Protection

1. Shake container well before use.
2. Begin by washing and rinsing the motorcycle.
3. Spray Liquid Spray Wax on a wet or dry bike, one section at a time. (For best results, the bike's surface should be cool.)
4. Wipe dry one section at a time with Pure VICTORY Microfiber Chamois or microfiber towel.
5. When finished drying, buff the entire motorcycle with a clean, dry Pure VICTORY Microfiber Polishing Towel for a clean and luxurious shine.

Tip: Liquid Spray Wax can also be applied to clean and dry clear coats, windshields and chrome. Apply to one section at a time and wipe dry. When finished, use a second towel to buff to a luxurious, long-lasting shine.

Cleaning and Storage

Leather, Rubber and Vinyl Care

⚠ WARNING

Never use a non-recommended protectant on seats, footrests, hand grips or tires. Slippery seats, footrests or hand grips can cause loss of control. Slippery tires can cause loss of traction and loss of control. Both situations could result in serious injury or death.

For the finest leather care, use Pure VICTORY Leather, Vinyl & Rubber Conditioner, a unique, pleasantly scented formula of premium-quality polymers designed to restore luster and softness to vinyl, leather and rubber *without making them slippery*.

Cleaning and Storage

Leather, Rubber and Vinyl Care

This product is a true conditioner, not a coating. It does not close the pores of the surfaces but penetrates, nourishes and softens the material. It protects against ultra violet (UV) rays and cracking, repels water and prolongs the life and like-new appearance of the materials.

Applied to rubber, this product creates a water-repellent, like-new appearance. This product can also be used to restore or maintain the factory finish on a VICTORY VISION instrument panel/dash and rear storage compartment black vinyl surfaces. Regular use increases soil resistance.

1. Apply the product on a clean dry surface using a soft cloth.
2. Rub the product into the material. Repeat the treatment if the surface is extremely dry.
3. Wipe dry with a second cloth to remove excess product. Buff lightly with the second towel for additional luster.

Cleaning and Storage

If you will not operate the motorcycle for several months, such as during the winter, store the motorcycle to prevent damage to the fuel system and the battery and to protect components from corrosion or deterioration. During storage you might use products that are potentially hazardous; such as fuel stabilizer. When using any of these products, follow the instructions and warnings on the product packaging.

This section includes instructions for preparing the motorcycle for storage, maintaining it during storage and removing it from storage.

Storage Area Preparation

Choose a dry, well-ventilated storage location, inside a garage or other structure if possible. The location should have a firm, flat surface and allow enough space for the motorcycle.

To best preserve tire condition:

- The storage area should have a relatively constant and moderate temperature.
- The storage surface should be free of oil and gasoline.
- The motorcycle should not be near a radiator or other heat source, or any type of electric motor.

Cleaning and Storage

Clean and Protect the Motorcycle

To prepare the motorcycle for storage, begin by cleaning it as outlined beginning on. Wax painted surfaces and polish chromed and other metal surfaces. Apply protectant to exposed rubber, vinyl, and plastic parts.

Do not apply rubber protectant to the tire tread surfaces.

Fuel Stabilizer

Using a mixture of fuel and the recommended amount of VICTORY Premium Carbon Clean Plus or other gasoline stabilizer, fill the fuel tank only to the top of the filler insert.

Ride the motorcycle or start and run the engine for 15 minutes in a well ventilated area to pass the stabilized fuel through entire fuel-injection system.

Tire Inflation

Inflate the tires to normal pressure. See page 191.

Cleaning and Storage Engine Protection

Change the engine oil. See page 146. Carbon deposits and combustion acids, normally suspended in the engine oil when in service, settle on internal engine components during storage. Settled deposits can cause engine damage or internal corrosion.

Battery Care

1. Remove the battery. See page 196.
2. Clean the battery terminals first with a wire brush to remove any loose deposits.
3. Wash the posts and the ends of the battery cables with a solution of 1 part baking soda to 16 parts water. Rinse with clean water and wipe dry.
4. Apply a thin film of dielectric grease (available from your VICTORY dealer) to the posts and cable connectors.
5. Clean the outside of the battery with a solution of mild detergent and warm water.
6. Store the battery in a dry area with a temperature of 32° to 90° F (0° to 32° C).
7. While in storage, fully charge the battery once a month. See page 199.

Cleaning and Storage

Park and Cover the Motorcycle

Park the motorcycle in its storage location. Cover it with a genuine VICTORY motorcycle cover, or a cover made from a durable, breathable material designed for storage. Covering the motorcycle helps protect it from dust and other airborne materials. The cover must be of a breathable material to prevent moisture from building up on the motorcycle which can cause oxidation of metal surfaces.

Rodents

Mice and other rodents are often the worst enemy of a stored motorcycle. If the motorcycle will be stored in an area where mice are a concern (particularly in rural areas, barns, sheds, etc.) be sure to take extra measures to deter their infestation. This may include placing a screen mesh over any intake or exhaust openings (just be sure to remember to remove them when you take the motorcycle from storage).

Maintenance During Storage

During extended storage periods, maintain tire pressure and battery voltage at the recommended levels.

Cleaning and Storage Removal From Storage

1. Remove the cover and unlock the front forks (if locked).
2. Verify that tire pressure is at specification.
3. Install the battery and perform an electrical inspection.
4. Check the oil level. If the motorcycle was stored in an area subject to wide swings in temperature and humidity (such as outdoors), change the engine oil before starting the engine.
5. Inspect the storage area for signs of fluid leaks. Identify and perform service to any leaking components.
6. Install new spark plugs if necessary.
7. Wash and polish the motorcycle. Wax, polish, or apply protectant to appropriate components.
8. Perform the pre-ride inspections. See page 87.
9. Perform a road test. See page 218.

NOTICE: During storage, temperature and humidity changes can cause condensation to form in the crankcase and mix with engine oil. Running the engine with oil that contains condensation can cause engine damage.

Warranty

Motorcycle Noise Regulation

Tampering with noise control systems is prohibited. Federal law prohibits the following acts or causing thereof:

- The removal or rendering inoperative by any person other than for the purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- The use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are:

- Removal or puncturing of the muffler, baffles, header pipes, or any other component which conducts exhaust gasses.
- Removal or puncturing of any part of the intake system.
- Lack of proper maintenance.
- Replacing any moving part of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

This product should be checked for repair or replacement if the motorcycle noise has increased significantly through use. Otherwise, the owner may become subject to penalties under state and local ordinances.

Noise Emission Warranty

VICTORY Motorcycle Division warrants that this exhaust system, at the time of sale, meets all applicable U.S. EPA Federal noise standards. This warranty extends to the first person who buys this exhaust system for purposes other than resale, and to all subsequent buyers.

Warranty claims should be directed to:

- An authorized VICTORY dealer, or
- VICTORY Motorcycle Division, Polaris Sales Inc., P.O. Box 47700, Hamel, MN 55340-9960

Warranty

Emissions Control System Warranty

VICTORY MOTORCYCLES, Polaris Sales Inc. - Emission Control System Warranty Statement

Your Warranty Rights and Obligations

The California Air Resources Board and VICTORY Motorcycle Division, Polaris Sales Inc. (hereinafter VICTORY) are pleased to explain the emission control system warranty on your 2007 or later VICTORY motorcycle. In California, new motor vehicles must be designed, built and equipped to meet the state's stringent anti-smog standards. VICTORY must warrant the emission control system on your motorcycle for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your motorcycle. Your emission control system may include parts such as the fuel-injection system, the ignition system, catalytic converter and engine computer. Also included may be hoses, belts, connectors and other emission-related assemblies. Where a warrantable condition exists, VICTORY will repair your motorcycle at no cost to you, including diagnosis, parts and labor.

Manufacturer's Warranty Coverage

Class III motorcycles (280 cc and larger): for a period of use of five (5) years or 30,000 kilometers (18,641 miles), whichever first occurs.

If an emission-related part on your motorcycle is defective, the part will be repaired or replaced by VICTORY. This is your emission control system DEFECTS WARRANTY.

Warranty

Emissions Control System Warranty

Owner's Warranty Responsibilities

As the motorcycle owner, you are responsible for the performance of the required maintenance listed in your Rider's manual. VICTORY recommends that you retain all receipts covering maintenance on your motorcycle, but VICTORY cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance. You are responsible for presenting your motorcycle to a VICTORY dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days. As the motorcycle owner, you should be aware that VICTORY may deny your warranty coverage if your motorcycle or part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

If you have any questions regarding your warranty rights and responsibilities, you should contact VICTORY Motorcycle Division, Polaris Sales Inc., P.O. Box 47700, Hamel, Minnesota 55340-9960, or the California Air Resources Board, P.O. Box 8001, 9528 Telstar Avenue, El Monte, CA 91734-8001.

Warranty

Emissions Control System Warranty

VICTORY Motorcycle Division, Polaris Sales Inc. - Limited Warranty on Emission Control System

VICTORY Motorcycle Division, Polaris Sales Inc., (hereinafter VICTORY) warrants that each new 2009 and later VICTORY Motorcycle that includes as standard equipment a headlight, taillight and stoplight, and is street legal:

A. is designed, built and equipped so as to conform at the time of initial retail purchases with all applicable regulations of the United States Environmental Protection Agency, and the California Air Resources Board; and

B. is free from defects in material and workmanship which cause such motorcycle to fail to conform with applicable regulations of the United States Environmental Protection Agency or the California Air Resources Board for a period of use, depending on the engine displacement, of 12,000 kilometers (7,456miles), if the motorcycle's engine displacement is less than 170 cubic centimeters; of 18,000 kilometers (11,185miles), if the motorcycle's engine displacement is equal or greater than 170 cubic centimeters but less than 280 cubic centimeters; or of 30,000 kilometers (18,641miles), if the motorcycle's engine displacement is 280 cubic centimeters or greater; or 5 (five) years from the date of initial retail delivery, whichever occurs first.

Warranty

Emissions Control System Warranty

I. Coverage

Warranty defects shall be remedied during customary business hours at any authorized VICTORY motorcycle dealer located within the United States of America in compliance with the Clean Air Act and applicable regulations of the United States Environmental Protection Agency and the California Air Resources Board. Any part or parts replaced under this warranty shall become the property of VICTORY.

In the State of California only, emission related warranted parts are specifically defined by the state's Emission Warranty Parts List. These warranted parts are: carburetor and internal parts; intake manifold; fuel tank; fuel injection system; spark advance mechanism; crankcase breather; air cutoff valves; fuel tank cap for evaporative emission controlled vehicles; oil filler cap; pressure control valve; fuel/vapor separator; canister; igniters; breaker governors; ignition coils; ignition wires; ignition points; condensers, and spark plugs if failure occurs prior to the first scheduled replacement; and hoses, clamps, fittings and tubing used directly in these parts. Since emission related parts may vary from model to model, certain models may not contain all of these parts and certain models may contain functionally equivalent parts.

In the State of California only, Emission Control System emergency repairs, as provided for in the California Administrative Code, may be performed by other than an authorized VICTORY dealer. An emergency situation occurs when an authorized VICTORY dealer is not reasonably available, a part is not available within 30 days, or a repair is not complete within 30 days. Any replacement part can be used in an emergency repair. VICTORY will reimburse the owner for expenses, including diagnosis, not to exceed VICTORY's suggested retail price for all warranted parts replaced and labor charges based on VICTORY's recommended time allowance for the warranty repair and the geographically appropriate hourly labor rate. The owner may be required to keep receipts and failed parts in order to receive compensation.

Warranty

Emissions Control System Warranty

II. Limitations

The Emission Control System Warranty shall not cover any of the following:

A. Repair or replacement required as a result of:

- Accident
- Misuse
- Repairs improperly performed or replacements improperly installed
- Use of replacement parts or accessories not conforming to VICTORY specifications which adversely affect performance and/or
- Use in competitive racing or related events.

B. Inspections, replacement of parts, and other services and adjustments necessary for required maintenance

C. Any motorcycle on which the odometer mileage has been changed so that actual mileage cannot be readily determined.

Warranty

Emissions Control System Warranty

III. Limited Liability

A. The liability of VICTORY under this Emission Control System Warranty is limited solely to the remedying of defects in material or workmanship by an authorized VICTORY motorcycle dealer at its place of business during customary business hours. This warranty does not cover inconvenience or loss of use of the motorcycle or transportation of the motorcycle to or from the VICTORY dealer. VICTORY SHALL NOT BE LIABLE FOR ANY OTHER EXPENSES, LOSS OR DAMAGE, WHETHER DIRECT, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY ARISING IN CONNECTION WITH THE SALE OR USE OF OR INABILITY TO USE THE VICTORY MOTORCYCLE FOR ANY PURPOSE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

B. NO EXPRESS EMISSION CONTROL SYSTEM WARRANTY IS GIVEN BY VICTORY EXCEPT AS SPECIFICALLY SET FORTH HEREIN. ANY EMISSION CONTROL SYSTEM WARRANTY IMPLIED BY LAW, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO THE EXPRESS EMISSION CONTROL SYSTEM WARRANTY TERMS STATED IN THIS WARRANTY. THE FOREGOING STATEMENTS OF WARRANTY ARE EXCLUSIVE AND IN LIEU OF ALL OTHER REMEDIES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

C. No dealer is authorized to modify this VICTORY Limited Emission Control System Warranty.

Warranty

Emissions Control System Warranty

IV. Legal Rights

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

V. This warranty is in addition to the VICTORY Limited Motorcycle Warranty

VI. Additional Information

Any replacement part that is equivalent in performance and durability may be used in the performance of any maintenance or repairs. However, VICTORY is not liable for these parts. The owner is responsible for the performance of all required maintenance. Such maintenance may be performed at a service establishment or by any individual. The warranty period begins on the date the motorcycle is delivered to an ultimate purchaser.

**VICTORY Motorcycle Division, Polaris Sales, Inc.
P.O. Box 47700
Hamel, MN 55340-9960
ATTN: Warranty Department**

Warranty

Warranty

VICTORY Motorcycle Warranty Policy

Limited Warranty

VICTORY Motorcycle Division, Polaris Sales Inc., P.O. Box 47700, Hamel, Minnesota 55340-9960, gives a ONE YEAR LIMITED WARRANTY on all components of the VICTORY Motorcycle against defects in material or workmanship. This warranty covers the parts and labor charges for repair or replacement of defective parts which are covered by this warranty. This warranty begins on the date of purchase. This warranty is transferable to another consumer during the warranty period through a VICTORY Motorcycle dealer.

Registration

At the time of sale, the Warranty Registration Form must be completed by your dealer and submitted to VICTORY Motorcycle Division, Polaris Sales Inc. within ten days. Upon receipt of this registration, VICTORY Motorcycle Division, Polaris Sales Inc. will record the registration for warranty. No verification of registration will be sent to the purchaser as the copy of the Warranty Registration Form will be the warranty entitlement. If you have not signed the original registration and received the “customer copy”, please contact your dealer immediately. **NO WARRANTY COVERAGE WILL BE ALLOWED UNLESS YOUR VICTORY MOTORCYCLE IS REGISTERED WITH VICTORY MOTORCYCLES DIVISION OF POLARIS SALES INC.**

Initial dealer preparation and set-up of your VICTORY Motorcycle is very important in ensuring trouble-free operation. Purchasing a motorcycle in the crate or without proper dealer set-up will void your warranty coverage.

Warranty

VICTORY Motorcycle Warranty Policy

Warranty Coverage and Exclusions:

Limitations of Warranties and Remedies

The warranty excludes any failures that are not caused by a defect in material or workmanship. This warranty does not cover accidental damage, normal wear and tear, abuse or improper handling. This warranty also does not cover any VICTORY Motorcycle that has been altered structurally, modified, neglected, improperly maintained, used for racing, or used for purposes other than for which it was manufactured, or for any damages which occur during trailer transit or as a result of unauthorized service or the use of unauthorized parts. In addition, this warranty does not cover physical damage to paint or finish, stress cracks, tearing or puncturing of upholstery material, corrosion, or defects in parts, components or VICTORY Motorcycle due to fire, explosions or any other cause beyond VICTORY Motorcycle Division, Polaris Sales Inc. control.

This warranty does not cover the use of unauthorized lubricants, chemicals, or fuels that are not compatible with the VICTORY Motorcycle.

The exclusive remedy for breach of this warranty shall be, at VICTORY Motorcycle Division, Polaris Sales Inc. exclusive option, repair or replacement of any defective materials, or components or products. THE REMEDIES SET FORTH IN THIS WARRANTY ARE THE ONLY REMEDIES AVAILABLE TO ANY PERSON FOR BREACH OF THIS WARRANTY. VICTORY MOTORCYCLES DIVISION OF POLARIS SALES INC. SHALL HAVE NO LIABILITY TO ANY PERSON FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY DESCRIPTION, WHETHER ARISING OUT OF EXPRESS OR IMPLIED WARRANTY OR ANY OTHER CONTRACT, NEGLIGENCE, OR OTHER TORT OR OTHERWISE. Some states do not permit the exclusion or limitation of incidental or consequential damages or implied warranties, so the above limitations or exclusions may not apply to you if inconsistent with controlling state law.

Warranty

VICTORY Motorcycle Warranty Policy

Warranty Coverage and Exclusions:

Limitations of Warranties and Remedies

ALL IMPLIED WARRANTIES (INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO THE ABOVE ONE YEAR WARRANTY PERIOD. VICTORY MOTORCYCLES DIVISION OF POLARIS SALES INC. FURTHER DISCLAIMS ALL EXPRESS WARRANTIES NOT STATED IN THIS WARRANTY OTHER THAN EMISSIONS AND EXCISE WARRANTIES. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you if inconsistent with controlling state law.

How To Obtain Warranty Service

If your VICTORY Motorcycle requires warranty service, you must take it to a VICTORY Motorcycle Servicing Dealer. When requesting warranty service you must present your copy of the Warranty Registration form to the dealer. (THE COST OF TRANSPORTATION TO AND FROM THE DEALER IS YOUR RESPONSIBILITY). VICTORY MOTORCYCLES division of Polaris Sales Inc. suggests that you use your original selling dealer; however, you may use any VICTORY Motorcycle Servicing Dealer to perform warranty service.

Please work with your dealer to resolve any warranty issues. Should your dealer require any additional assistance they will contact the appropriate person at VICTORY MOTORCYCLES division of Polaris Sales Inc.

This warranty also gives you specific legal rights, and you may also have other rights which vary from state to state.

If any of the above terms are void because of state or federal law, all other warranty terms will remain in effect.

Specifications

	2010 Vision 8-Ball/Ness	2010 Vision Tour	2010 Vision Tour ABS
Dimensions (Dimensions and specifications may vary with features, options and accessories)			
Overall Length	103.5 in. (262.9 cm)	104.9 in. (266.5 cm)	104.9 in. (266.5 cm)
Overall Width	45.2 in. (114.7 cm)	45.2 in. (114.7 cm)	45.2 in. (114.7 cm)
Overall Height	56.2 in. (142.7 cm)	58.5 in. (148.5 cm)	58.5 in. (148.5 cm)
Seat Height	24.5 in. (62.2 cm)	26.5 in. (67.3 cm)	26.5 in. (67.3 cm)
Wheel Base	65.7 in. (166.9 cm)	65.7 in. (166.9 cm)	65.7 in. (166.9 cm)
Ground Clearance	4.8 in. (12.2 cm)	5.8 in. (14.8 cm)	5.8 in. (14.8 cm)
Rake & Trail	29°/5.4 in. (13.7 cm)		
Weight			
Dry Weight	800 lbs. (363 kg)	852 lbs. (387 kg)	869 lbs. (394 kg)
Wet Weight	840 lbs. (381 kg)	892 lbs. (405 kg)	909 lbs. (412 kg)
Maximum Load Capacity (riders, cargo, accessories, options)	574 lbs. (260 kg)	522 lbs. (237 kg)	505 lbs. (229 kg)
Gross Vehicle Weight Rating-GVWR (see page 32)	1414 lbs. (641 kg)		
Gross Axle Weight Rating (GAWR)	Front Axle: 513 lbs. (233 kg)		
	Rear Axle: 901 lbs. (409 kg)		

Specifications

	All 2010 Vision Models
Capacities	
Engine Oil	5 qt (4.75 l) [Approximately 4.5 qt (4.25 l) at oil change]
Fuel	6.0 Gallons (22.7 l)
Fuel Reserve	1.0 Gallon (3.8 l)
Engine	
Engine Type	VICTORY Freedom [®] 106 / 6 V-Twin
Configuration	50° V-Twin 4 Stroke SOHC
Displacement	106 Cubic Inch (1737 cc)
Cooling System	Air & Oil
Compression Ratio	9.4:1
Valve Train	4 Valves per cylinder. Hydraulic Lifters & Self-Adjusting Cam Chains
Bore & Stroke	101 x 108 mm
Throttle Body Bore	45 mm
Electronic Fuel Injection System	Closed Loop
Lubrication System	Wet Sump
Spark Plug / Gap	NGK DCPR6E / .036 in. (.9 mm)
Exhaust	Split dual exhaust with crossover

Specifications

	All 2010 Vision Models
Chassis	
Front Suspension Type / Travel	Telescopic Fork / 5.1 in. (13 cm)
Front Fork Tube Diameter	46 mm
Rear Suspension Type / Travel	Single Monotube Air Adjustable Shock: 4.7 in. (12 cm) 3.5 in. (9 cm) (8-Ball)
Swingarm	Cast Aluminum with Rising Rate Linkage
Front Brakes	Dual Disc / Floating Rotor / 3 Piston Calipers
Rear Brakes	Disc / Floating Rotor / 2 Piston Caliper
Total Storage Volume	3370 Cubic In. (55,224 Cubic Centimeters)
Drive System	
Final Drive Type	Carbon Fiber Reinforced Belt
Transmission Type	6 Speed Constant Mesh with True Overdrive
Primary Drive Type (Reduction Ratio)	Gear Drive with Torque Compensator (1.5:1)

Specifications

	All 2010 Vision Models
Drive System	
Gear Shift Pattern	1 Down 5 Up
Internal Gear Ratios	
1st	3.15:1
2nd	2.03:1
3rd	1.53:
4th	1.24:1
5th	1:1
6th (Overdrive)	.84:1
Final Drive Ratio	2.12:1
Clutch Type	Wet, Multi Plate, Diaphragm Spring

Specifications

	All 2010 Vision Models
Wheels And Tires	
Front Wheel Type / Size	Cast or Billet 18 x 3.0 inch
Front Tire Type / Size	DUNLOP Elite 3 - 130/70R18 63H Radial
Rear Wheel Type / Size	Cast or Billet 16 x 5.0 inch
Rear Tire Type / Size	DUNLOP Elite 3 - 180/60R16 M/C 80H Radial
Electrical	
Alternator	50 Amp Maximum Output
Battery	12 Volt / 18 Amp Hour / 310 CCA / Yuasa YTX20HL
Lights	
Headlamp (High / Low)	H4 55/60W
Driving Lamp (Standard)	HS1 35W
Driving Lamp (HID)	D1R 35W
Turn / Tail / Brake Lamp	3157 27/ 7W
License Plate Lamp	W5W 5W
Trunk Lamps (Running Lights)	W5W 5W
Courtesy Lamp (trunk, if equipped)	6411 10W

Specifications

	All 2010 Vision Models
Fuses / Circuit Breakers	
Left Fuse Box	
Ignition	10A Breaker
Headlight	20A Breaker
Gauges	5A
Radio	25A
Secondary Lights	20A
Horn	20A
Turn Signal / Brake	20A
Right Fuse Box	
Engine	15A Breaker
Windshield (Electric)	20A
Fuel Pump / Ignition Coil	15A
Anti-Lock Brake System	30A (2)

Specifications

Fuel Recommendation

For best performance, use only unleaded gasoline with a 91 pump octane minimum (R+M/2 Method).

DO NOT USE E-85 GASOLINE OR GASOLINE CONTAINING METHANOL. Using E85 or gasoline / methanol blends can result in poor starting and driveability, and may damage critical fuel system components.

Gasoline containing up to 10% Ethanol can be used.

Gasoline containing up to 15% Methyl Tertiary Butyl Ether (MTBE) can be used.

Engine Oil Recommendation

Polaris Recommends the use of VICTORY brand Semi-Synthetic 20W-40 Motor Oil or equivalent *motorcycle* oil that is approved for use in wet clutch transmissions (such as those with a JASO MA rating).

Audio System Introduction

Not all motorcycles are equipped with all components discussed in the audio section of this manual. Components not installed at the factory can be purchased from and installed by your local VICTORY dealer.

Audio System Overview

Radio Frequencies


North America

- AM 520 to 1720 kHz
- FM 87.9 to 107.9 MHz
- WX 162.40 to 162.55 MHz

European

- FM 87.5 to 108.00 MHz
- MW 522 to 1602 kHz
- LW 144 to 288 kHz


Audio System Overview Main User Interface

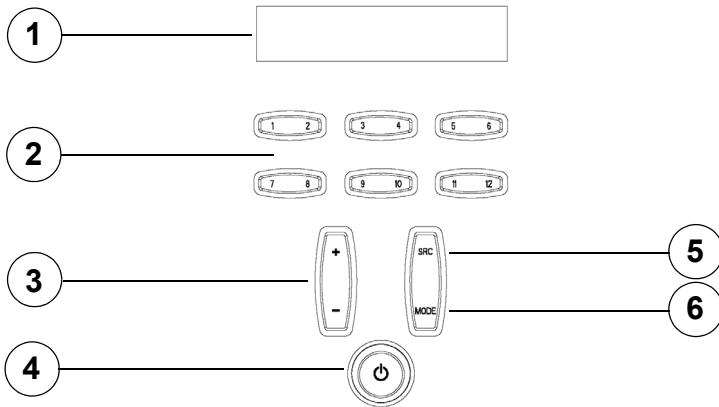


Main User Interface

Refer to the illustration on the previous page.

1. **LCD screen:** The LCD screen displays information for the active sources.

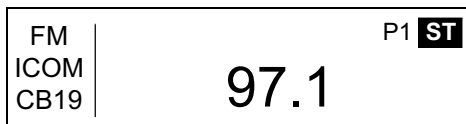


2. **Memory Presets:** Presets allow the operator to store and recall up to 12 radio stations or access up to 11 iPod user-defined playlists.

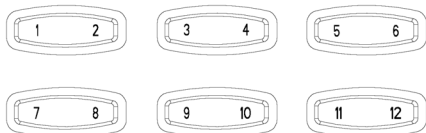

Audio System Overview

 3. **Volume/Menu Option:** Adjust volume or cycle through menu options in the mode menus.



4. **Power ON/OFF:** Press the power button to turn the system on or off.

 


- Tip:** The ignition key must be in the ACC or ON position to use the audio system.

Audio System Overview

Main User Interface

5. **Source (SRC):** Press SRC to cycle through available sources or to exit mode menus.
6. **Mode:** Press and release the MODE button to enter the audio system mode menus. Continue to press and release the MODE button until the desired mode menu displays.



Tip: Sources and menu options will be displayed only for installed components.

U.S.A. Sources

- FM
- WX
- XM Radio
- AM
- AUX (NAV MP3, AUX or iPod)

European Sources

- FM
- LW
- MW
- AUX (NAV MP3, AUX or iPod)

Mode Menu Options

- Bass
- Treble
- Fader
- External Speakers
- Automatic Volume Control
- CB Headset ENT Mode
- ICOM Volume
- CB Volume
- CB Local/Distant
- Tuning Mode
- Radio Data System
- AUX Mode
- XM Display
- XM Category
- XM Tune Mode


Tip: Some mode menu options have sub-menus.

Audio System Overview

Audio Controls

Operation of the left handlebar audio controls is outlined in greater detail on the following pages.

1. **Volume:** Press to increase (+) or decrease (-) audio volume. Press and hold to rapidly increase or decrease volume.
2. **Tuner:** Press (+) or (-) to change radio stations or iPod tracks. Press and hold to automatically seek or scan.
3. **Source/Exit (S/E):** Press S/E to cycle through available sources or to exit the current mode.
4. **Mute:** Press MUTE to silence audio and pause the iPod.

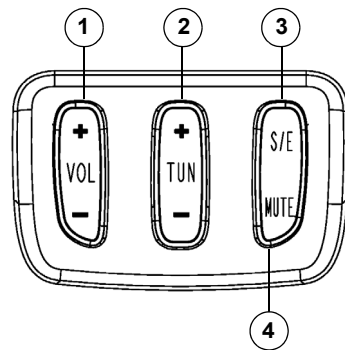


Audio System Overview

Citizens Band (CB) Radio Controls

If equipped, the operator's CB radio controls are located on the left handlebar above the audio controls. Operation of these controls is outlined in greater detail on the following pages.

1. **Push-to-Talk (PTT):** Press and hold the top or bottom of the button to transmit. See page 291.
2. **Squelch:** Press SQ (+) or SQ (-) to adjust CB radio channel reception sensitivity. See page 292.
3. **COM:** Press COM to turn the CB radio on or off. Press and hold COM to select a COM channel.
4. **ICOM:** Press ICOM to turn the driver/passenger intercom on or off. Press and hold ICOM to access Voice-Activated Switch (VOX) settings. See page 296.

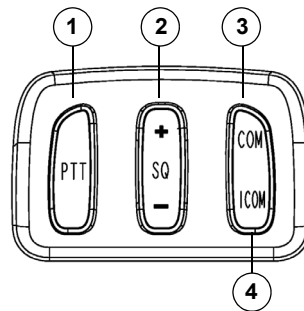


Audio System Overview

Citizens Band (CB) Radio Controls

Passenger CB Controls

1. **Push-to-Talk (PTT):** Press and hold the button to transmit.
2. **Rear Volume:** Press (+) or (-) on the passenger control to raise or lower volume.

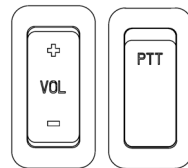

Audio Overview

 
Audio System Operation

Audio System Power

The ignition key must be in the ACC or ON position to use the audio system.

With the key in the ACC or ON position and audio system OFF, the screen will display “VICTORY”.

Press the power button to turn the audio system on. The screen will display the active sources.




VICTORY

Tip: To prevent battery drain, do not leave the key in the ACC position for long periods. VICTORY recommends using the audio system only when the engine is running.

Audio System Power

1. Current audio source:
 - (U.S.) FM / AM / WX / iPod - AUX / XM
 - (Euro) FM / MW / LW / iPod - AUX
2. Station preset number (P1-P12)
3. CB radio active channel (if equipped)
4. Intercom system active (if equipped)
5. Stereo indicator

Tip: The audio system will always display the last active source when turned on.

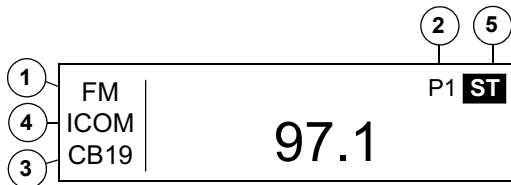


Audio System Operation

Audio Volume Control

The driver can adjust volume for the front and rear speakers, turn the speakers off or on and mute the system audio.

Audio Mute

Press and release MUTE to drop audio system volume. To resume volume to the prior level, press and release MUTE again.

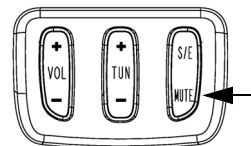


Audio System Operation

Audio Volume Control


Audio Volume

Press and release (+) or (-) on the console to raise or lower volume. You can also press VOL (+) or VOL (-) on left control.

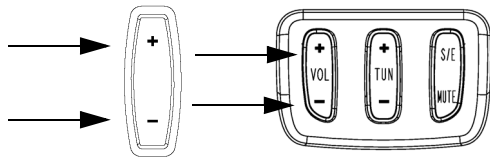


Passenger Volume Control

The passenger can control the rear headset volume. Press (+) or (-) on the passenger control to adjust the volume.

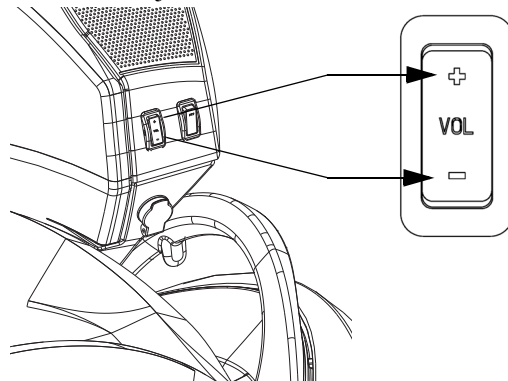


Selecting Audio Sources

Press and release S/E or SRC until the desired source is active.

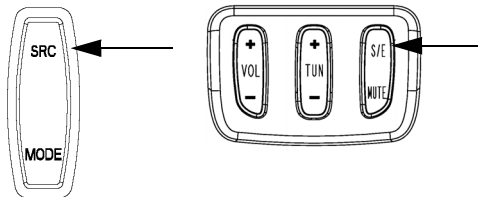


Audio System Operation

 FM source active:
U.S. / European models



AM source active:
U.S. models only

 

WX (Weather) source active:
U.S. models only



Audio System Operation

Selecting Audio Sources

NAV MP3 source active:
U.S. / European models

AUX ICOM CB19	NAV MP3
---------------------	---------

iPod source active:
U.S. / European models (skipped if not equipped)

iPod	Artist Title Playlist
------	-----------------------------

AUX source active:
U.S. / European models

AUX ICOM CB19	AUX
---------------------	-----

XM Radio source active:
U.S. models only (skipped if not equipped)

XM	CH25	P6	TheBlend
		Sting	
		Fields of Gold	

Selecting Audio Sources

MW (Medium Wave) Source:
European models only

MW	531
----	-----

LW (Long Wave) source:
European models only

LW	144
----	-----

Audio System Operation


Audio Tuning

Use the tuner on the left control to select radio stations.

Press and *release* TUNE (+) or TUNE (-) to locate stations in single-step increments.

Press and *hold* TUNE (+) or TUNE (-) to seek or scan for stations depending on mode setting.

Press and release TUNE or S/E to exit the seek or scan function.

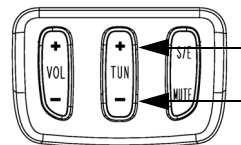


Audio System Operation Memory Presets

The audio system features 12 user-defined presets for storing favorite stations.


To set a preset, select the desired source (FM, AM, WX, XM, MW or LW).

Use TUNE or seek/scan to locate a radio station.

Press and hold one of the console preset buttons (1-12) until the audio sound is muted for 1/2 second.

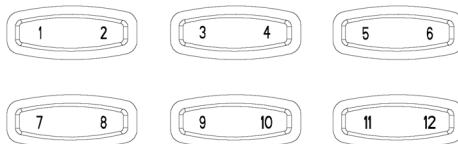

 
The preset location displays on the screen.



Audio Mode Menus

Entering Mode Menus


Press and release the MODE button on the console panel to enter the audio system mode menus. Continue to press and release the MODE button until the desired menu displays.

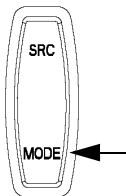

Audio System Operation

Exiting Mode Menus

Press S/E on the left control to exit the screen and return to the main display. Pressing SRC on the control panel will also exit the screen.

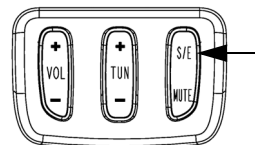

Tip: After 5 seconds of inactivity, the system will exit the menu and return to the default display.


Audio System Operation

Audio Mode Menus

To change mode settings, enter the mode menu. Press (+) or (-) on the console panel to change settings. Press S/E to save and exit.


Bass Setting

Press (+) or (-) on the console panel to adjust the level.

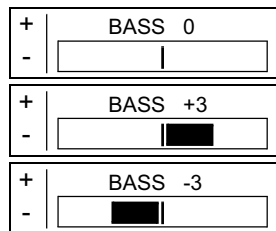

Treble Setting

Press (+) or (-) on the console panel to adjust the level.

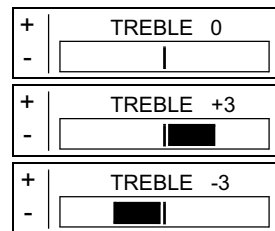


Audio System Operation

Audio Mode Menus

To change mode settings, enter the mode menu. Press (+) or (-) on the console panel to change settings. Press S/E to save and exit.


Fader Setting

 Press (+) or (-) on the console panel to change settings.



External Speakers

Press (+) or (-) on the console panel to turn the speakers on or off.

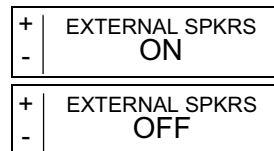

Audio System Operation

Audio Mode Menus

To change mode settings, enter the mode menu. Press (+) or (-) on the console panel to change settings. Press S/E to save and exit.

Automatic Volume Control (AVC)

When set, this feature will lower or raise the speaker/headset volume automatically, based on vehicle speed.

+	AUTO VOL CONTROL
-	OFF
+	AUTO VOL CONTROL
-	LOW
+	AUTO VOL CONTROL
-	MEDIUM
+	AUTO VOL CONTROL
-	HIGH

Off: Volume will not adjust

Low: Least aggressive setting

Medium: Moderate setting

High: Most aggressive setting

Audio System Operation

Audio Mode Menus

CB Headset Volume Controls (if equipped)

The headsets have three separate volume settings: Intercom (ICOM) volume, CB receive volume and entertainment (ENT) volume. Always position headsets with the speakers directly over your ears to ensure the best sound quality and volume.

Tip: The driver can turn off the external speakers and listen to audio only through the headsets. See page 279.

Item	Driver Controls	Passenger Controls
ENT Volume	Press VOL (+) or VOL (-) on the left control or press the console panel (+/-) (while listening to ENT).	Press (+) or (-) on the passenger control.
ICOM Volume	Press VOL (+) or VOL (-) on the left control (when VOX is in use) or press the console panel (+/-) when the ICOM volume screen is active from the mode menu.	
CB Receive Volume	Press VOL (+) or VOL (-) on the left control (when receiving a CB transmission) or press the console panel (+/-) when the CB volume screen is active from the mode menu.	

Audio System Operation

Audio Mode Menus

CB Headset ENT Mode (if equipped)

To change mode settings, enter the mode menu. Press (+) or (-) on the console panel to change settings. Press S/E to save and exit.

OFF: Only communications are audible in the headsets. Riders can listen to navigation commands and entertainment with the external speakers while reserving the headset for communication.

+	HEADSET ENT MODE
-	OFF

+	HEADSET ENT MODE
-	MIX

+	HEADSET ENT MODE
-	MUTE

MIX: The audio source volume drops lower than the ICOM volume whenever the voice-operated switch (VOX) is opened. The audio source volume gradually returns to its original level after the VOX is closed.

MUTE: The audio source volume is muted when the VOX is opened. The audio source volume gradually returns to its original level after the VOX is closed.

Audio System Operation

 
Audio Mode Menus

To change mode settings, enter the mode menu. Press (+) or (-) on the console panel to change settings. Press \bar{S}/E to save and exit.

Tip: Sources and menu options will be displayed only for installed components.


ICOM Volume

Press (+) or (-) on the console panel to change settings.




CB Volume

 Press (+) or (-) on the console panel to change settings.



CB LO/DX Mode

 Press (+) or (-) on the console panel to change settings. See page 294 for more detailed information.



Tuning (Seek/Scan Modes)

Press (+) or (-) on the console panel to set the tuner SEEK or SCAN mode.




Audio System Operation

Audio Mode Menus

To change mode settings, enter the mode menu. Press (+) or (-) on the console panel to change settings. Press S/E to save and exit.


Radio Data System (RDS)

Press (+) or (-) on the console panel to turn the radio data system on or off. When on, the screen will display artist, song title, etc. (if available in the radio signal).

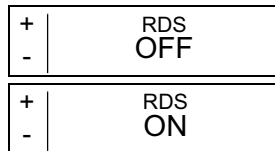

AUX Mode

Press (+) or (-) on the console panel to set the mode to AUX (for iPod or any other MP3 player use) or to NAV MP3 for navigation unit MP3 player use.

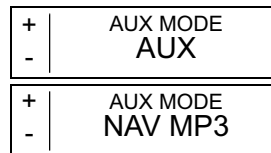

Tip: NAV MP3 mode will override any device connected with an input cable in the left console storage bin.

Tip: If using NAV MP3 mode, always pause the GARMIN unit before changing sources. Otherwise, music from the NAV unit will interrupt the new source, interpreting it as navigation commands, not music.

Audio Mode Menus

To change mode settings, enter the mode menu. Press (+) or (-) on the console panel to change settings. Press S/E to save and exit.

Tip: Sources and menu options will be displayed only for installed components.

XM Display

Press (+) or (-) on the console panel to set the screen to display channel name or category when the XM radio is active.

+	XM DISPLAY CHANNEL NAME
-	XM DISPLAY CATEGORY

Audio System Operation

XM Category

Press (+) or (-) on the console panel to set the music selection category when tuning XM. These categories are downloaded from XM whenever the XM antenna is receiving a signal and may change from time to time.

+	XM CATEGORY All Channels
-	XM CATEGORY MorMusic
+	XM CATEGORY Traffic

Tip: Selecting a category will then limit the channels available to those within that category until ALL CHANNELS or another category is selected.

Audio System Operation

Audio Mode Menus

To change mode settings, enter the mode menu. Press (+) or (-) on the console panel to change settings. Press S/E to save and exit.

XM Tune Mode

Press (+) or (-) on the console panel to change the mode. In SCAN mode, TUNE (+) or TUNE (-) will tune to the next

higher or lower XM channel, remain there for up to 5 seconds, then automatically tune to the next higher or lower channel until TUNE (+) or TUNE (-) is pressed again.

+	XM TUNE MODE
-	SCAN
+	XM TUNE MODE
-	SEEK

Weather Band (WX)


Weather band channels are broadcast by the National Oceanic and Atmospheric Administration (NOAA). NOAA operates more than 940 transmitters covering the United States, Puerto Rico, the U.S. Virgin Islands, the U.S. Pacific Territories and adjacent coastal waterways.

Press and release S/E or SRC until the desired source is active. When the WX source is selected, a total of 7 weather band channels are available.

Typically, only one weather band channel will be available for a given location. When traveling, if a channel becomes unavailable, search for another active channel.

Audio System Operation

Press P1-P7 on the console to access a channel, or use TUNE (+) or TUNE (-).

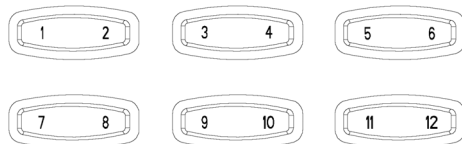

WX Channels

WX Ch.	Freq.
1	162.400
2	162.425
3	162.450
4	162.475
5	162.500
6	162.525
7	162.550

CB Radio / ICOM System CB/ICOM Introduction

In the U.S.A., refer to the Federal Communications Commission (FCC) Plain Rules pamphlet accompanying this rider's manual for a comprehensive guide of citizens band (CB) radio rules and regulations.

Headset Use

The use of helmet-mounted headsets may be restricted or prohibited in some areas. Always obey all applicable regulations and laws.

The headsets have three separate volume settings: Intercom (ICOM) volume, CB receive volume and entertainment (ENT) volume. See page 281.

CB Radio / ICOM System


Getting Started

Tip: To minimize distractions while riding, always make adjustments to the CB/ICOM system prior to operating your motorcycle.

Tip: To prevent battery drain, do not leave the key in the ACC position for long periods. VICTORY recommends using the audio system only when the engine is running.


The ignition key must be in the ACC or ON position to use the audio system.

1. Press the power button to turn the audio system on.
2. Press COM on the left control to activate the CB/COM system.

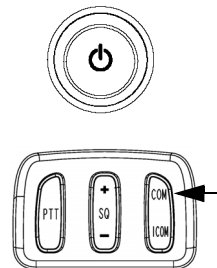


CB Radio / ICOM System CB Channels

 
When the CB radio system is active, “CB” and the active channel will display.



Press and hold COM on the upper left control to access the CHANNEL ADJUST screen.

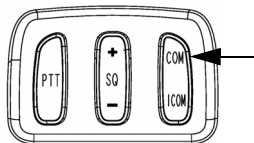


 Push COM or ICOM on the left control or (+) or (-) on the console panel to change channels.



Tip: Changing to a new channel may require changing the squelch setting.



Press S/E on the left control to exit the screen and return to the main display.

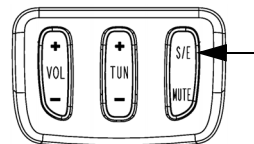



CB Radio / ICOM System

Push-to-Talk (PTT)

Press and hold the top or bottom of the PTT button to transmit over CB radio. The passenger must push and hold the rear PTT button.

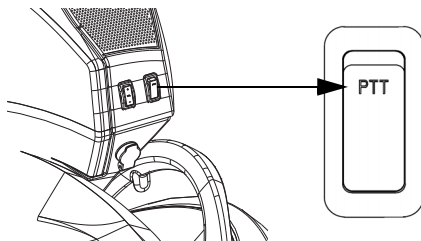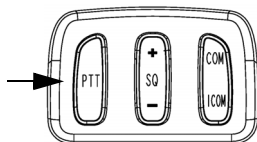

“TX” will display on the console screen when one of the PTT buttons is pressed. “RX” will display when the CB is receiving a transmission.

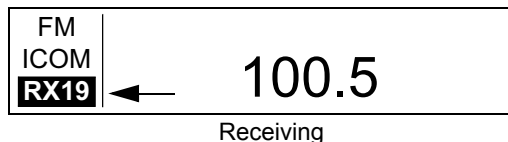
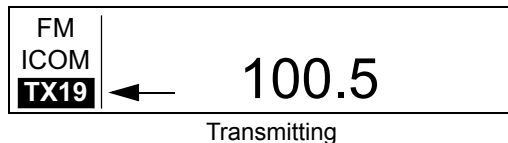


CB/ICOM

CB Radio / ICOM System Squelch

Squelch blocks undesired signals and noise by allowing the reception of signals only over a specified level.

 
Press and release the SQ (+) or SQ (-) buttons to adjust the squelch to any level between OPEN and CLOSED.

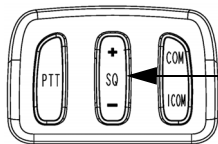

When squelch is set to OPEN, no filtering occurs. Setting squelch to CLOSED blocks all signals, including strong signals.


To set the squelch level, first lower the squelch level until noise or static is audible. Gradually increase the squelch level until the noise or static is gone.

Press S/E on the left control to exit the screen and return to the main display.

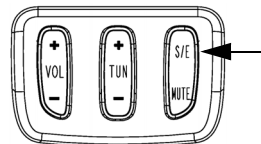

Driver CB Radio Volume

 To change settings, enter the mode menu. Press (+) or (-) on the console panel to adjust settings. Press S/E to save and exit.




Tip: The CB volume can also be set using the hand control when the CB is receiving.

CB Radio / ICOM System Passenger CB Radio Volume

The passenger can control rear headset volume when Entertainment, CB radio or ICOM is active.

Tip: Each volume setting is independently adjustable.

Press (+) or (-) on the passenger control to raise or lower volume.

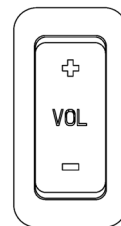

CB/ICOM

CB Radio / ICOM System Local/Distant CB Radio Mode

To change mode settings, enter the mode menu. Press (+) or (-) on the console panel to set the CB to local (LO) or distant (DX) mode. Press S/E to save and exit.

+	CB LO / DX MODE
-	DISTANT
+	CB LO / DX MODE
-	LOCAL

Distant: Use this setting for weaker signals. Receiver sensitivity will be increased. Static and noise levels are increased.

Local: Use this setting for stronger signals or in high density areas. Receiver sensitivity will be decreased. Static and noise levels are decreased.

CB Radio / ICOM System

CB Radio Frequencies

The FCC has designated 40 citizen band (CB) channels for consumer use. Channel 9 is designated as an EMERGENCY channel for emergency use only.


CB Channels / Frequencies

Ch.	Freq.	Ch.	Freq.	Ch.	Freq.	Ch.	Freq.	Ch.	Freq.	Ch.	Freq.
1	26.965	8	27.055	15	27.135	22	27.225	29	27.295	36	27.365
2	26.975	9	27.065	16	27.155	23	27.255	30	27.305	37	27.375
3	26.985	10	27.075	17	27.165	24	27.235	31	27.315	38	27.385
4	27.005	11	27.085	18	27.175	25	27.245	32	27.325	39	27.395
5	27.015	12	27.105	19	27.185	26	27.265	33	27.335	40	27.405
6	27.025	13	27.115	20	27.205	27	27.275	34	27.345		
7	27.035	14	27.125	21	27.125	28	27.285	35	27.355		

CB Radio / ICOM System ICOM System

Press and release ICOM on the left control to activate the intercom system.


When the intercom system is active, ICOM will display on the console screen.

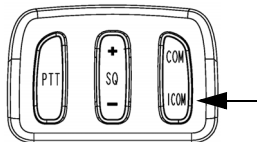

VOX Break Setting

The intercom is opened and closed using a voice-operated switch (VOX). The volume sensitivity level required to open the intercom can be adjusted using the VOX sensitivity setting.

Press and hold ICOM on the upper left control to access the VOX sensitivity set screen.

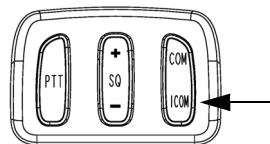


CB Radio / ICOM System

ICOM System


VOX Break Setting

Push COM or ICOM or (+) or (-) on the console panel to adjust the sensitivity setting.

 Tip: Lower settings require less volume to open the intercom. If wind or ambient vehicle noise trigger the VOX to open, set the VOX sensitivity to a higher level.



Press S/E on the left control to exit the screen and return to the main display.

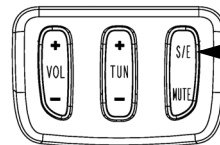

“VOX” will display on the console screen whenever the driver or passenger are communicating over the intercom system.

 


CB/ICOM

CB Radio / ICOM System ICOM System

Driver ICOM Volume

To change settings, enter the mode menu. Press (+) or (-) on the console panel to adjust settings. Press S/E to save and exit.



Tip: Intercom volume can also be adjusted with the hand control when the VOX circuit is open.

Passenger ICOM Volume

The passenger can control rear speaker volume only when the CB radio, ICOM or rear headset speakers are active.



Press (+) or (-) on the passenger control to raise or lower volume.



CB Radio / ICOM System

Headset Receptacles

The driver's headset receptacle is located on the console. The passenger's receptacle (if equipped) is located near the passenger's audio controls.

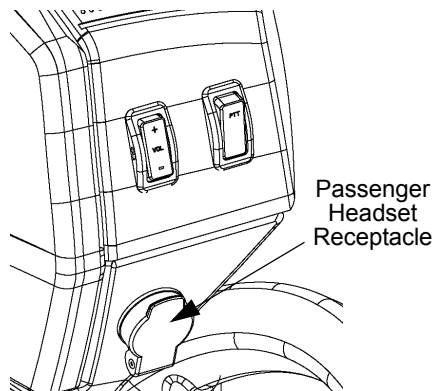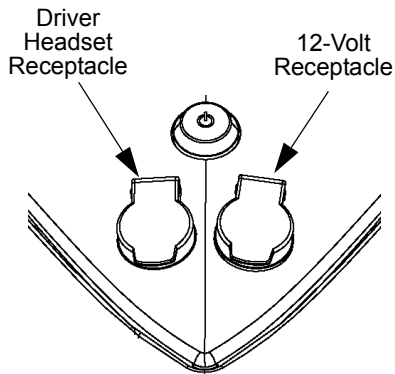


CB/ICOM

AUX / iPod Input Cable Setup

The AUX and iPod input cables are connected to the audio system through a small hole in the left console storage bin. Only one input cable can be connected at any given time.

To use the iPod, connect the iPod input cable.

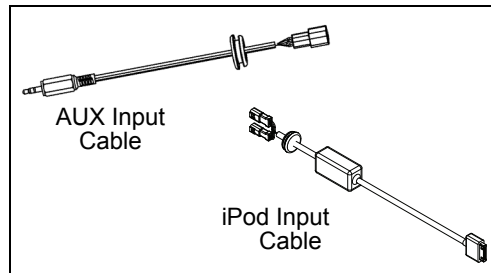


AUX / iPod

AUX / iPod

Input Cable Setup

To change an input cable:

1. Open the left console storage bin.
2. Locate the input cable and sealing grommet at the bottom of the bin.
3. Carefully pull the cable inside the bin.
4. Disconnect the cable from the harness by carefully pushing up on the green tab. **DO NOT ALLOW THE HARNESS TO DROP BACK THROUGH THE HOLE.**
5. Install the desired input cable.
6. Carefully push the sealing grommet back into the hole.

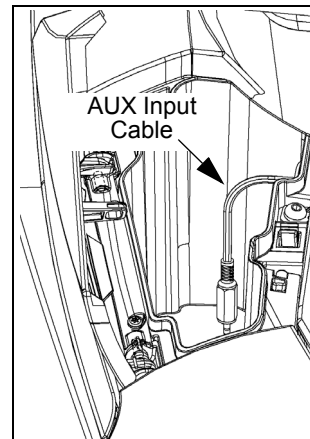


AUX / iPod

AUX / iPod Getting Started

The ignition key must be in the ACC or ON position to use the audio system.

Tip: To prevent battery drain, do not leave the key in the ACC position for long periods. VICTORY recommends using the audio system only when the engine is running.

Press the power button to turn the audio system on. Press and release the S/E button on the left control, or SRC on the console panel, until AUX or iPod is active.

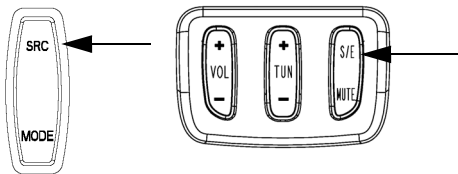

AUX / iPod

AUX / iPod

Getting Started

When AUX is active, the console screen will display “AUX” as the active source.




When iPod is active, the console screen will display “iPod” as the active source and iPod information in the display screen.



To change the mode, press the MODE button on the console repeatedly to toggle to the AUX mode.

Press (+) or (-) on the console panel to set the mode to AUX (for iPod or any other MP3 player use) or to NAV MP3 for navigation unit MP3 player use.

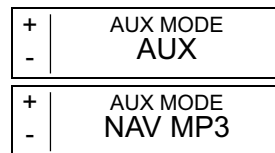


Tip: NAV MP3 mode will override any device connected with an input cable in the left console storage bin.

AUX / iPod

AUX / iPod iPod Playlists

Access the iPod's main music library and user-defined playlists with the console preset buttons.

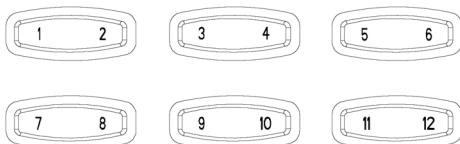

Tip: Generic MP3 players can play music, but cannot be controlled through the audio system (for example, selecting tracks or playlists).

Press and release preset button 1 to access the iPod's main music library.

iPod	Artist
ICOM	Song Title
CB19	My iPod

Press and release preset buttons 2-12 to access the iPod's user-defined playlists.

iPod	Artist
ICOM	Song Title
CB19	My Playlist 3

 
AUX / iPod

iPod Tuning

Press TUNE (+) or TUNE (-) once to move one track forward or backward. Press the button twice (double click) to bring up the track selection screen, then use the TUNE button to move forward and backward through the playlist.

When the desired track is highlighted, press any preset button on the console to select the track.

Tip: To exit the screen without changing tracks, press S/E.



AUX / iPod

AUX / iPod iPod Tuning

Tip: Press and *hold* TUNE (+) or TUNE (-) to fast-forward or fast-reverse the track.

To browse tracks by artist, playlist or album, press and hold any preset button to bring up the selection screen. Press TUNE (+) or TUNE (-) to make a selection.



Press and release any preset button to bring up the items in the selected list. Press TUNE (+) or TUNE (-) to make a selection. Press and release any preset button to start playing the track.



XM Radio

About XM Radio

XM is North America's number one satellite radio company, offering an extraordinary variety of commercial-free music, plus the best in premier sports, news, talk radio, comedy, children's and entertainment programming, broadcast in superior digital audio quality coast to coast.

For more information, or to subscribe, U.S. customers visit xmradio.com or call XM Listener Care at 1-800-XMRADIO (1-800-967-2346); Canadian customers visit xmradio.ca or call XM Listener Care at 1-877-GETXMSR (1-877-438-9677).

XM Radio

XM Ready® Legal

XM monthly service subscription sold separately. XM Mini-Tuner and Home Dock required (each sold separately) to receive XM service. It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate or otherwise make available any technology or software incorporated in receivers compatible with the XM satellite Radio System. Installation costs and other fees and taxes, including a one-time activation fee may apply. All fees and programming subject to change. Channels with frequent explicit language are indicated with an XL. Channel blocking is available for XM radio receivers by calling 1-800-XMRADIO (U.S.residents) and 1-877-GETXMSR (Canadian residents). Only available in the 48 contiguous United States and Canada. ©2007 XM Satellite Radio Inc. All rights reserved.

XM Radio

XM Ready Subscription

Once you have installed the XM Mini-Tuner Home Dock, inserted the XM Mini-Tuner, connected the XM Mini-Tuner Home Dock to your XM Ready audio system, and installed the antenna, you are ready to subscribe and begin receiving XM programming.

There are three places to find your eight character XM Radio ID: On the XM Mini-Tuner, on the XM Mini-Tuner package, and on XM Channel 0.

Record the Radio ID below for reference.

Tip: The XM Radio ID does not use the letters "I", "O", "S" or "F".

--	--	--	--	--	--	--	--

XM Radio

XM Ready Subscription

Activate your XM Satellite Radio service in the U.S. online at <http://activate.xmradio.com> or call 1-800-XMRADIO (1-800-967-2346). Activate your XM Satellite Radio service in Canada online at <https://activate.xmradio.ca> or call 1-877-GET-XMSR (1-877-438-9677). You will need a major credit card. XM will send a signal from the satellites to activate the full channel lineup. Activation normally takes 10-15 minutes, but during peak busy periods you may need to keep your XM Ready audio system on for up to an hour. When you can access the full lineup on your XM Ready audio system you are done.

XM Radio

 
Getting Started

The ignition key must be in the ACC or ON position to use the audio system.


Tip: To prevent battery drain, do not leave the key in the ACC position for long periods. VICTORY recommends using the audio system only when the engine is running.

Press the power button to turn the audio system on.

Press and release the S/E button on the left control, or SRC on the console panel, until the XM radio is the active source.



When the XM radio is active, the console screen will display radio channel, preset number (if applicable), channel name or category, artist, and song title.

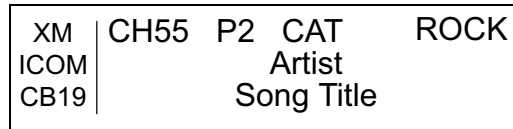


XM Radio

XM Radio

XM Radio Reception

If the XM radio system is not receiving a signal due to being indoors (or any overhead obstruction), “No Signal” appears on the display.

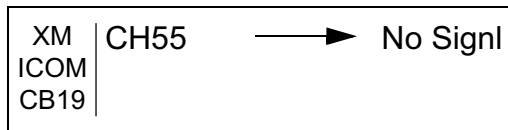

Tip: If the antenna is disconnected, “Antenna” will display.

XM Radio Menu Options

The XM radio system has unique menus that apply only to this system when the XM radio is the active source. Some settings such as bass, treble, fader, etc. apply to both the audio system and the XM radio system.

Menus specific to the XM radio system are:

XM Display (Category or Channel Name)

XM Category (Rock, Country, Traffic, Sports, All Channels, Talk News, etc.)

XM Tune Mode (Seek/Scan)

Tip: XM Tune Mode is unique to the XM radio system.

XM Radio

XM Radio Settings

To access the menus, turn the audio system power on and change the active source to XM Radio.

Press the MODE button on the console repeatedly to toggle to the XM DISPLAY menu.

Press (+) or (-) on the console panel to select CATEGORY or CHANNEL NAME.

+	XM DISPLAY
-	CHANNEL NAME
+	XM DISPLAY
-	CATEGORY

In the CATEGORY mode, the category of a selected station will display in the upper right corner of the screen.

XM	CH55	P2	CAT	ROCK
ICOM			Artist	↑
CB19			Song Title	

In the CHANNEL NAME mode, the name of the selected channel will display.

XM	CH55	CH Name
ICOM		Artist
CB19		Song Title

XM Radio

XM Radio Categories

With XM as the active source, use the MODE button on the console to scroll to the XM Category menu.

Press TUNE (+) or TUNE (-) on the left control to change the category.



Press S/E to save and exit.

XM Radio Channels

Press TUNE (+) or TUNE (-) on the left control to change the channel.

The ALL CHANNELS category must be selected to scroll through every available channel in numerical order.

If a specific category (other than ALL CHANNELS) is selected, only channels within that category will be selected with the TUNE button.

Tip: If a preset button is used to tune a station that is not within the currently active category and the TUNE button is used to change the channel, it will tune stations within the previously selected category, not within the category of the preset station.

Navigation MP3 Introduction

Please read this manual and the GARMIN ZUMO 660 NAV MP3 information provided with your player to become familiar with all unit features and operation.

NAV MP3

The audio integration kit must be installed to enable outputs from the NAV MP3 (such as navigation instructions or user-loaded MP3 media files) to play through the headsets or speakers. The unit is fully functional without the kit installed, but there will be no interface with the vehicle's audio system.

NAV MP3

NAV MP3

Navigation MP3 Operation Tips


- Signals coming from the NAV MP3 unit will override any source of the motorcycle's audio system to ensure navigation instructions are communicated when needed. The signals will also override the MP3 player.
- You must set volume levels within the NAV MP3 unit. Volume settings in the motorcycle's audio system control NAV MP3 volume, but navigation instructions may be difficult to hear if volume levels in the unit are set too low. See the GARMIN information for setting procedures. The recommended initial settings are 100/80/80: MASTER 100%, NAVIGATION 80%, MEDIA 80%.
- Pause or stop the MP3 player to switch to radio.
- To switch from radio to MP3 player, change the active source to AUX. For best sound quality, change the AUX mode setting on the radio from AUX to NAV MP3 when listening to the MP3 player. Audio works in the AUX setting, but the levels are not optimized.
- If playing MP3 files from the GARMIN ZUMO 660 unit, you may need to turn down the "media volume" on the GARMIN unit to avoid distortion.

Changing to NAV MP3 Mode

The ignition key must be in the ACC or ON position to use the audio system.

Press the power button to turn the audio system on.


Press and release the S/E button on the left control, or SRC on the console panel, until AUX is the active source.

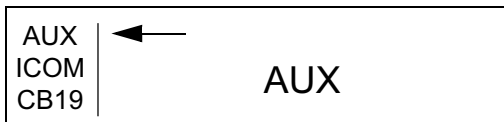

NAV MP3

To change the mode, press the MODE button on the console repeatedly to toggle to the AUX mode.

Press (+) or (-) on the console panel to set the mode to AUX (for iPod or any other MP3 player use) or to NAV MP3 for navigation unit MP3 player use.

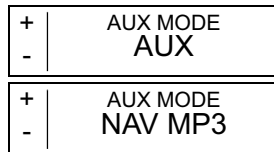

NAV MP3

Index

A

ABS	73-75
ABS, How to Respond	15
Accelerating	120
Accessories, How to Choose	24-25
Air Filter	149
Anti-Lock Brake System	73-75
Anti-Lock Brake System Response	15
Apparel for Riding	22-23
Audio Controls	267
Audio Input Cable Setup	300-301
Audio Memory Presets	276
Audio Mode Menus	277-286
Audio Source Selection	273-275

A

Audio System	263
Audio System Power	270-271
Audio Tuning	275
Audio Volume	271-272
Audio Volume, Passenger	272

B

Battery

Charging	199
Installation	198
Removal	196-197
Safety Warnings	195
Brake Fluid Level, Front Brake	97

Index

B

Brake Fluid Level, Rear Brake	99
Brake Fluid, Front Brake	184-185
Brake Fluid, Rear Brake	183
Brake Lever Inspection	96
Brake Lever, Front Brakes	76-77, 181
Brake Light Bulb Replacement	210-211
Brake Line Inspection	100
Brake Pad Inspection	101
Brake Pedal Adjustment	80
Brake Pedal Inspection	98
Brake Pedal, Rear Brakes	78, 181

B

Brakes

Anti-Lock Brake System	73-75
Brake Fluid Precautions	182
Brake Lever Inspection	96
Brake Line Inspection	100
Brake Pad Inspection	101
Brake Pedal Inspection	98
Disc Inspection/Cleaning	186
Front Brake Fluid	97, 184-185
Front Brake Lever	76-77, 181
Hoses/Connections	187
Linked Braking System	73

Index

B

Rear Brake Fluid	99, 183
Rear Brake Pedal	78, 181
Braking	121
Break-In Maintenance	135
Break-In, Engine	110-111
Breather Hose Inspection	170

C

Cargo Distribution	20-21
Cargo Information Label	37
Cargo Safety	20-21
CB Channels	290
CB Headset ENT Mode	282
CB Headset Volume Controls	281
CB Radio	288

C

CB Radio Frequencies	295
CB Radio Mode, Local/Distant	294
CB Radio Volume, Driver	293
CB Radio Volume, Passenger	293
Check Engine Indicator	57
Citizens Band (CB) Radio	268-269
Cleaning Products	227
Clock, Resetting	60
Clutch Cable Lubrication, Mechanical	180
Clutch Fluid, Hydraulic	176-177
Clutch Inspection, Hydraulic	103
Clutch Inspection, Mechanical	104
Clutch Lever	69
Clutch Lever Freeplay, Mechanical	178
Clutch Lever Lubrication, Hydraulic	175

Index

C

Clutch Lever Lubrication, Mechanical	179
Compliance, Vehicle	31
Component Locations	41-46
Cruise Control Cable Inspection	175
Cruise Control Operation	122-125

D

Display Units, Standard/Metric	58-59
--	-------

Drive Belt

Cleaning	159
Condition	150
Rear Wheel Alignment	158
Tension Adjustment	157
Tension Data	152
Tension Inspection	153-156
Wear Analysis	151

D

Drive Belt Inspection	106
Drive Belt/Rear Wheel Alignment	158
Driving Lamp Switch	63

E

Electrical Precautions	216-217
Elevating the Motorcycle	218
Emergency Flashers	63
Emission Control System Inspection	169
Engine Break-In	110-111
Engine Compression Test	194
Engine Identification Number	39
Engine Starter Switch	71
Engine Stop/Run Switch	70
Engine, Starting	114-115
Engine, Stopping	126

Index

E

Equipment Modifications	25
Error Codes, Engine	57
Exhaust Safety	28-29
Exhaust System Inspection	194

F

Fastener Inspection	108, 201
Fastener Torques	219
Fluid Change, Engine Oil	146-148
Fluid Level	
Engine Oil	92-93
Front Brake Fluid	97, 184-185
Hydraulic Clutch Fluid	176-177
Rear Brake Fluid	99, 183

F

Fork Inspection	167
Fuel Door Lock	49
Fuel Gauge	51
Fuel Handling Safety	28-29
Fuel Level	94
Fuel Recommendation	262
Fuel System Inspection	169
Fuel System, Priming	113
Fueling	112
Fuse Boxes	214
Fuse Replacement	215

Index

G

Gasoline Handling Safety	28-29
Gear Shift Pedal	79, 188
Gear Shift Pedal Adjustment	80
Gear Shifting	116-119
Glove Compartment	82
Gross Vehicle Weight Rating (GVWR)	32-33

H

Hand Grip Heater Switch	63
Hazard Switch	63
Headlamp Aim Adjustment	212-213
Headlamp Bulb Replacement	208
Headlamp Switch	66
Headset Receptacles	299
Headset Use	288
Horn Switch	66

I

Identification Number Record	40
Idle Inspection	170
Ignition Key	48
Ignition Key Number	39
Ignition Lock	48
Ignition Switch	47-49
Ignition Switch Lubrication	200
Indicator Lamps	52-55
Information Labels	34-37
Instrument Cluster	50
Intercom System	288, 296-298
iPod Playlists	304
iPod Tuning	305-306

Index

K

Key Number	39
Key, Ignition	48

L

Labels, Information	34-37
Labels, Safety	34-37
Leather, Rubber and Vinyl Care	238-239

Lights

Brake Light Bulb Replacement	210-211
Headlamp Aim Adjustment	212-213
Headlamp Bulb Replacement	208
Running Light Bulb Replacement	210
Taillight Bulb Replacement	210-211
Turn Signal Bulb Replacement	209-211

L

Linked Braking System	73
Lock Lubrication	200
Locking Saddlebags	84
Locking the Fuel Door	49
Locking the Steering	48
Locking the Trunk	84

M

Maintenance

Break-In Maintenance	135
Major Maintenance	135
Periodic Maintenance	136-141
Maintenance for Safety	30-31
Maintenance Log	142-145

Index

M

Maintenance Safety	132-133
Maintenance, Required	30-31
Major Maintenance	135
Metric Display	58-59
MFD	56-61
Mirror Adjustment	64
Mode Button	65
Modifications, Vehicle	25
MP3 Player	315-316
Multi-Function Display	56-61

N

NAV/MP3 Mode, Changing	317
Navigation MP3	315-316
NECI Label	36
Noise Emission Control Information Label	36

O

Odometer	61
Oil Change, Engine Oil/Filter	146-148
Oil Level, Engine Oil	92-93
Oil Recommendation	262

P

Panel Installation, Street Trim	207
Panel Removal, Street Trim	206
Panel Removal, Windshield Trim	205
Parking	127
Parking on a Slope	127
Parking on a Soft Surface	128
Parking the Motorcycle	17
Passenger Safety	18-19
Pedal Adjustment	80
Periodic Maintenance	136-141

Index

P

Polished Aluminum Care	233
Polishing Paint and Chrome	234-235
Polishing the Motorcycle	233-237
Polishing, Premium	236-237
Protectants, Leather, Rubber, Vinyl	238-239
Push-to-Talk (PTT)	291

R

Radio Frequencies	263
Radio Frequencies, CB	295
Rear Axle Inspection	165-166
Refueling Safety	28-29
Reverse Operation	129-131
Riding Safety	8-16
Road Testing	134, 218
Running Light Bulb Replacement	210

S

Saddlebag Lock	84
Saddlebags, Using Safely	26
Safety Defects, Reporting to NHTSA	38
Safety Gear	22-23
Safety Labels	34-37
Safety Symbols	7
Safety While Servicing	132-133
Seat Heater Switches	64
Seat Removal/Installation	202
Service Manual	226
Service Procedure Safety	132-133
Shift Points	119
Shifting Gears	116-119
Sidestand	83
Sidestand Inspection	107
Sidestand Lubrication	201

Index

S

Signal Words	7
Spark Plugs	192-193
Speedometer	51
Squelch	292
Starter Interlock Switch	69
Steering Head Inspection	168
Steering Inspection	105
Steering Lock	48
Storage	
Battery Care	242
Clean/Protect the Motorcycle	241
Engine Protection	242
Fuel Stabilizer	241
Maintenance During	243
Motorcycle Cover	243

S

Storage

Removal From	244
Rodents	243
Storage Area	240
Tire Inflation	241
Street Trim Panel Installation	207
Street Trim Panel Removal	206
Suspension Adjustment, Rear	160-164
Suspension Inspection, Front	105, 165-167
Suspension Inspection, Rear	105
Swing Arm Inspection	165-166
Switches	
Console Switches	62-63
Driving Lamp Switch	63
Emergency Flashers	63

Index

S

Switches

Engine Starter Switch	71
Engine Stop/Run Switch	70
Hand Grip Heater Switch	63
Hazard Switch	63
Headlamp Switch	66
Horn Switch	66
Ignition Switch	47-49
Ignition Switch Lubrication	200
Mode Button	65
Seat Heater Switches	64
Starter Interlock Switch	69
Turn Signal Switch	68
Windshield Adjustment Switch	67

T

Tachometer	51
Taillight Bulb Replacement	210-211
Testing After Servicing	134, 218
Throttle Cable Freeplay	172-173
Throttle Cable Lubrication	174
Throttle Control Grip	72
Throttle Control Inspection	171
Throttle Freeplay	102
Throttle Inspection	102
Tilt Sensor	65
Tire Information Label	37

Index

T

Tires	95, 190-191
Condition	190
Pressure	191
Recommended Pressure	191
Recommended Type	191
Tire Condition	95
Tire Pressure	95
Tread Depth	190
Wheel Inspection	189
Tool Kit	86
Trademarks	3
Transporting the Motorcycle	27
Trim Panel Installation, Street	207
Trim Panel Removal, Street	206
Trim Panel Removal, Windshield	205

T

Trip Odometer	61
Troubleshooting	220-225
Trunk Door Lock	84
Trunk Installation	204
Trunk Removal	203-204
Trunk, Using Safely	26
Turn Signal Bulb Replacement	209-211
Turn Signal Switch	68

V

VECI Label	35
Vehicle Emission Control Information Label	35
Vehicle Identification Number Label	34
VICTORY Cleaning Products	227
VIN Label	34
Volt Meter	51

Index

W

Washing the Motorcycle	228-232
Weather Band (WX)	287
Weight Capacity	32-33
Wheel Inspection	189
Windshield Adjustment	81
Windshield Adjustment Switch	67
Windshield Trim Panel Removal	205

X

XM Radio Categories	314
XM Radio Channels	314
XM Radio Introduction	307
XM Radio Menu Options	312
XM Radio Reception	312
XM Ready Legal	308
XM Ready Subscription	309-310